


KV-C2911D

RM-673

SERVICE MANUAL

AEP Model
Australian Model
Chassis No. SCC-B14W-A

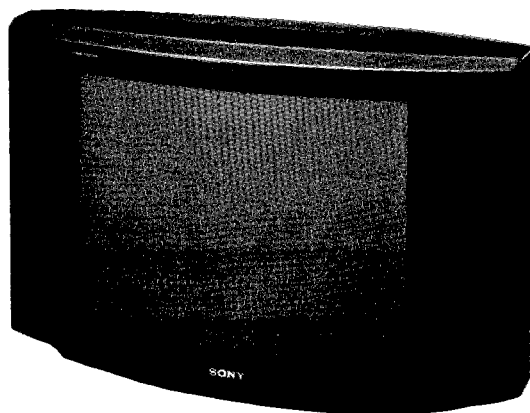

AE-1 CHASSIS

Note: The service manual for RM-673 has been issued separately.

MODELS OF THE SAME SERIES

KV-C2911D	
KV-C25TD (AEP ONLY)	
KV-X2521D (AEP ONLY)	

SPECIFICATIONS

Television system	CCIR B, G and H
Color system	PAL, SECAM, NTSC _{3.58} , NTSC _{4.43}
Stereo system	German two-carrier system
Channel coverage	(AEP) VHF channels E2-E12 UHF channels E21-E69 Cable TV channels S01-S03, S1-S41 (A total of up to 30 preselected channels) (AUS) VHF channels 1-11 UHF channels 28-63
Picture tube	Trinitron tube 110-degree deflection Approx. 72.4 cm (29 inches) (Approx. 68 cm picture measured diagonally)
Inputs	21-pin connector : CENELEC Standard 21-pin connector : RGB input unconnected S-VIDEO Y : 1 V _{p-p} ±3 dB 75 Ω C : 0.3 V _{p-p} ±3 dB 75 Ω

Outputs	Headphones jack : stereo minijack External speaker terminals : 2-pin DIN Audio output jack : phonojack output level dependent upon TV setting
Power consumption	107.2 Wh
Dimensions	Approx. 854 × 555 × 510 mm (w/h/d)
Weight	Approx. 51.4 kg
Supplied accessories	RM-673 Remote Commander (1) IEC designation R6 batteries (2)
Audio output	10 W + 10 W (music power)

Design and specifications are subject to change without notice.



TRINITRON® COLOR TV
SONY®

TABLE OF CONTENTS

<u>Section</u>	<u>Title</u>	<u>Page</u>	<u>Section</u>	<u>Title</u>	<u>Page</u>
1. GENERAL			5. DIAGRAMS		
1-1.	First of All	3	5-1.	Circuit Boards Location	20
1-2.	Connecting Other Equipment	3	5-2.	Schematic Diagrams	20
1-3.	Function of Controls	5	5-3.	Printed Wiring Boards	26
1-4.	Viewing Teletext	7	5-4.	Semiconductors	44
2. DISASSEMBLY			6. EXPLODED VIEWS		
2-1.	Rear Cover Removal	8	6-1.	Rear Cover	45
2-2.	Chassis Assy Removal	8	6-2.	Picture Tube	46
2-3.	J ₁ , A and V Boards Removal	8			
2-4.	KS and B Boards Removal	9	7. ELECTRICAL PARTS LIST		47
2-5.	Service Position	9			
2-6.	Picture Tube Removal	9			
3. SET-UP ADJUSTMENTS					
3-1.	Beam Landing	10			
3-2.	Convergence	11			
3-3.	Focus	13			
3-4.	White Balance	14			
4. CIRCUIT ADJUSTMENTS					
4-1.	B Board Adjustments	15			
4-2.	A Board Adjustments	16			
4-3.	D Board Adjustment	16			
4-4.	J ₁ Board Adjustments	17			
4-5.	V Board Adjustments	17			
4-6.	Sub Adjustments	18			

SECTION 1 GENERAL

Note) The layout, etc., will be slightly different from the operating instructions packed with the units.

1-1. FIRST OF ALL

- 1 Connect the aerial to the Γ socket on the rear of the set.
This socket receives the standard 75-ohm aerial plug.
- 2 Plug in the set.
- 3 Tune in the available channels.

Use the buttons inside the panel. To open the panel, push the center.

To tune in all channels automatically :

- 1 Press $\rightarrow$ (preset).
- 2 Press PROGR to select the program position from which tuning is to start.
- 3 Press $\rightarrow$ (auto programming).

The channels will be tuned in and memorized in consecutive positions, beginning from the program position selected in step 2.

When tuning has been completed, the set returns to the position where tuning began.

To tune in a channel in any desired program position.
(e. g. the position which the same number as the channel) :


- 1 Press $\rightarrow$ (preset).
- 2 Press PROGR to select the desired program position.
- 3 Press C (clear).
- 4 Press $\oplus$ (search) repeatedly until the desired channel appears.
- 5 Repeat steps 2 to 4 for all channels, if required.
- 6 Press $\rightarrow$ (preset) again.

If the set is to be used in an area with poor reception, preset the program numbers between 1 and 19 for TV program use.


To have the unused program positions skipped when PROGR+ or PROGR- is pressed

- 1 Press $\rightarrow$ (preset).
- 2 Press PROGR to select the unused position.
- 3 Press C (clear).
- 4 Repeat steps 2 and 3 for all unused position.
- 5 Press $\rightarrow$ (preset) again.

On-screen display while tuning

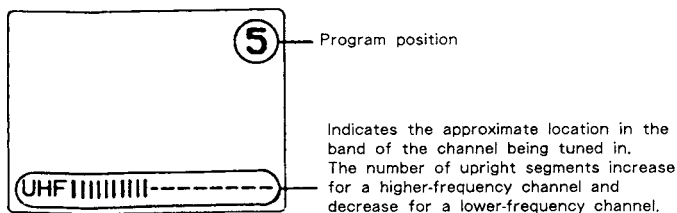


- 4 Insert two R6 batteries checking the correct polarity.

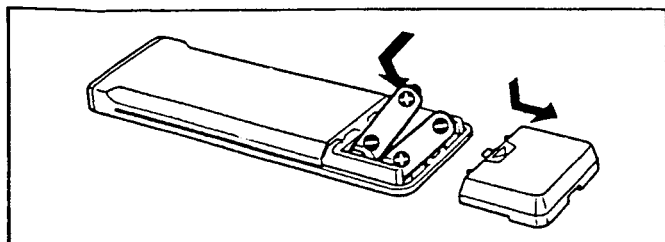

1-2. CONNECTING OTHER EQUIPMENT

Connectors on rear set

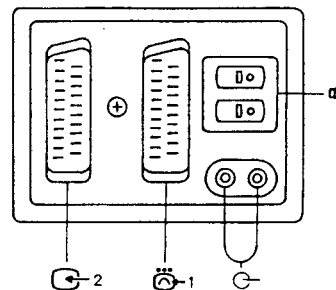

L/G/S	Left external speaker terminal (2-pin DIN)	Connect to external speakers. The TV speakers will be disconnected.
R/D/D	Right external speaker terminal (2-pin DIN)	speakers 8-16 Ω
R/D/D	Right audio output jack (phono jack)	Connect to audio equipment. When only using the phono-jacks, two loudspeaker plugs, (DIN 41529) should be inserted into the external speaker terminals so that the TV speaker output is switched off.
L/G/S	Left audio output jack (phono jack)	
G-1	21-pin connector (CENELEC standard)	Connect to a VTR micro computer, etc. The picture of the TV channel being received is always output. The picture of G-2 can be watched while recording a TV program with the VTR connected to G-1.
G-2	21-pin connector (without RGB input)	Connect to second VTR. The picture displayed on the screen is always output. The picture of G-1 can be recorded with the VTR connected to G-2 while monitoring the picture.

VTR operation using the supplied Commander

Remote operation of the VTR is limited to the features and functions of the VTR. For further details, refer to the VTR manual.

When watching a video with the VTR connected to the Γ connector, set the channel for the video to the program number 0 or any empty channel between 20 and 29.

Note


Move the VTR away from the TV, if the picture or sound is distorted.

21 pin connector (1, 2)

Pin No.	1	2	Signal	Signal level
1	○	○	Audio output B (right)	Standard level : 0.5 Vrms Output impedance : Less than 1 k ohm*
2	○	○	Audio input B (right)	Standard level : 0.5 Vrms Input impedance : More than 10 k ohms*
3	○	○	Audio output A (left)	Standard level : 0.5 Vrms Output impedance : Less than 1 k ohm*
4	○	○	Ground (audio)	
5	○	○	Ground (blue)	
6	○	○	Audio input A (left)	Standard level : 0.5 Vrms Input impedance : More than 10 k ohms*
7	○	●	Blue input	0.7 V $\pm$ 2 dB, 75 ohms, positive
8	○	○	Function select (AV control)	High state (9.5–12 V) : Part mode Low state (0–2 V) : TV mode Input impedance : More than 10 k ohms Input capacitance : Less than 2 nF
9	○	○	Ground (green)	
10	○	○	Open	
11	○	●	Green/Green with sync input	Green signal : 0.7 V $\pm$ 2 dB, 75 ohms, positive Green with sync signal : 1 V $\pm$ 2 dB, 75 ohms, positive
12	○	○	Open	
13	○	○	Ground (red)	
14	○	○	Ground (blanking)	
15	○	●	Red input	(Same as Pin 7)
16	○	●	Blanking input (Ys signal)	High state (1–3 V) Low state (0–0.4 V) Input impedance : 75 ohms
17	○	○	Ground (video output)	
18	○	○	Ground (video input)	
19	○	○	Video output	1 V $\pm$ 2 dB, 75 ohms, positive Sync : 0.3 V (–3, $\pm$ 10 dB)
20	○	○	Video input	1 V $\pm$ 2 dB, 75 ohms, positive Sync : 0.3 V (–3, $\pm$ 10 dB)
21	○	○	Common ground (plug, shield)	

* at 20 Hz–20 kHz ○ connected ● unconnected (open)

1-3. FUNCTION OF CONTROLS

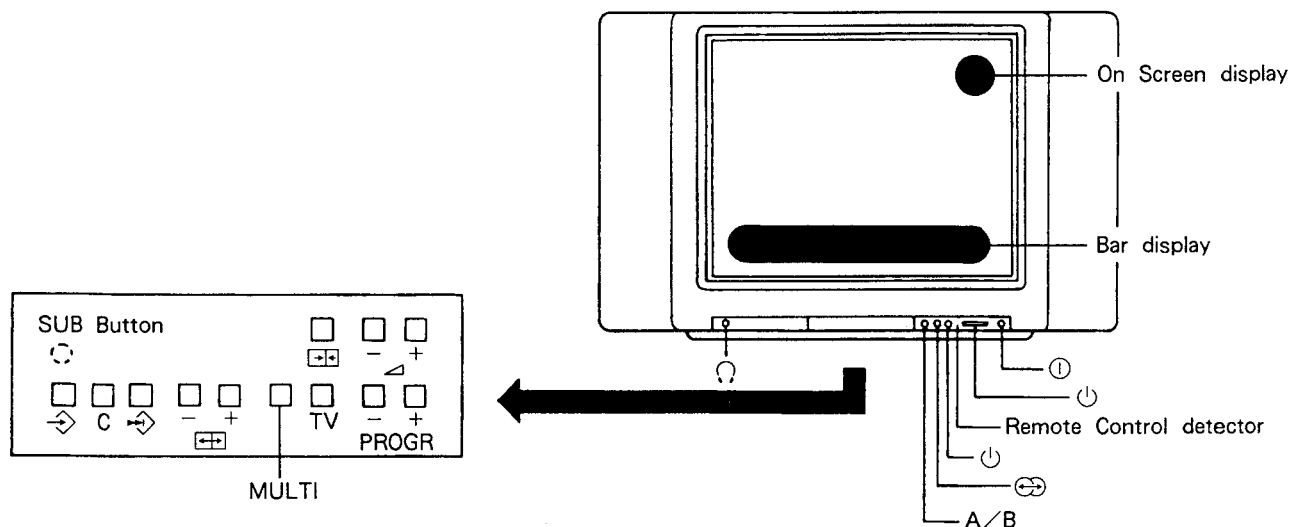

On the set

On-screen display

Indicates program numbers and input modes.

Bar display

Indicates the level of volume, color, brightness, contrast, bass, treble and balance.

Note on function.

When the volume is at the minimum setting the balance function will not operate.

 Power switch

To cut off the mains power completely, press this switch. Depress the power switch fully to ensure correct operation of the set.

Note

To ensure correct operation, push the switch in fully.

 standby indicator

Lights up brightly when the set is in the standby mode.

Note

If the main power is turned off when in standby mode, the standby indicator will take 2 to 6 seconds to go off.

 space sound indicator

Lights up when on the Remote Commander is pressed.

A/B indicators

One of them lights during bilingual broadcast. (Choose A or B with the Remote Commander.)

Both light during stereo broadcast. In AV mode, A lights for left channel, B for right channel, or A and B for both channels.

Remote control detector

Point the Remote Commander towards this detector.


Inside the panel

 headphones jack (stereo minijack) **SEARCH buttons**

Press to fine tune a weak channel manually, if required. When is pressed, the indicator (AFT) goes off and the AFT circuit does not function on the selected channel. To restore the AFT circuit on this channel, press (AFT) so that the indicator lights up.

 AFT button and indicator

Normally, press so that the indicator lights up. The AFT circuit automatically fine tunes the channel for the best possible picture.

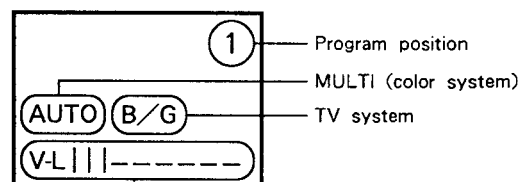 volume buttons**PROGR+, PROGR- program scan buttons****On-screen display during presetting**

Indicates the approximate location in the band of the channel being tuned in.


"V-L" : low VHF band, "V-M" : high VHF band, "V-H" : Hyper band, "UHF" : UHF band.

The number of upright segments increases for a higher-frequency channel.

Each time MULTI button (COLOR SYSTEM) is pressed, the following indications appear in this order.

AUTO ; NTSC3.58 ;

Normally set to the AUTO position. The available color system is selected automatically.

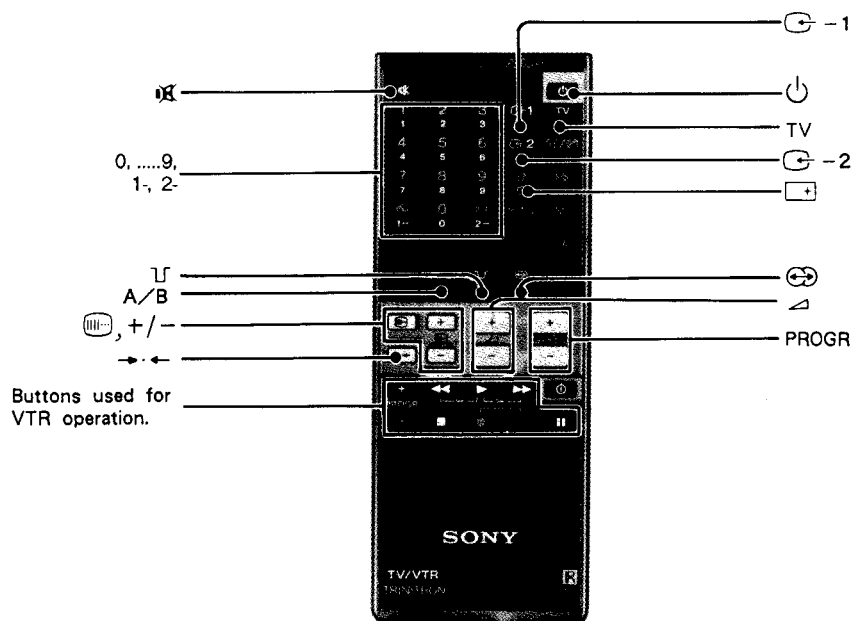

RM-673

On the Remote Commander

To operate the Commander, point it toward the remote control detector.

mute button

0, ..., 9, 1-, 2- buttons

To tune in to:
program 15, press 1- and 5.
program 25, press 2- and 5.

A/B button

Press to select the language in a bilingual broadcast, or to select the channel in AV mode.

+ / - analogue select buttons

Press .
● will appear on the screen. Adjust by pressing + or -.
Press again and adjust ● (color), then ☆ (brightness), ♪ (bass), ♪ (treble) and ≡ (balance).

→ • ← reset button

Press to reset color, contrast and brightness to factory-set levels.

standby button

Press to change to the standby mode. Use this button to turn off the set for short periods of time.
To turn on the set, press TV or the program number; there will be a slight delay before the picture is restored.

If the main power is turned off when in standby mode, the standby indicator will take 2 to 6 seconds to go off.

TV button

Press to change to the TV mode from standby, G-1 input or teletext modes.

1 input button

Press to view the input picture coming in through the 1 connector.
“G-1” lights up on the screen.
Press TV or the program number to return to the TV mode.

2 input button

Press to view the input picture coming in through the 2 connector.
“G-2” lights up on the screen.
Press TV or the program number to return to the TV mode.

on-screen display button

Press to make the display appear on the screen.
Press again to make it disappear.

loudness button

Press to emphasize high and low notes.

space sound button

Press to obtain special acoustic effects.

volume buttons

PROGR program scan buttons

Note

Buttons not referred to on this page or next page do not operate.

1-4. VIEWING TELETEXT

To view the teletext service, use the Remote Commander. The buttons for teletext operation are indicated in green.

Operation

- 1 Select the TV channel for the desired teletext service.
- 2 Press (TEXT/MIX) to display the teletext service. Once has been pressed, the TV channel cannot be changed.
- 3 Key in the three digits for the desired page using the number buttons. If an error is made, complete the three-digit sequence by keying in any digit. Then re-enter the correct page number. The requested teletext page is displayed.

To return to the TV mode, press TV on the remote commander.

The teletext service can be displayed directly from the standby mode, by pressing .

To receive the teletext service of a different TV channel

- 1 Press TV to return to the TV mode.
- 2 Select the desired TV channel.
- 3 Press .

Note

To receive the teletext service accurately, keep inside the panel switched on during teletext operation.

To display the index page

Press (INDEX).

If the necessary signal is not being broadcast, page 100 is displayed.

To access the next or preceding page

Press (PAGE+) or (PAGE-).

To superimpose the teletext display on the TV picture

Press twice from TV mode.

Press again to return to the TEXT display.


To suppress the teletext display so that the TV picture is displayed

Press (TEXT CL).

This button can be operated from both the TEXT and MIX displays.

To prevent a teletext page (subpage) from being updated / changed

Press (HOLD). The HOLD symbol appears at the top of the screen.

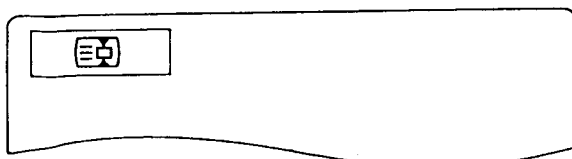

To resume normal teletext reception, press .

To enlarge the teletext display

Press .

Press once to enlarge the upper half of the display; press again to enlarge the lower half of the display; press again to return to the normal display.

To reveal concealed information such as the answers to a quiz

Press (REVEAL).


Press again to conceal the answers.

To adjust the contrast of the teletext display

When in teletext mode, adjust by using the + or - keys adjacent to the key.

To watch the TV program while waiting for a requested page to be displayed

- 1 Request the new page.
- 2 Press to watch the TV program. The requested page number appears at the top left of the screen. When the requested page has been captured, the page number is displayed in the top left hand corner of the screen.

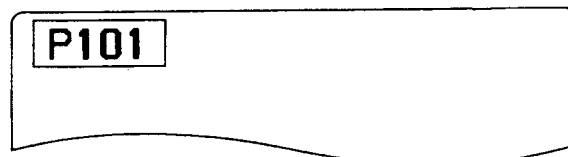

To view this page, press .

To have a requested page displayed at a pre-determined time

- 1 Request a time coded page (e. g. alarm page).
- 2 Press (TP ON). "T****" will appear at the bottom of the screen.



- 3 Enter your request time with the number buttons, using four digits. For example, 07:30.




To watch the TV program until the requested time, press . At the requested time, the page number will be displayed at the bottom of the screen.

To view this page, press .


To cancel the request, first ensure that the teletext page is displayed, then press (TP OFF).

SECTION 2 DISASSEMBLY


2-1. REAR COVER REMOVAL

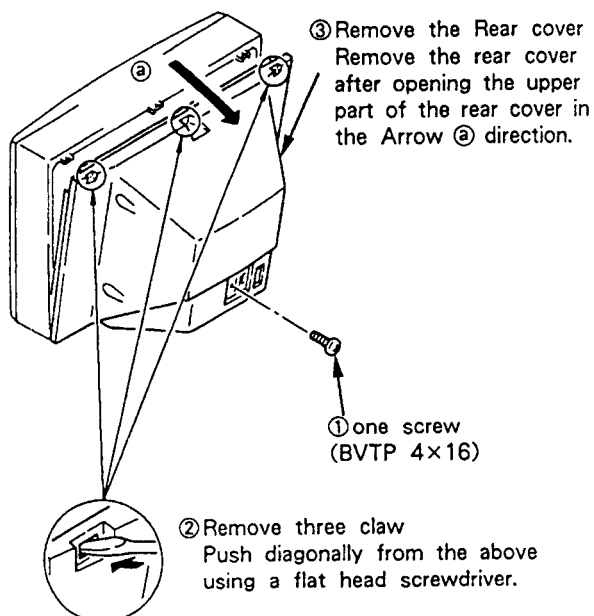


2-2. CHASSIS ASSY REMOVAL

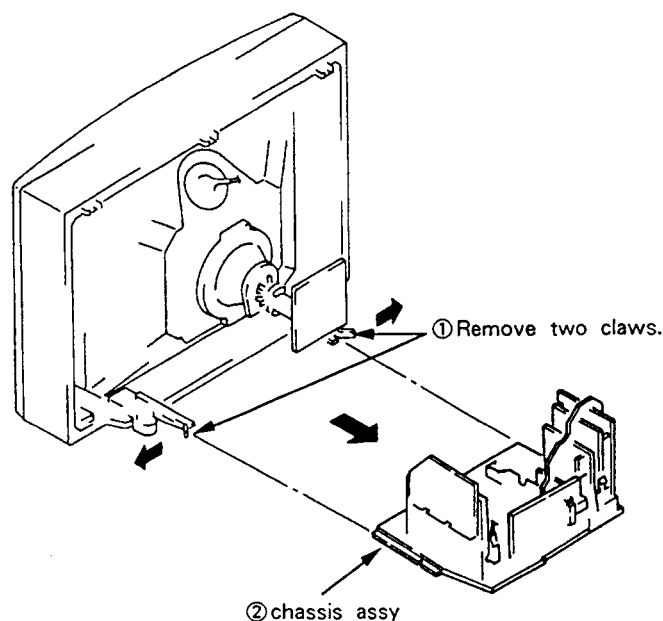

2-3. J1, A AND V BOARDS REMOVAL

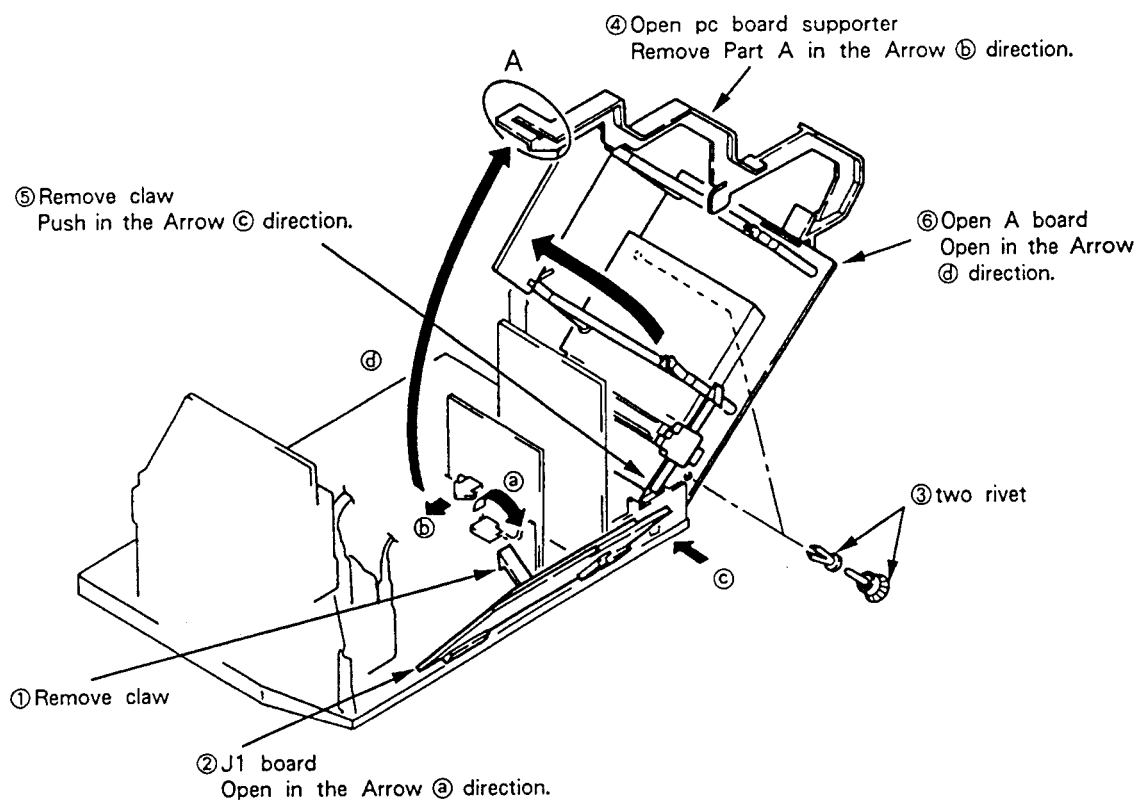


2-4. KS AND B BOARDS REMOVAL

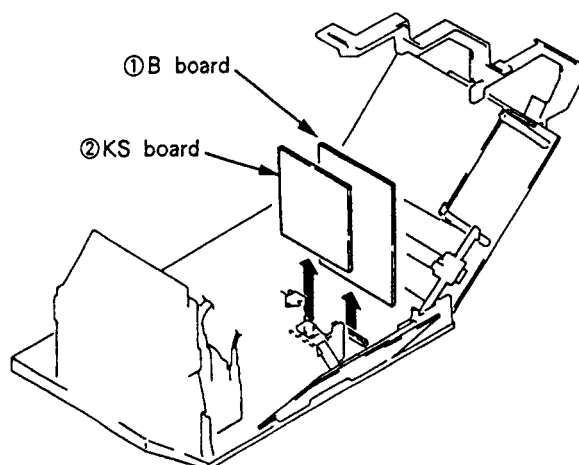


2-5. SERVICE POSITION

Hook on the inner side of the cabinet.

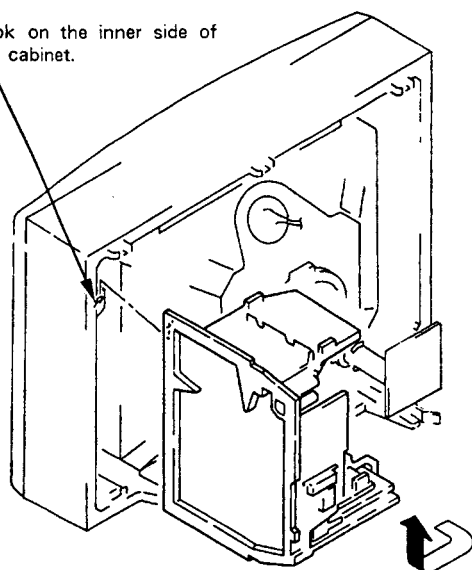


2-6. PICTURE TUBE REMOVAL

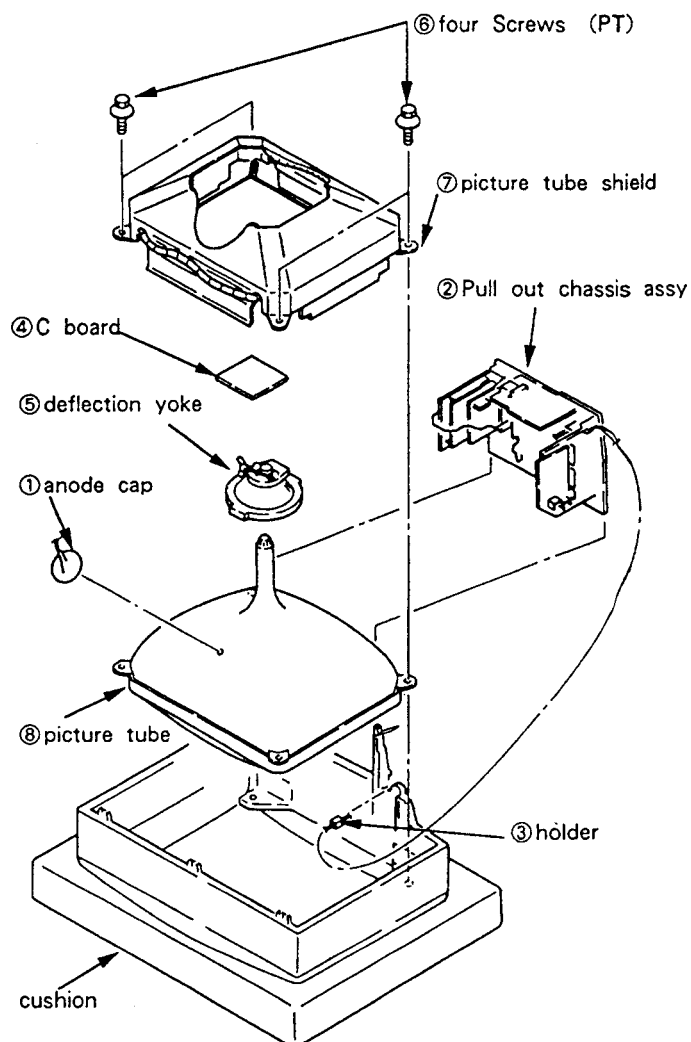


• Removing Procedures


- ① Turn up one side of the rubber cap in the direction indicated by the arrow ①.

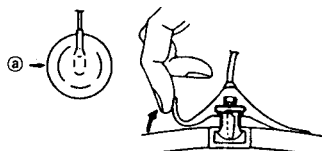

- ② Using a thumb, pull up the rubber cap firmly in the direction indicated by the arrow ②.

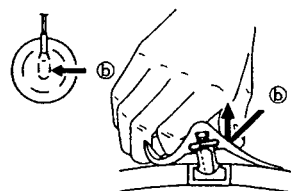

- ③ When one side of the rubber cap is separated from the anode button, the anode cap can be removed by turning up the rubber cap and pulling up it in the direction of the arrow ③.

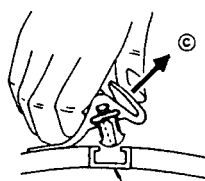

Anode button

SECTION 3

SET-UP ADJUSTMENTS

- The following adjustments should be made when a complete realignment is required or a new picture tube is installed.
- These adjustments should be performed with rated power supply voltage unless otherwise noted.

The control and switch below should be set as follows unless otherwise noted :

- CONTRAST control 80% (or Normal by Commander)
- ☼ BRIGHTNESS control 50%

Perform the adjustments in order as follows :

1. Beam Landing
2. Convergence
3. Focus
4. White Balance

Note : Test Equipment Required.

1. Color Bar Pattern Generator
2. Degausser
3. DC Power Supply
4. Digital multimeter
5. Oscilloscope

Preparation

- Set the side of the unit with the PICTURE TUBE so that it faces east or west in order to reduce the influence of external magnetic force.
- Turn the power switch for the unit ON and erase the magnetic force using a degausser.

3-1. BEAM LANDING

1. Position neck ass'y as shown in Fig. 3-1
2. Input a raster signal with the pattern generator.
CONTRAST normal
BRIGHTNESS normal
3. Turn the raster signal of the pattern generator to red.
4. Move the deflection yoke backward, and adjust with the purity control so that red is in the center and blue and green are at the sides, evenly. (Fig. 3-2 to 3-4)
5. Move the deflection yoke forward, and adjust so that the entire screen becomes red. (Fig. 3-2)
6. Switch over the raster signal to blue and green and confirm the condition.
7. When the position of the deflection yoke is determined, tighten it with a deflection yoke mounting screw.
8. When landing at the corners is not right, adjust by using the magnet. (Fig. 3-5)

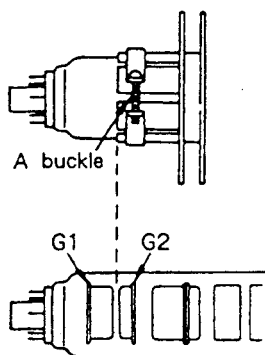


Fig. 3-1

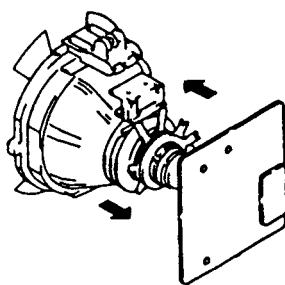


Fig. 3-2

Fig. 3-3

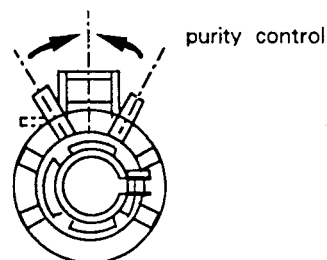


Fig. 3-4


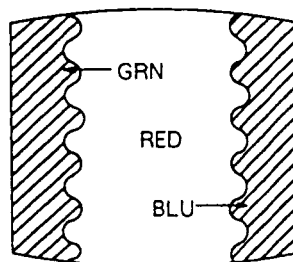


Fig. 3-5

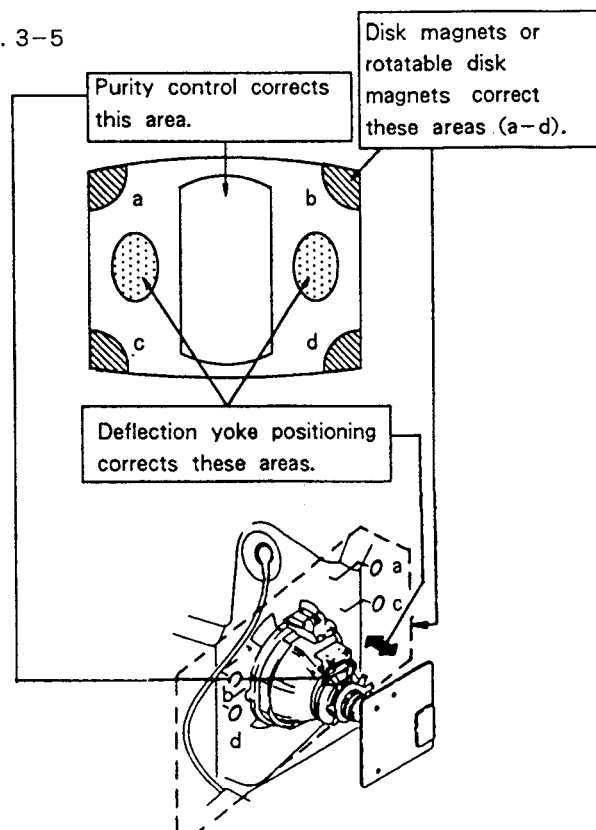


3-2. CONVERGENCE

Preparation :






- Before starting, perform FOCUS, H. SIZE and V. SIZE adjustments.
- Set BRIGHTNESS control to minimum.
- Feed in the dot pattern.

(1) Horizontal and Vertical Static Convergence

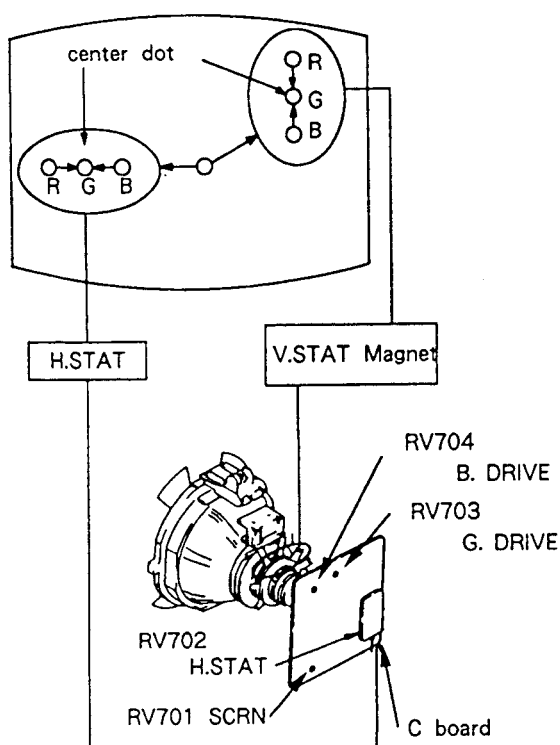

1. Adjust H. STAT VR to coincide red, green and blue dots on the center of screen. (Horizontal movement)
 2. Adjust V. STAT magnet to coincide red, green and blue dots on the center of screen. (Vertical movement)
 3. If the red, green and blue dots do not coincide on the center of screen with H. STAT VR, perform horizontal convergence adjustment using H. STAT VR and V. STAT magnet as shown below. (In this case, H. STAT VR and V. STAT magnet effect each other.)
- Tilt the V. STAT magnet and adjust static convergence to open or close the V. STAT magnet.

4. When the V. STAT magnet is moved in the direction of arrow ㉓ and ㉔, red, green and blue dots move as shown below.

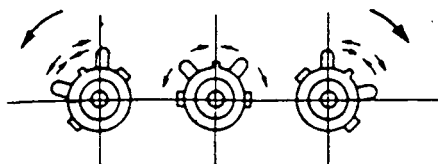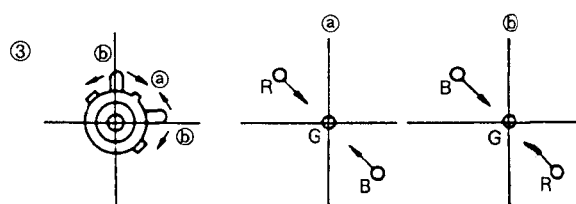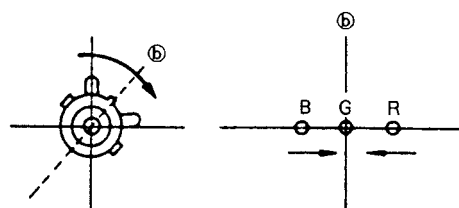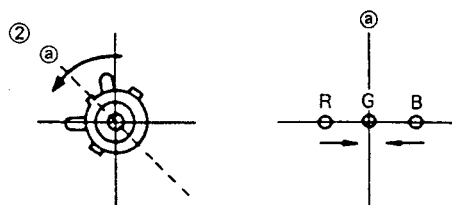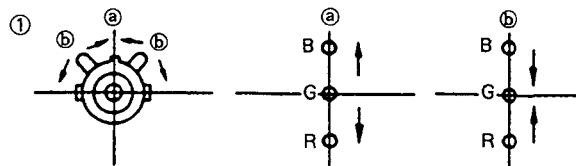


If the red and blue dots do not coincide with green dot, perform following steps.

Move BMC magnet (a) to correct insufficient H. static convergence.

Rotate BMC magnet (b) to correct insufficient V. static convergence.

In either case, repeat Beam Landing Adjustment.

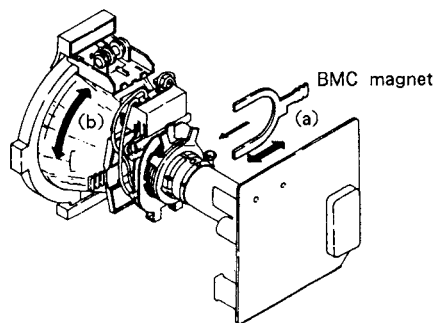


(2) Dynamic Convergence Adjustment

Preparation :



- Before starting, perform Horizontal and Vertical Static Convergence Adjustment.
1. Slightly loosen deflection yoke screw.
 2. Remove deflection yoke spacers.

3. Move the deflection yoke for best convergence as shown below.
4. Tighten the deflection yoke screw.
5. Install the deflection yoke spacers.

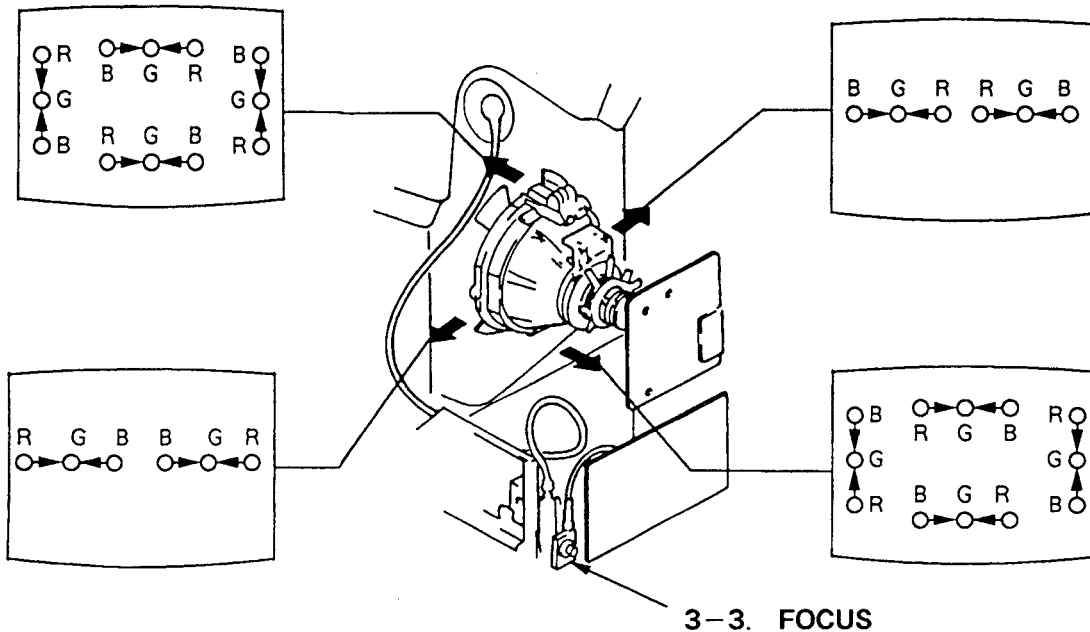

Adjust FOCUS so that the whole screen is in best focus.

(3) Screen-corner Convergence

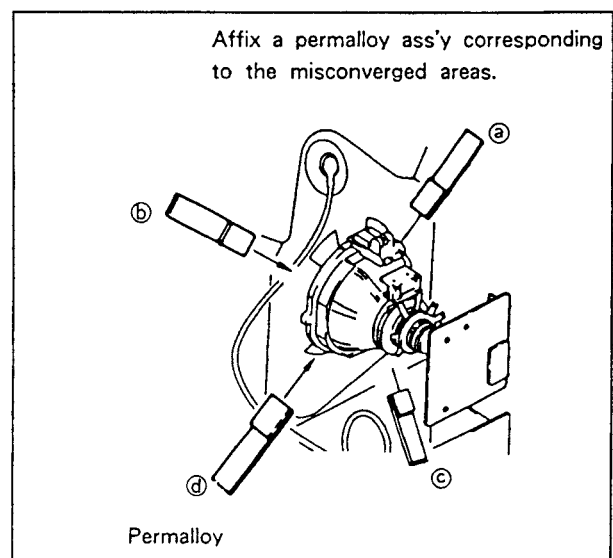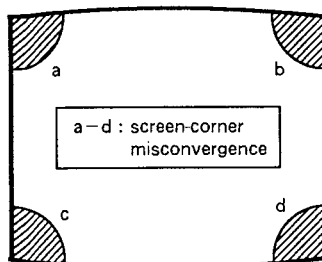

3-4. WHITE BALANCE

(Screen (G2) Setting)

1. Input dot signals from the pattern generator.
2. Set the picture BRIGHTNESS control to the minimum level.
3. Apply 170 V dc to the cathodes of R, G, and B from an external power source.
4. While watching the picture, adjust the G2 volume (RV701) immediately before the fly-back line disappears.

(White Balance Adjustment)


1. Input all-white signals from the pattern generator.
2. Adjust the BRIGHTNESS and COLOR controls to the standard level.
3. Adjust the white balance using RV704 (B DRIVE) and RV703 (G DRIVE).

In the following adjustments, the CONTRAST COLOR and BRIGHTNESS controls are set to normal unless otherwise specified.

SECTION 4

CIRCUIT ADJUSTMENTS

4-1. B BOARD ADJUSTMENTS

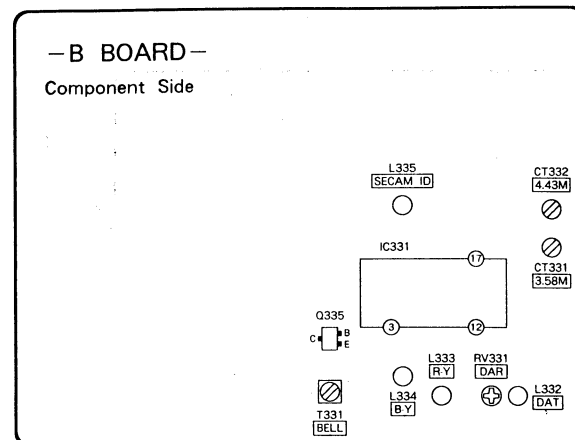

REF OSC 3.58 MHz Adjustment (CT331)


1. Input a NTSC 3.58 MHz COLOR BAR pattern.
2. Short circuit between pin ⑩ of IC331 and ground.
3. Adjust CT331 to obtain color synchronization.
4. Remove the jumper wire from IC331.

REF OSC 4.43 MHz Adjustment (CT332)


1. Input a NTSC 4.43 MHz COLOR BAR pattern.
2. Short circuit between pin ⑩ of IC331 and ground.
3. Adjust CT332 to obtain color synchronization.
4. Remove the jumper wire from IC331.

1H DELAY LINE Adjustment (L332, RV331)

1. Input a PAL COLOR BAR pattern.
2. Connect the oscilloscope to pin ③ (B-Y) of IC331 and observe the waveform of the H block on the oscilloscope.
3. Adjust L332 to minimize the double waveform outline.

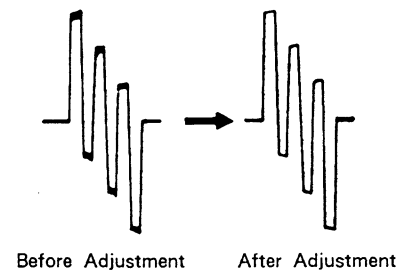

4. Input a TEST COLOR BAR pattern.
5. Rotate the RV331 control and adjust till the ANTI-PAL of the waveform matches the 0 level.

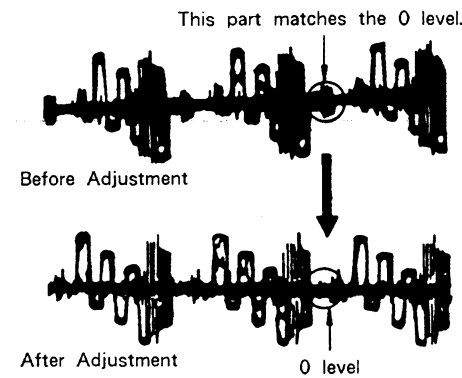


6. L332 and RV331 affect each other. Repeat till the conditions of both meet.

SECAM ID Adjustment (L335)

1. Input a SECAM COLOR BAR pattern.
2. Connect a Digital Multimeter to pin ⑩ of IC331.
3. Adjust L335 so that the indicator goes up to the maximum.


BELL FILTER Adjustment (T331)

1. Input a SECAM COLOR BAR pattern.
2. Connect an oscilloscope to the Q335 emitter.
3. Adjust T331 so that the waveform becomes flat.

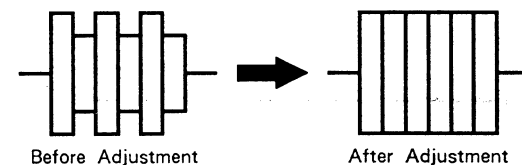


SECAM DISCRI Adjustment (L333, L334)

1. Input a SECAM COLOR BAR pattern.
2. Connect an oscilloscope to pin ① of IC331.
3. Adjust L333 so that white and black parts of the waveform of pin ① become 0 level.
4. Connect an oscilloscope to pin ③ of IC331.
5. Adjust L334 so that white and black parts of the waveform of pin ③ become 0 level.

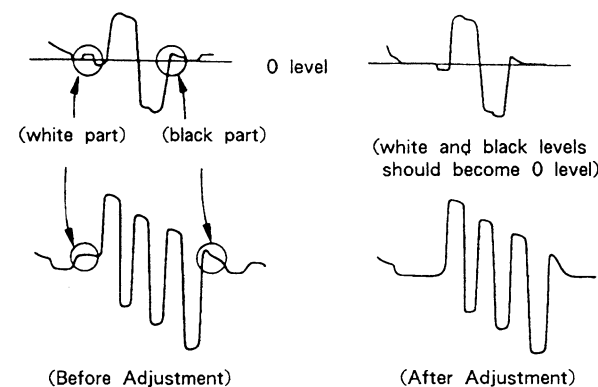

4-2. A BOARD ADJUSTMENT

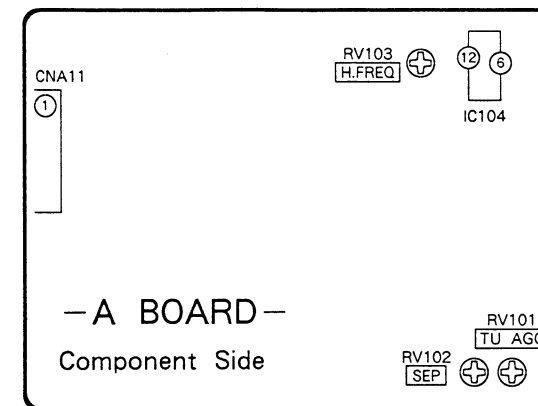

TUNER AGC Adjustment (RV101)

1. Tune in an off-air signal.
2. Adjust RV101 so that snow-noise and cross-modulation just disappear from the picture.


STEREO SEPARATION Adjustment (RV102)

1. Input stereo signals. (L-CH 1 kHz, R-CH 400 Hz)
2. Check the stereo indicator.
3. Connect an oscilloscope to pin ① (L) of CNA11 through band pass filter of 1 kHz.
4. Adjust RV102 so that 1 kHz voltage goes down to the minimum.

H. FREQ. Adjustment (RV103)

1. Input a PAL COLOR BAR pattern.
2. Short circuit between pin ⑩ of IC104 and ground.
3. Connect a frequency counter to pin ⑥ of IC104 through a probe of 10:1.
4. Adjust RV103 so that H. frequency becomes 15.625 ± 50 Hz.

4-3. D BOARD ADJUSTMENTS

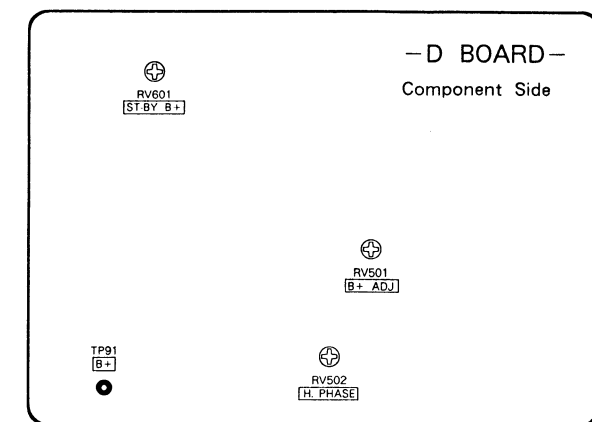

B+ Adjustment (RV501)


1. Connect a Digital Multimeter to TP91.
2. Adjust RV501 so that the voltage becomes 135 ± 0.2 V.

ST-BY B+ Adjustment (RV601)

1. Set up ⏻ standby (Remote Commander) mode.
2. Connect the Digital Multimeter to TP91.
3. Adjust RV601 so that the voltage becomes 135 ± 3 V.
4. Release the ⏻ standby (Remote Commander) mode.

H. PHASE Adjustment (RV502)

1. Input a PAL TEST COLOR BAR pattern.
2. Set the CONTRAST and BRIGHTNESS controls to the standard positions.
3. Set RV1508 (H. CENT) to the mechanical center position.
4. Connect an oscilloscope to pin ⑩ (SPC OUT) of IC501.
5. Rotate RV502 and adjust Block T to $5.1 \pm 0.1 \mu\text{s}$.

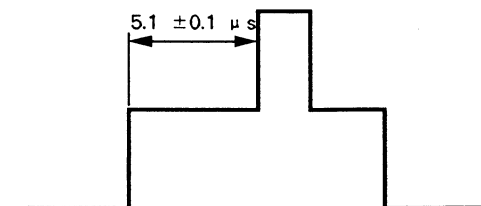

ENT



ry-noise and cross-
n the picture.

t (RV102)

kHz, R-CH 400 Hz)

① (L) of CNA11
kHz.


voltage goes down

tern.

IC104 and ground.
to pin ⑥ of IC104

frequency becomes

4-3. D BOARD ADJUSTMENTS

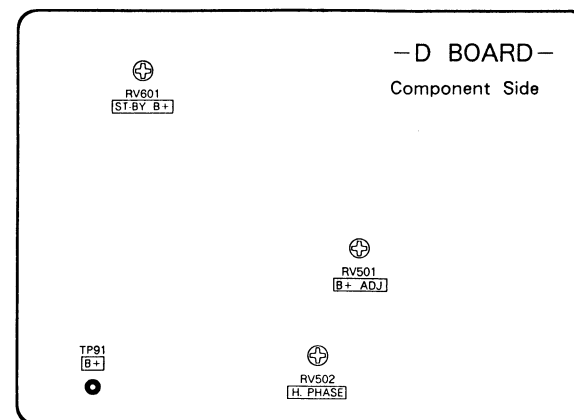**B+ Adjustment (RV501)**


1. Connect a Digital Multimeter to TP91.
2. Adjust RV501 so that the voltage becomes 135 ± 0.2 V.

ST-BY B+ Adjustment (RV601)










1. Set up U standby (Remote Commander) mode.
2. Connect the Digital Multimeter to TP91.
3. Adjust RV601 so that the voltage becomes 135 ± 3 V.
4. Release the U standby (Remote Commander) mode.

H. PHASE Adjustment (RV502)


1. Input a PAL TEST COLOR BAR pattern.
2. Set the CONTRAST and BRIGHTNESS controls to the standard positions.
3. Set RV1508 (H. CENT) to the mechanical center position.
4. Connect an oscilloscope to pin ⑩ (SPC OUT) of IC501.
5. Rotate RV502 and adjust Block T to $5.1 \pm 0.1 \mu\text{s}$.

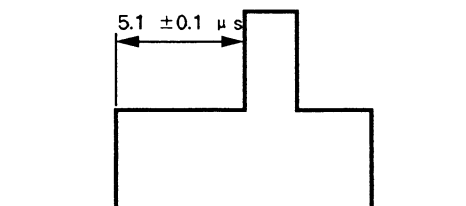

4-4. J1 BOARD ADJUSTMENTS

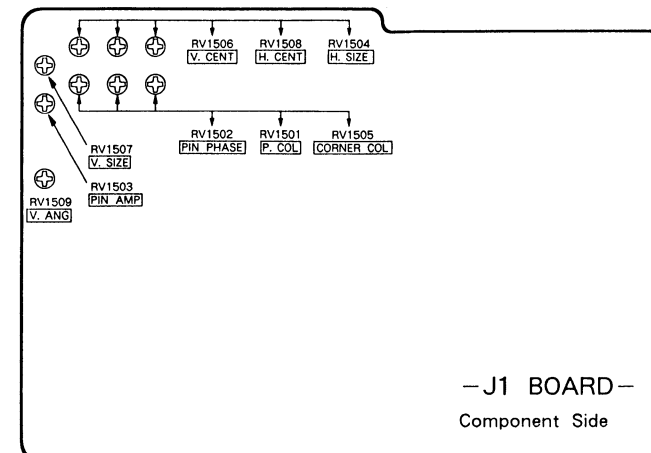RV1508
H. CENT (HORIZONTAL CENTER)RV1504
H. SIZE (HORIZONTAL SIZE)RV1506
V. CENT (VERTICAL CENTER)RV1507
V. SIZE (VERTICAL SIZE)RV1509
V. ANGLE (VERTICAL ANGLE)RV1503
PIN AMP (PINCUSHION AMPLIFIER)RV1502
PIN PHASE (PINCUSHION PHASE)RV1501
PIN COR (PINCUSHION CORRECT)RV1505
CORNER COR (CORNER CORRECT)

4-5. V BOARD ADJUSTMENTS

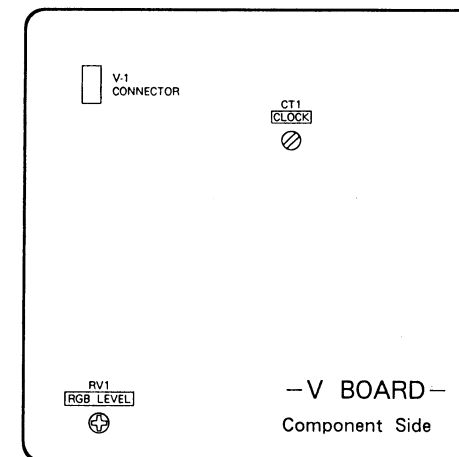**Clock Adjustment (CT01)**

1. Disconnect the V-1 connector.
2. Set up the TELE TEXT mode.
3. Adjust CT01 to stop pictures from scrolling.

RGB Level Adjustment (RV01)

1. Set PICTURE to maximum.
2. Adjust RV01 till the RGB output becomes 0.65 V.

4-6. SUB ADJUSTMENTS

SUB BRIGHTNESS Adjustment


1. Receive and display a TEST COLOR BAR pattern.
2. Push $\rightarrow \cdot \leftarrow$ on the remote commander to invoke the normal state.
3. Turn off the power supply.
4. Turn on the power supply while pushing the SUB button. (SUB mode is invoked.)
5. Reduce the CONTRAST to the minimum level.
6. Adjust the BRIGHTNESS control until the 0 IRE of the gray scale becomes completely cut off, and the 20 IRE becomes barely luminous.
7. Push the AFT button. (SUB mode is cleared.)



Where no TEST COLOR BAR pattern is available.

1. Display a COLOR BAR pattern.
 2. Push $\rightarrow \cdot \leftarrow$ on the remote commander to invoke the normal state.
Set the COLOR to normal mode.
- Steps 3 - 5 are the same as above.
6. 20 IRE is close to blue, so adjust the BRIGHTNESS control till blue is faintly luminous.
 7. Same as Step 7 above.
 8. Push $\rightarrow \cdot \leftarrow$ on the remote commander to invoke the normal state.
- * When Step 4 is executed correctly, S (SUB mode) is displayed at the upper right of the display. As S is displayed only for 30 seconds, perform the adjustment within 30 seconds, or repeat from Step 4.


SUB COLOR Adjustment

1. Display a COLOR BAR pattern.
2. Push $\rightarrow \cdot \leftarrow$ on the remote commander to invoke the normal state.
3. Turn off the power supply.
4. Turn on the power supply while pushing the SUB button. (SUB mode is invoked.)
5. Adjust the COLOR control until the B out (pin ② of CNC72 connector on C board) waveform becomes as shown below.
6. Push the AFT button. (SUB mode is cleared.)

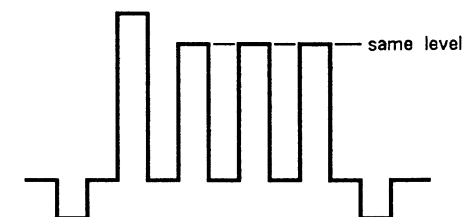

RV1501
PIN COR (PINCUSHION CORRECT)RV1505
CORNER COR (CORNER CORRECT)

4-5. V BOARD ADJUSTMENTS

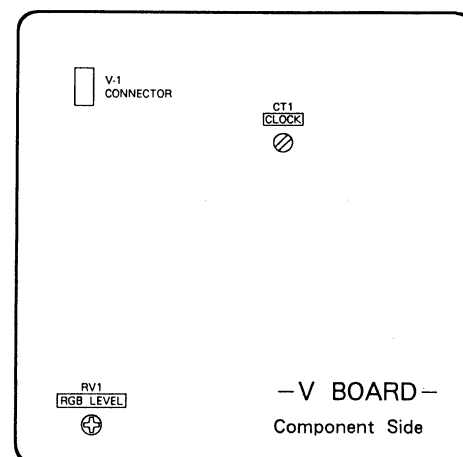

Clock Adjustment (CT01)

1. Disconnect the V-1 connector.
2. Set up the TELE TEXT mode.
3. Adjust CT01 to stop pictures from scrolling.

RGB Level Adjustment (RV01)

1. Set PICTURE to maximum.
2. Adjust RV01 till the RGB output becomes 0.65 V.

4-6. SUB ADJUSTMENTS

SUB BRIGHTNESS Adjustment


1. Receive and display a TEST COLOR BAR pattern.
2. Push →•← on the remote commander to invoke the normal state.
3. Turn off the power supply.
4. Turn on the power supply while pushing the SUB button. (SUB mode is invoked.)
5. Reduce the CONTRAST to the minimum level.
6. Adjust the BRIGHTNESS control until the 0 IRE of the gray scale becomes completely cut off, and the 20 IRE becomes barely luminous.
7. Push the AFT button. (SUB mode is cleared.)

Where no TEST COLOR BAR pattern is available.


1. Display a COLOR BAR pattern.
 2. Push →•← on the remote commander to invoke the normal state.
Set the COLOR to normal mode.
 - Steps 3 - 5 are the same as above.
 6. 20 IRE is close to blue, so adjust the BRIGHTNESS control till blue is faintly luminous.
 7. Same as Step 7 above.
 8. Push →•← on the remote commander to invoke the normal state.
- * When Step 4 is executed correctly, S (SUB mode) is displayed at the upper right of the display. As S is displayed only for 30 seconds, perform the adjustment within 30 seconds, or repeat from Step 4.

SUB COLOR Adjustment

1. Display a COLOR BAR pattern.
2. Push →•← on the remote commander to invoke the normal state.
3. Turn off the power supply.
4. Turn on the power supply while pushing the SUB button. (SUB mode is invoked.)
5. Adjust the COLOR control until the B out (pin ② of CNC72 connector on C board) waveform becomes as shown below.
6. Push the AFT button. (SUB mode is cleared.)

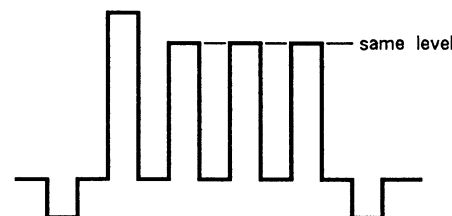


- * When Step 4 is executed correctly, S (SUB mode) is displayed at the upper right of the display. As S (SUB mode) is displayed only for 30 seconds, perform the adjustment with 30 seconds, or repeat from Step 4.

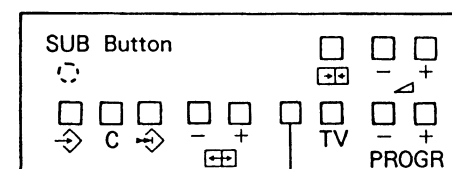

MULTI

SECTION 5
DIAGRAMS

5-1. CIRCUIT BOARDS LOCATION

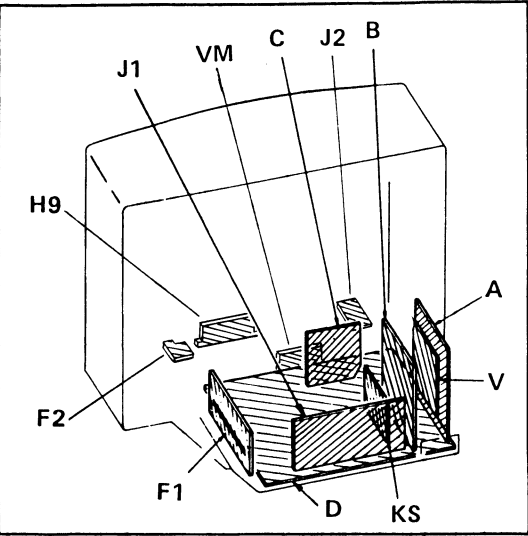

- Note :**
- All capacitors are in μF unless otherwise noted.
 $\text{pF} : \mu\text{F} \ 50 \text{ WV}$ or less are not indicated except for electrolytics.
 - Indication of resistance, which does not have one for rating electrical power, is as follows.

Pitch : 5 mm
Rating electrical power 1/4W

- All resistors are in ohms.
- : nonflammable resistor.
- : fusible resistor.
- Δ : internal component.
- : panel designation.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- All voltages are in V.
- Readings are taken with a 10 M Ω digital multimeter.
- Readings are taken with a PAL color-bar signal input.
- : adjustment for repair.
- Voltage variations may be noted due to normal production tolerance.
- : B+ bus.
- : B- bus.
- : signal path.

Reference information



RESISTOR	: RN	METAL FILM
	: RC	SOLID
	: FPRD	NONFLAMMABLE CARBON
	: FUSE	NONFLAMMABLE FUSIBLE
	: RW	NONFLAMMABLE WIREWOUND
	: RS	NONFLAMMABLE METAL OXIDE
	: RB	NONFLAMMABLE CEMENT
COIL	: LF-8L	MICRO INDUCTOR
CAPACITOR	: TA	TANTALUM
	: PS	STYROL
	: PP	POLYPROPYLENE
	: PT	MYLAR
	: MPS	METALIZED POLYESTER
	: MPP	METALIZED POLYPROPYLENE
	: ALB	BIPOLAR
	: ALT	HIGH TEMPERATURE
	: ALR	HIGH RIPPLE

Note: The components identified by shading and mark are critical for safety. Replace only with part number specified.


5-2. SCHEMATIC DIAGRAMS

1
2
3
4
5
6
7
8
9
10
11
12


A
B
C
D
E
F
G
H
I
J

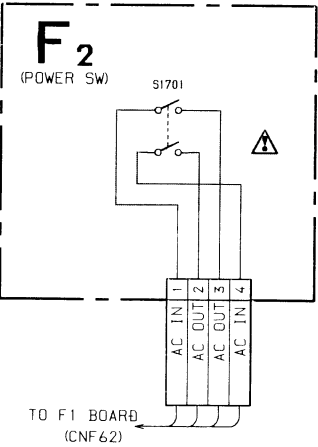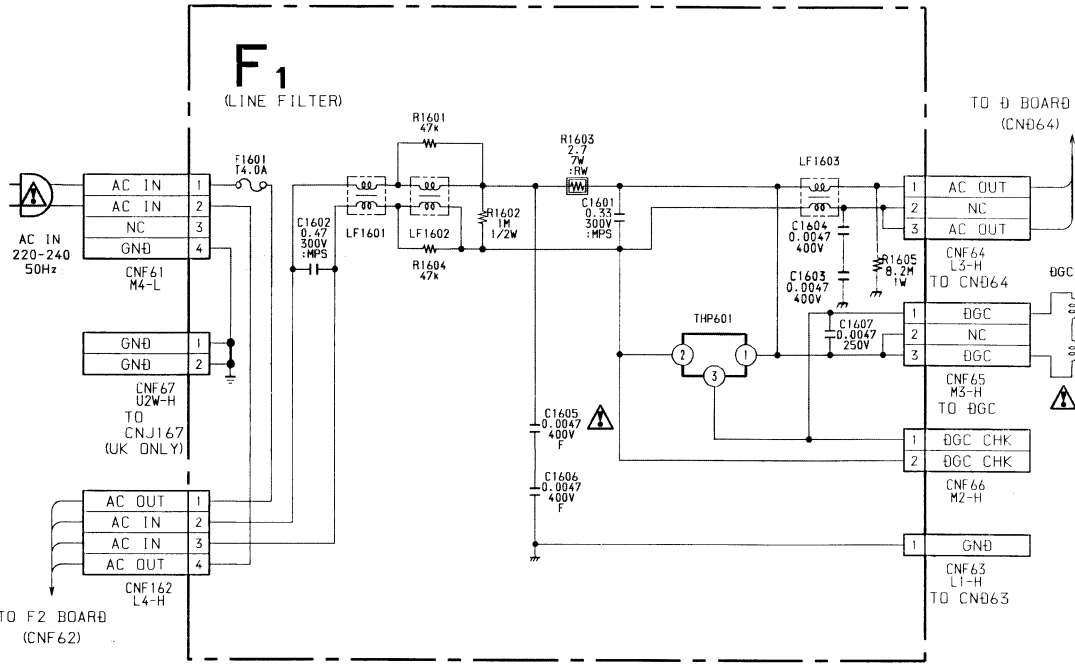


A BOARD IC101 TDA3541

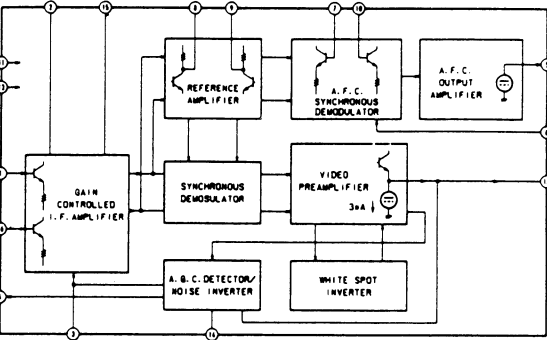


A BOARD IC102 TDA2556

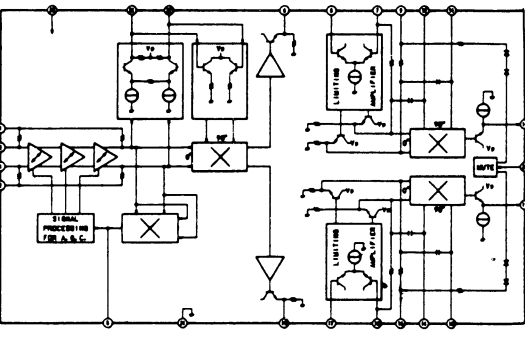


A BOARD IC103 TDA6600

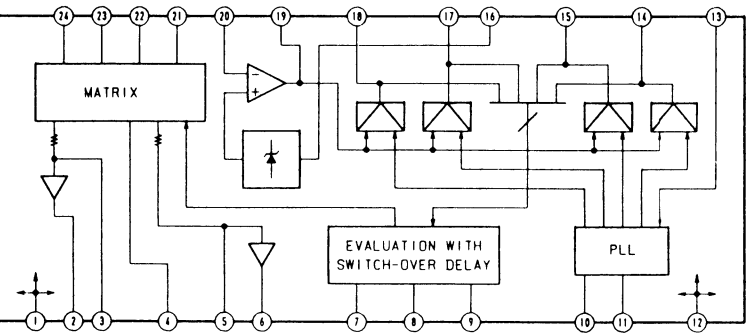

• A BOARD WAVEFORM

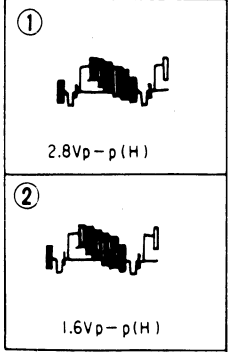


TO D BOARD
CND84

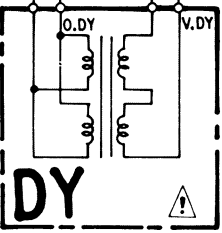




BAND SWITCHING

terminal	pin7	pin8	pin9	pin10
low VHF	+12V	open	open	open
high VHF	open	+12V	open	open
hyperband	open	open	+12V	open
UHF	open	open	open	+12V

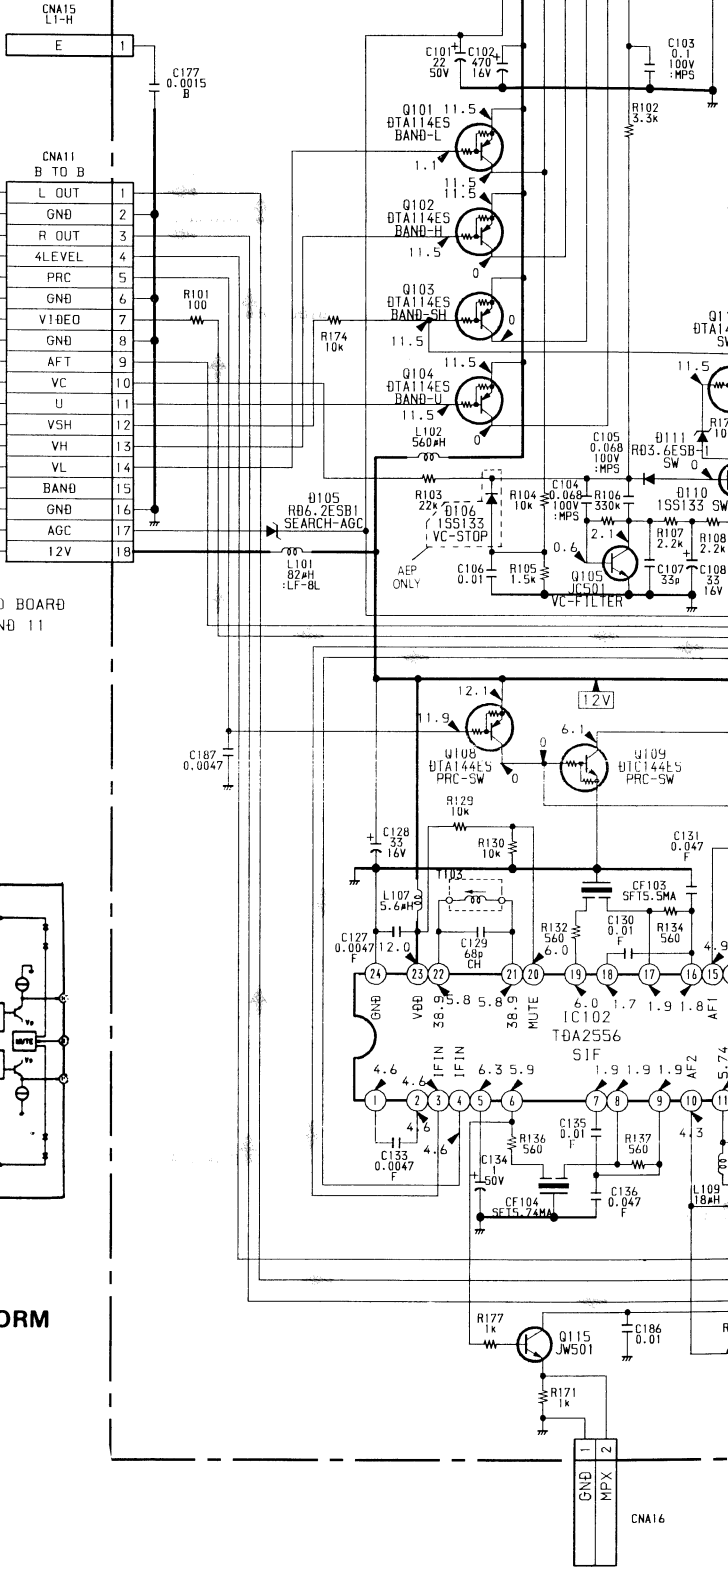

terminal	pin7	pin8	pin9	pin10
low VHF	+12V	open	open	open
high VHF	open	+12V	open	open
hyperband	open	open	+12V	open
UHF	open	open	open	+12V

TO D BOARD
CND84

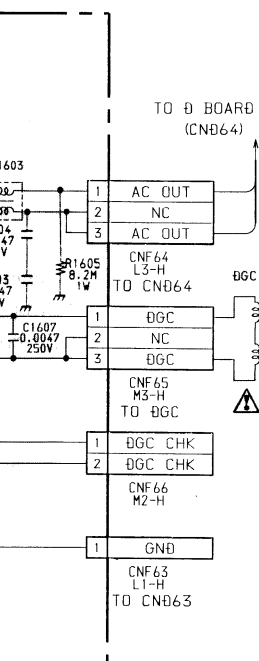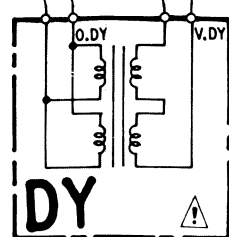

CNA15
L1-H

C177
0.0015
B

CNA11
B TO B

L OUT

GND

R OUT

4LEVEL

PRC

GND

VIBEO

GND

AFT

VC

U

VSH

VH

VL

BAND

GND

AGC

12V

TO D BOARD
CND 11

C187
0.0047

C188
0.01

C189
0.01

C190
0.01

C191
0.01

C192
0.01

C193
0.01

C194
0.01

C195
0.01

C196
0.01

C197
0.01

C198
0.01

C199
0.01

C200
0.01

C201
0.01

C202
0.01

C203
0.01

C204
0.01

C205
0.01

C206
0.01

C207
0.01

C208
0.01

C209
0.01

C210
0.01

C211
0.01

C212
0.01

C213
0.01

C214
0.01

C215
0.01

C216
0.01

C217
0.01

C218
0.01

C219
0.01

C220
0.01

C221
0.01

C222
0.01

C223
0.01

C224
0.01

C225
0.01

C226
0.01

C227
0.01

C228
0.01

C229
0.01

C230
0.01

C231
0.01

C232
0.01

C233
0.01

C234
0.01

C235
0.01

C236
0.01

C237
0.01

C238
0.01

C239
0.01

C240
0.01

C241
0.01

C242
0.01

C243
0.01

C244
0.01

C245
0.01

C246
0.01

C247
0.01

C248
0.01

C249
0.01

C250
0.01

C251
0.01

C252
0.01

C253
0.01

C254
0.01

C255
0.01

C256
0.01

C257
0.01

C258
0.01

C259
0.01

C260
0.01

C261
0.01

C262
0.01

C263
0.01

C264
0.01

C265
0.01

C266
0.01

C267
0.01

C268
0.01

C269
0.01

C270
0.01

C271
0.01

C272
0.01

C273
0.01

C274
0.01

C275
0.01

C276
0.01

C277
0.01

C278
0.01

C279
0.01

C280
0.01

C281
0.01

C282
0.01

C283
0.01

C284
0.01

C285
0.01

C286
0.01

C287
0.01

C288
0.01

C289
0.01

C290
0.01

C291
0.01

C292
0.01

C293
0.01

C294
0.01

C295
0.01

C296
0.01

C297
0.01

C298
0.01

C299
0.01

C300
0.01

C301
0.01

C302
0.01

C303
0.01

C304
0.01

C305
0.01

C306
0.01

C307
0.01

C308
0.01

C309
0.01

C310
0.01

C311
0.01

C312
0.01

C313
0.01

C314
0.01

C315
0.01

C316
0.01

C317
0.01

C318
0.01

C319
0.01

C320
0.01

C321
0.01

C322
0.01

C323
0.01

C324
0.01

C325
0.01

C326
0.01

C327
0.01

C328
0.01

C329
0.01

C330
0.01

C331
0.01

C332
0.01

C333
0.01

C334
0.01

C335
0.01

C336
0.01

C337
0.01

C338
0.01

C339
0.01

C340
0.01

C341
0.01

C342
0.01

C343
0.01

C344
0.01

C345
0.01

C346
0.01

C347
0.01

C348
0.01

C349
0.01

C350
0.01

C351
0.01

C352
0.01

C353
0.01

C354
0.01

C355
0.01

C356
0.01

C357
0.01

C358
0.01

C359
0.01

C360
0.01

C361
0.01

C362
0.01

C363
0.01

C364
0.01

C365
0.01

C366
0.01

C367
0.01

C368
0.01

C369
0.01

C370
0.01

C371
0.01

C372
0.01

C373
0.01

C374
0.01

C375
0.01

C376
0.01

C377
0.01

C378
0.01

C379
0.01

C380
0.01

C381
0.01

C382
0.01

C383
0.01

C384
0.01

C385
0.01

C386
0.01

C387
0.01

C388
0.01

C389
0.01

C390
0.01

C391
0.01

C392
0.01

C393
0.01

C394
0.01

C395
0.01

C396
0.01

C397
0.01

C398
0.01

C399
0.01

C400
0.01

C401
0.01

C402
0.01

C403
0.01

C404
0.01

C405
0.01

C406
0.01

C407
0.01

C408
0.01


C409
0.01

C410
0.01

C411
0.01


C412
0.01

C413
0.0

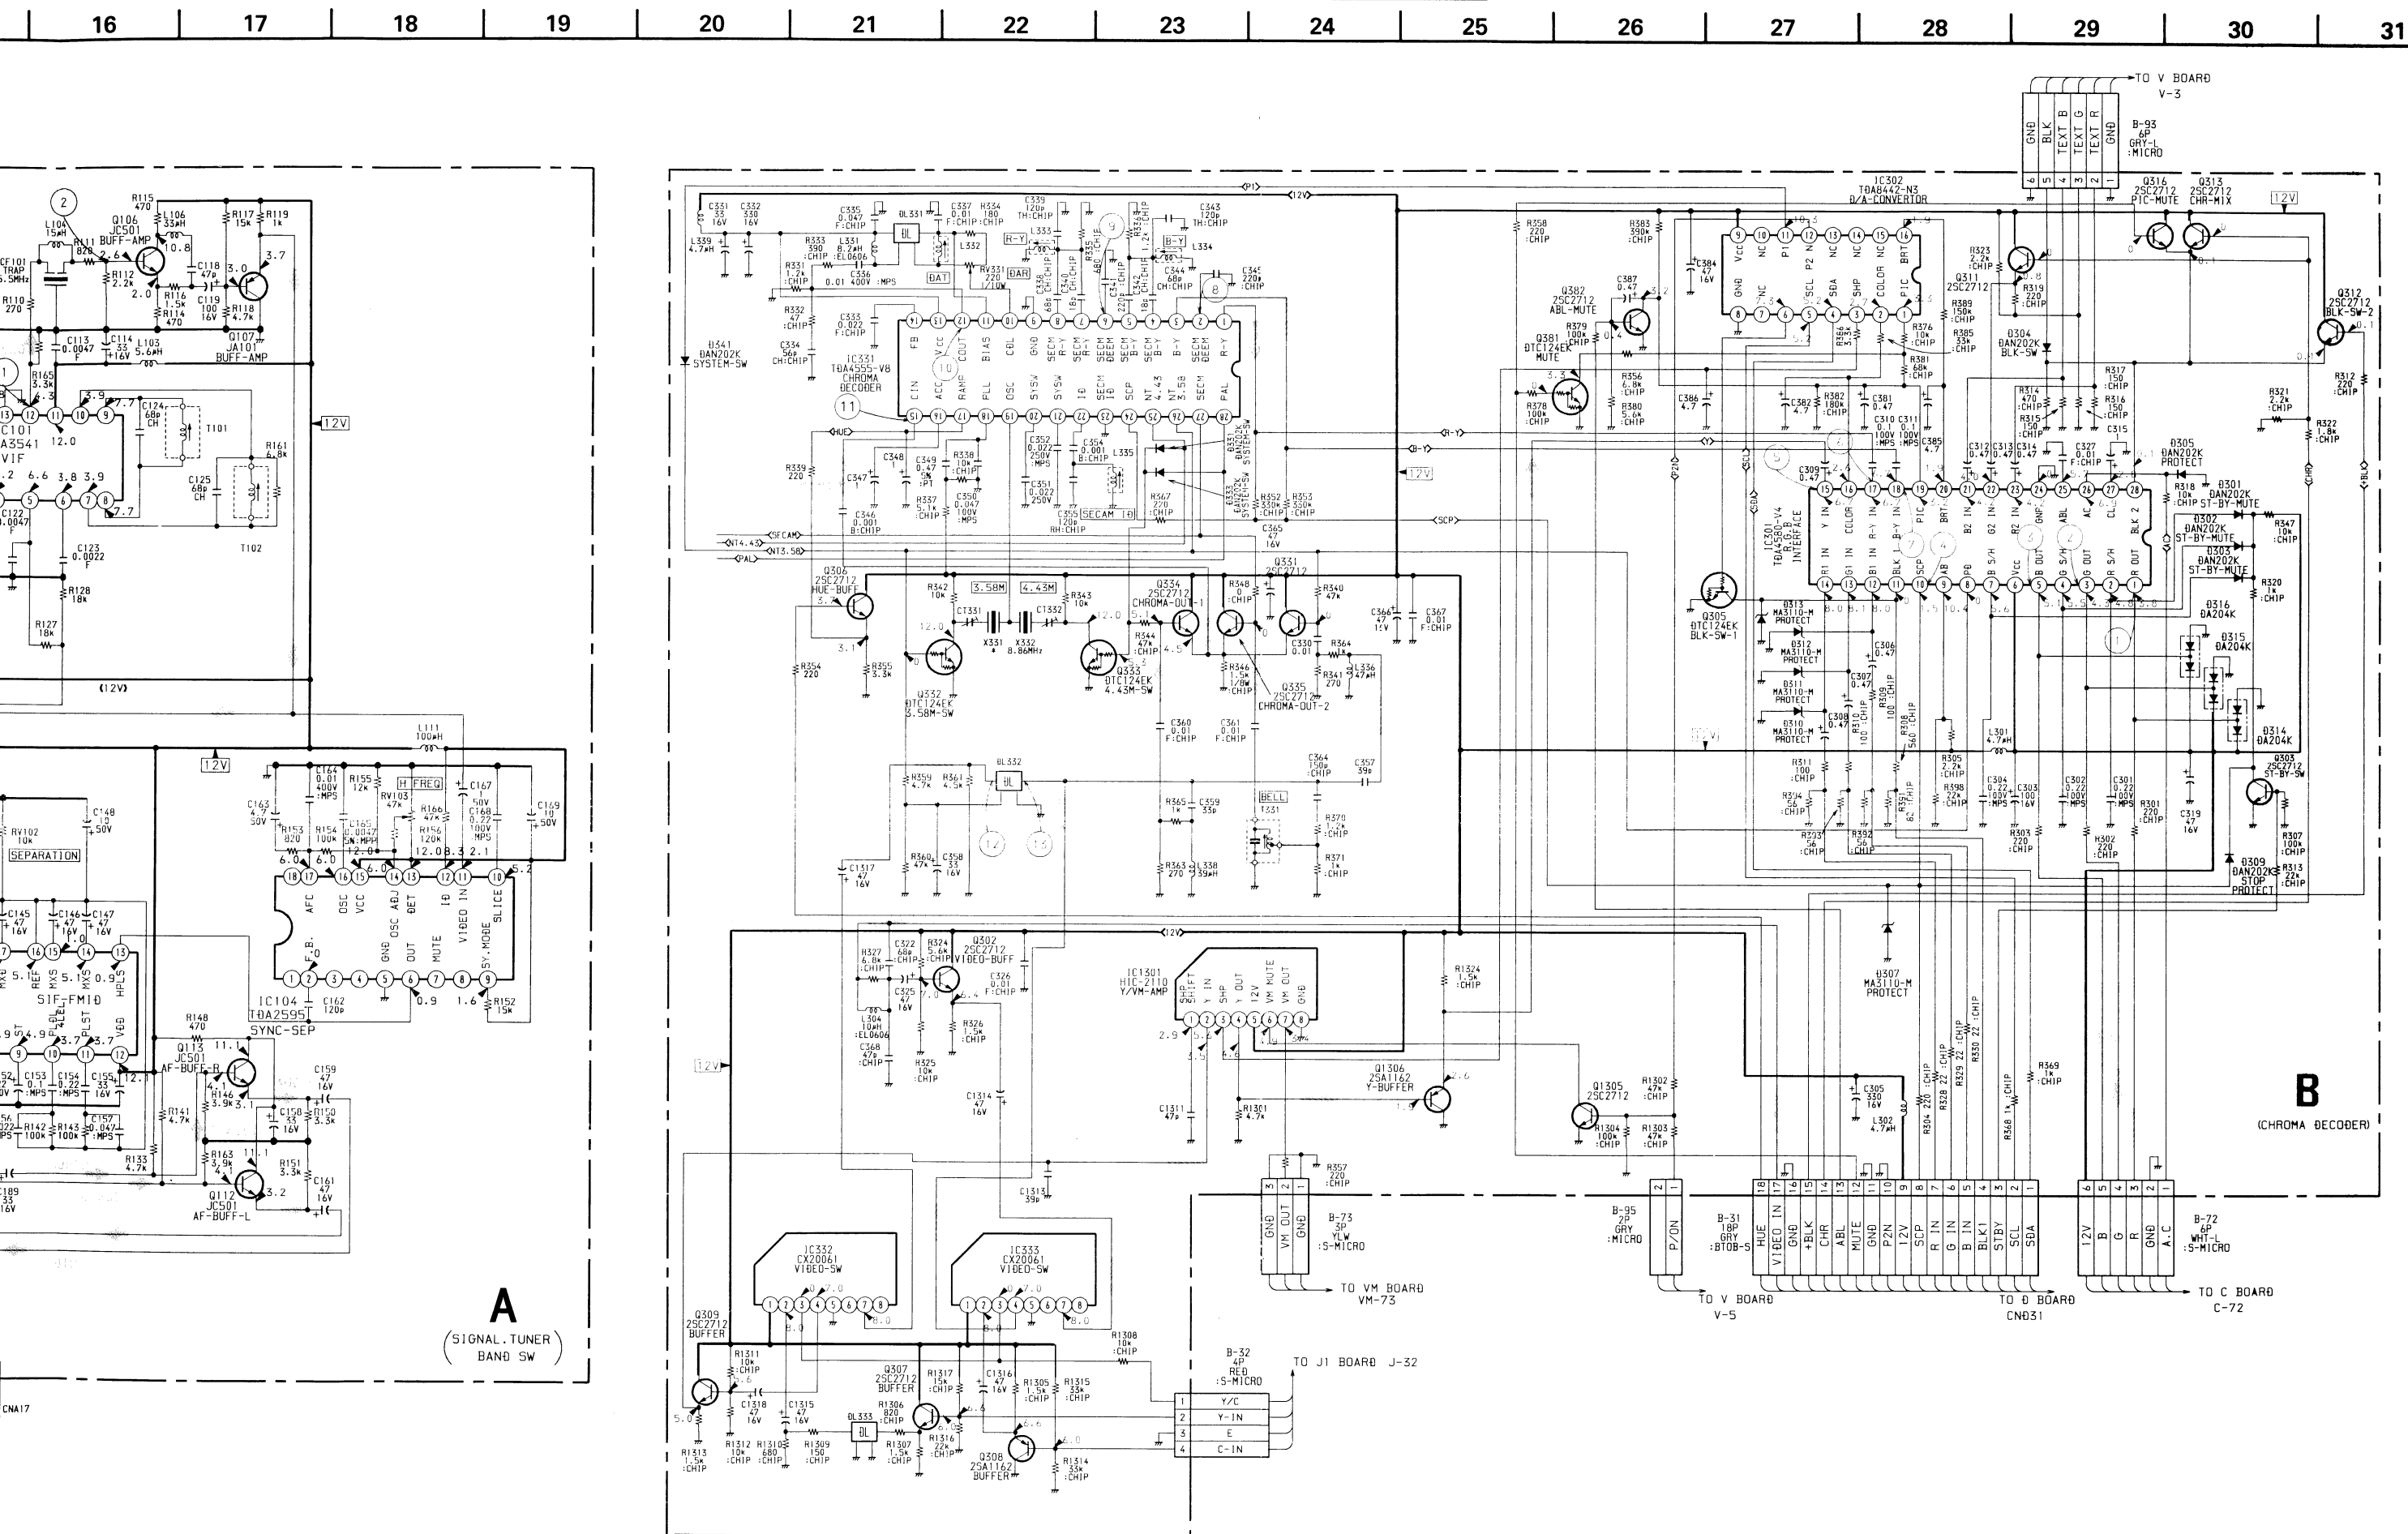


1 2 3 4 5 6 7 8 9 10



B BOARD IC302 TDA8442

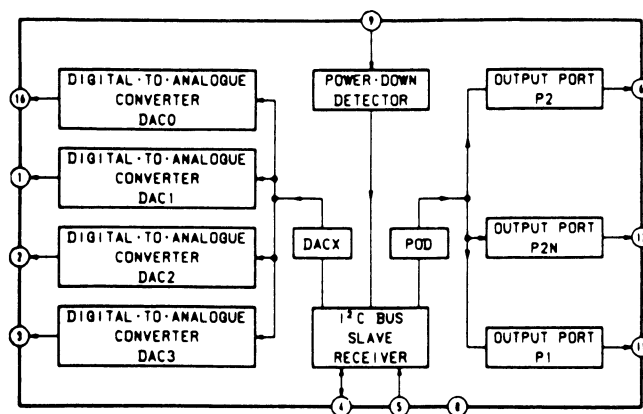

B BOARD IC331 TDA4555

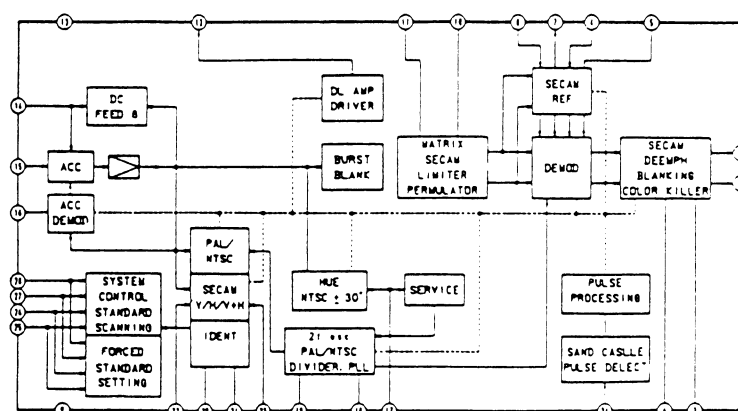


● B BOARD WAVEFORM

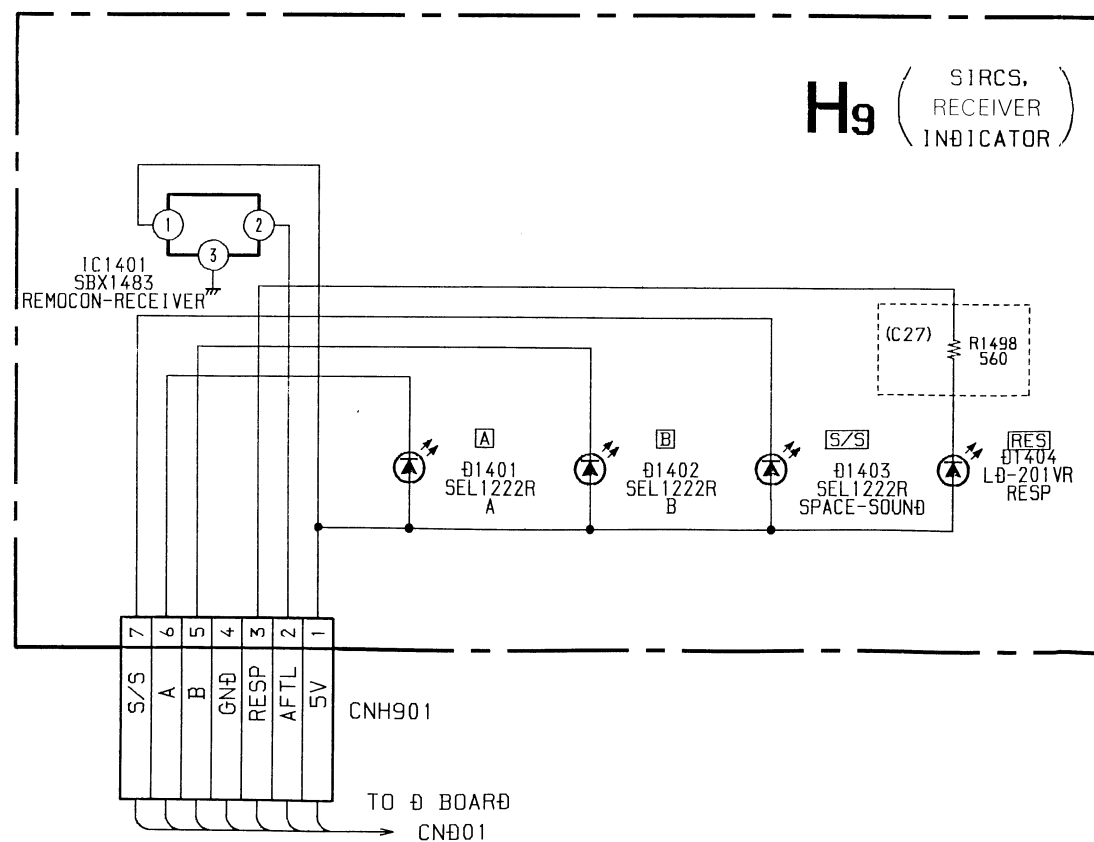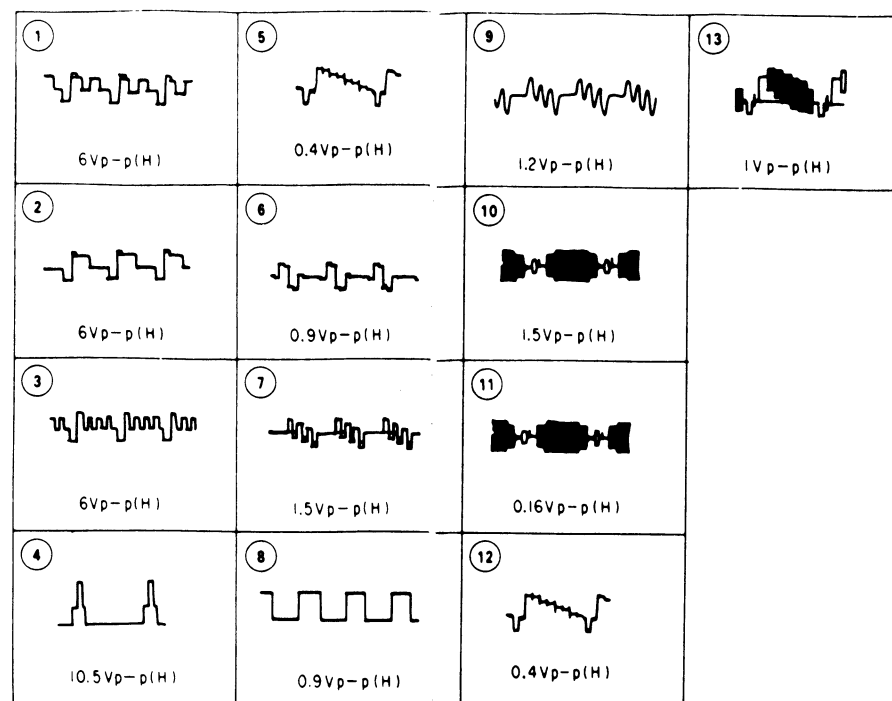


5-3. PRINTED WIRING BOARDS

— A Board —

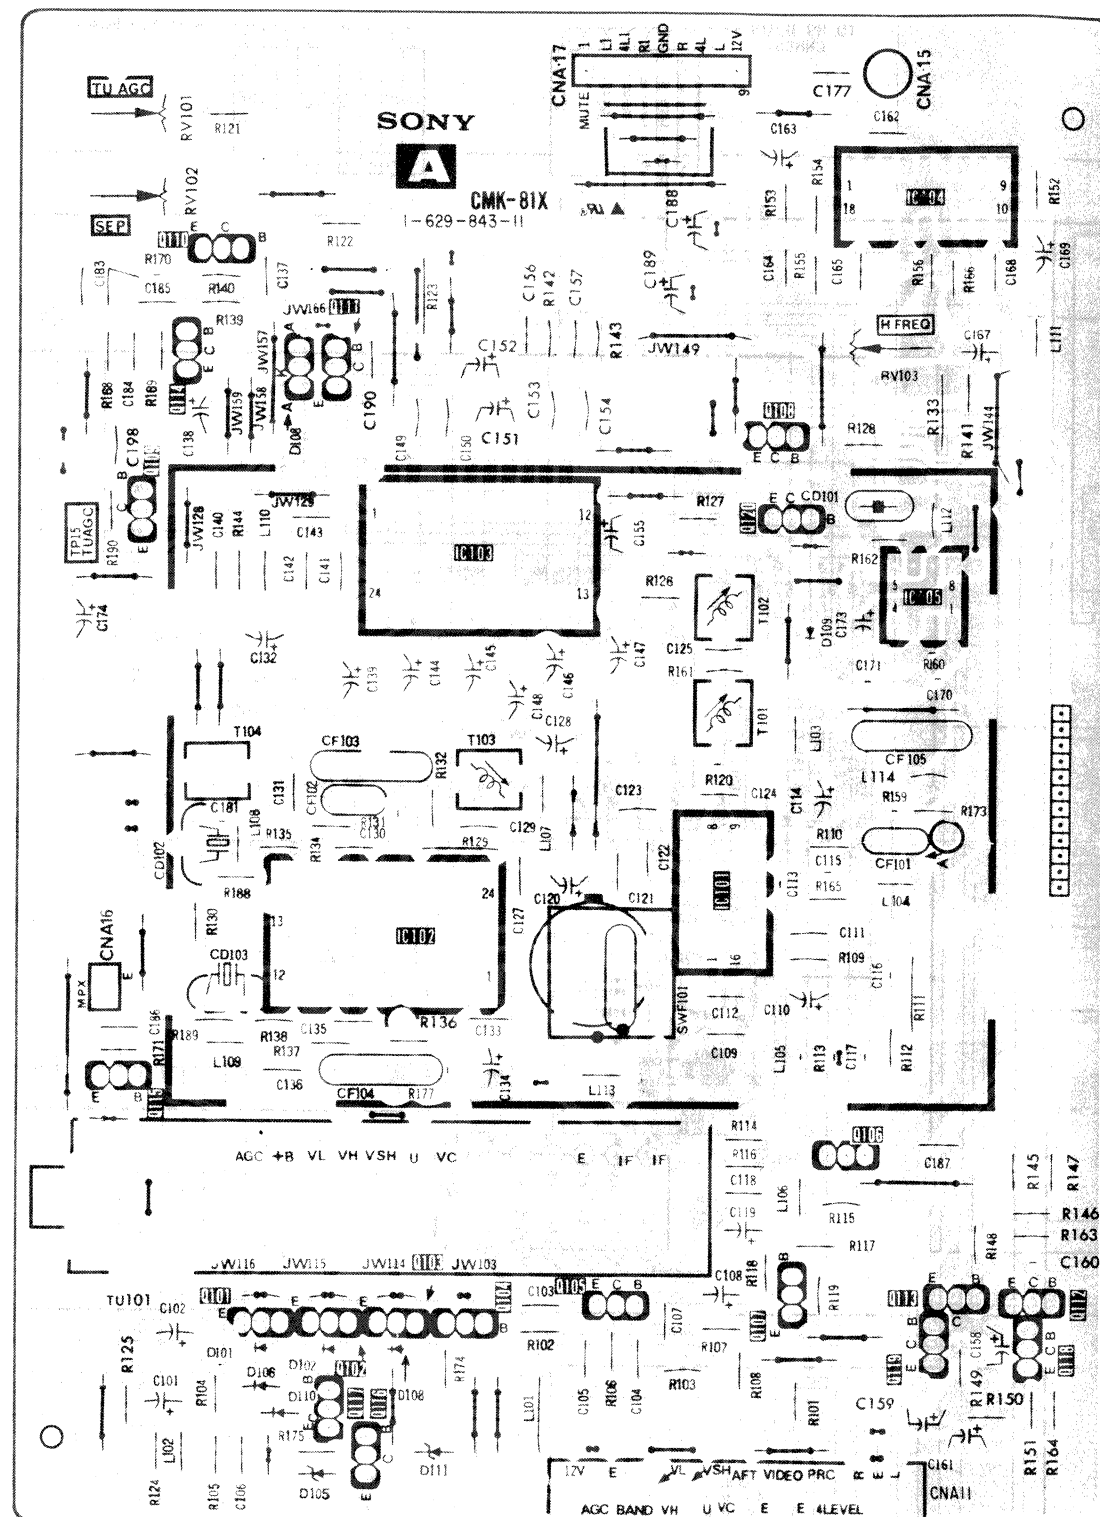

— B Board —

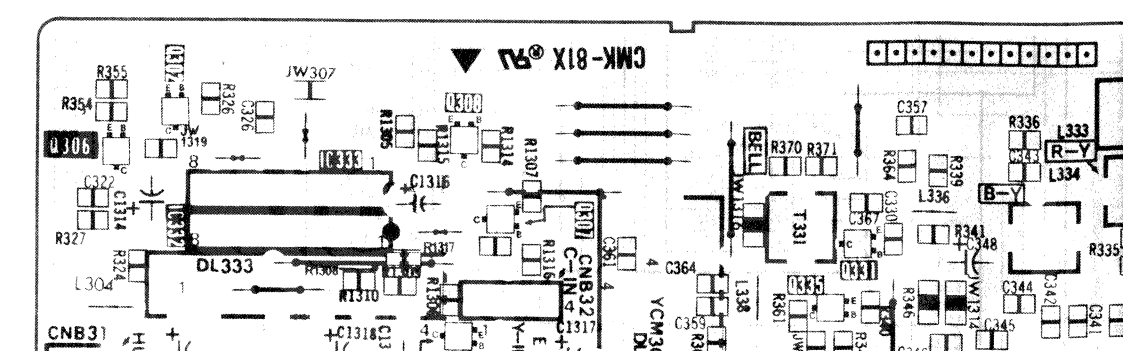

5-3. PRINTED WIRING BOARDS

A

[SIGNAL TUNER,
BAND SW, VIF, SIF]

B

[R-G-B INTERFACE,
D/A CONVERTER,
CHROMA DECODER]

F1

[LINE FILTER]


F2

[POWER SW]


VM

H9


— A Board —

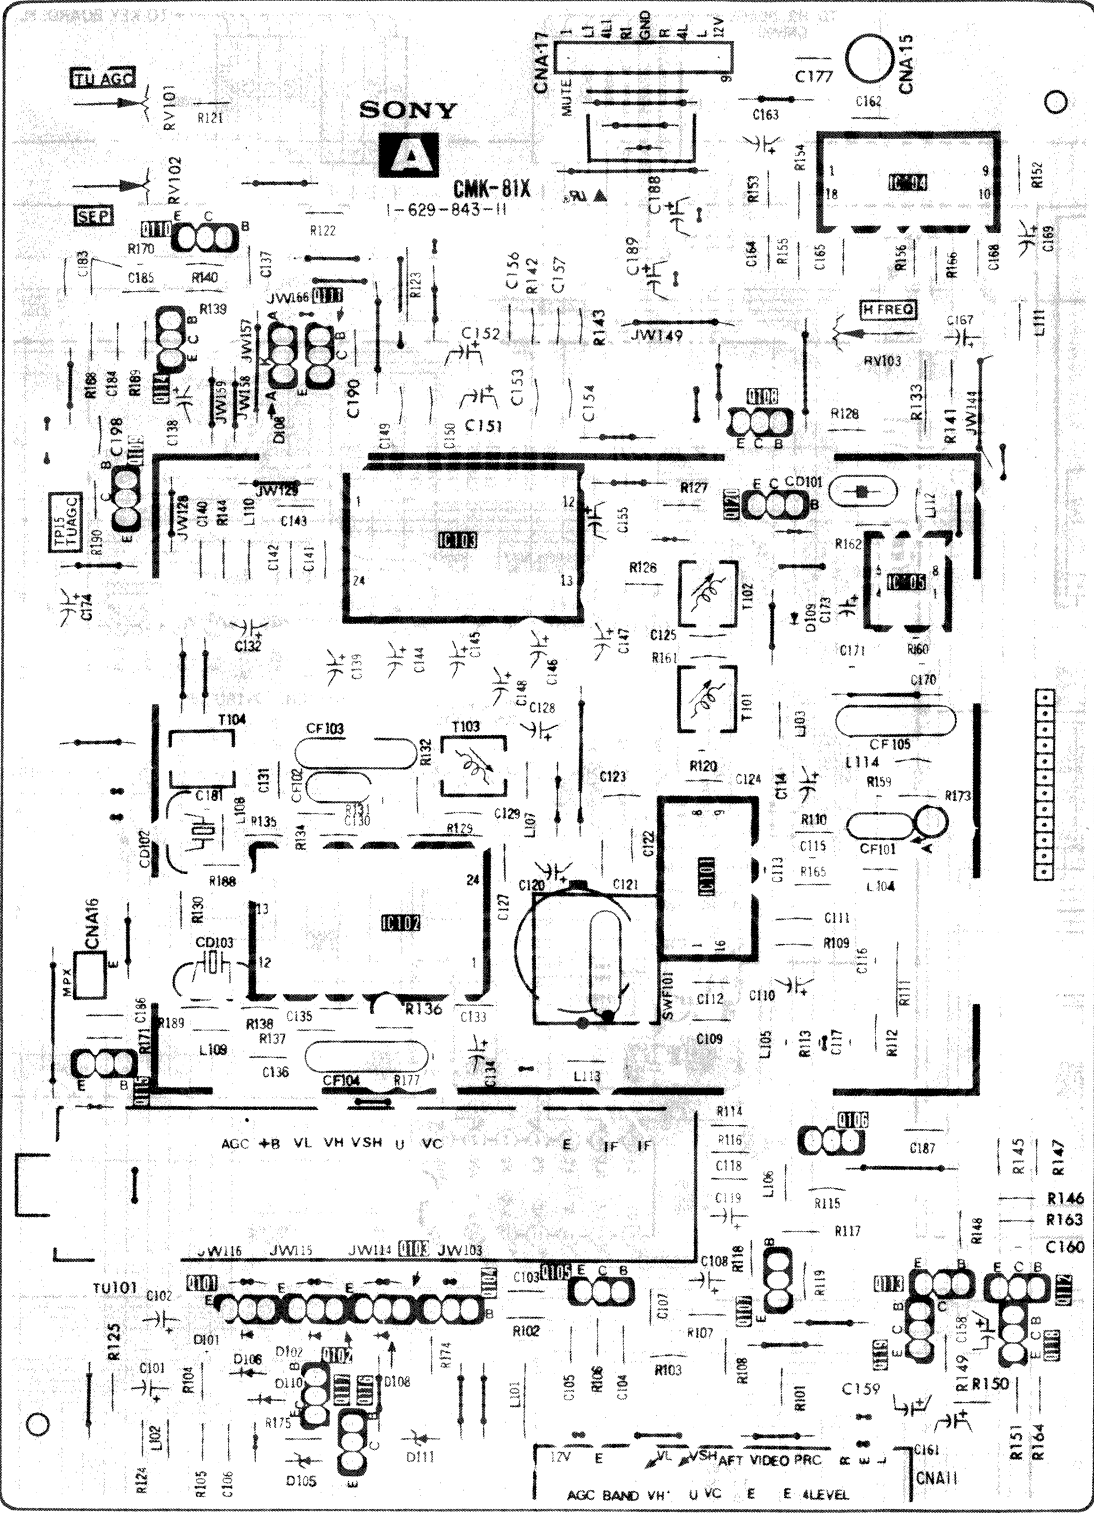


— F1 Board —

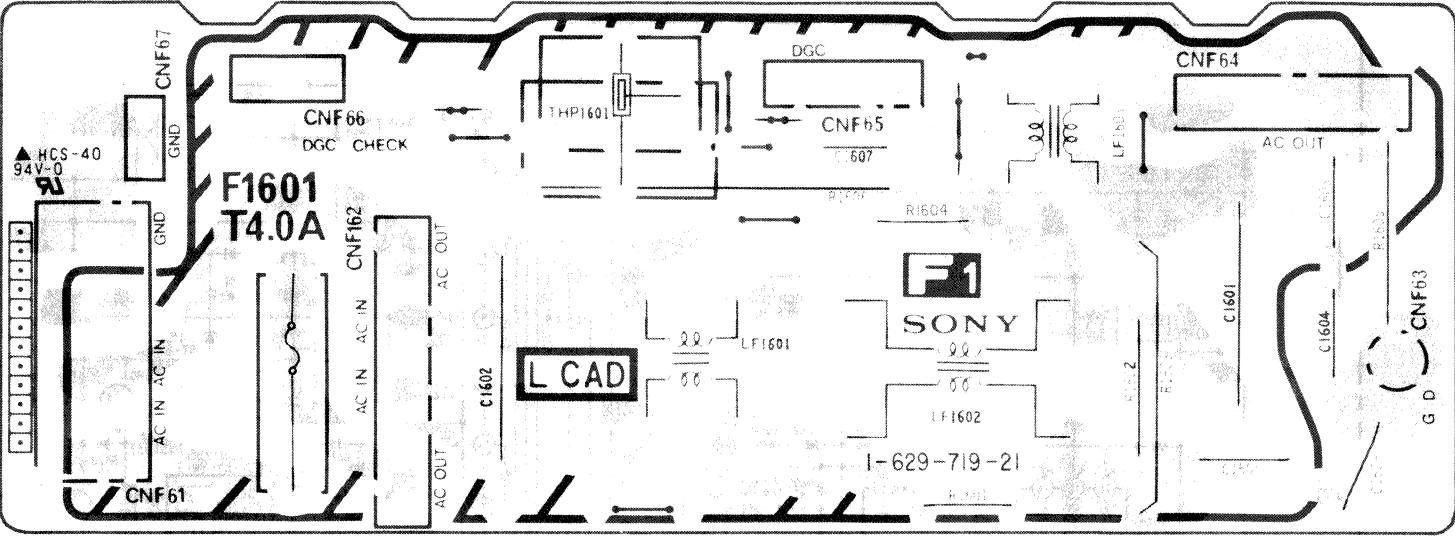


— F2 Board —



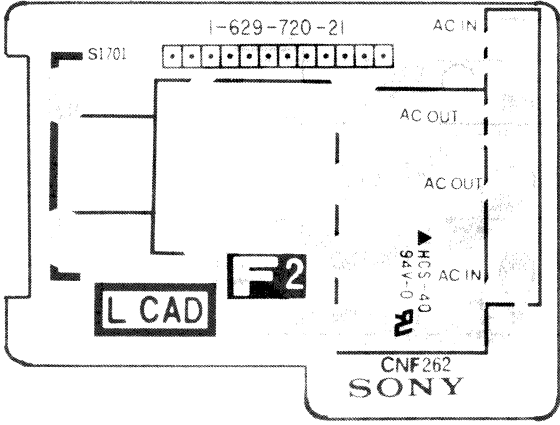


— VM Board —

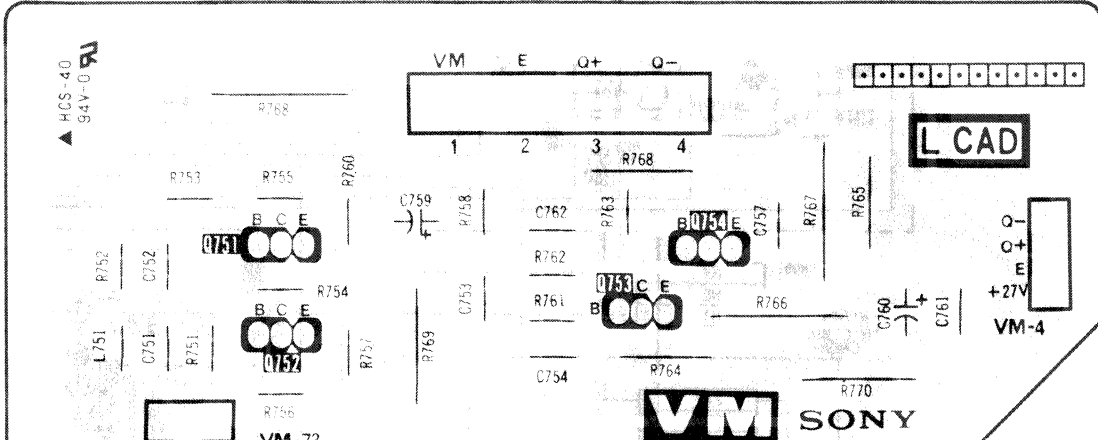



— B Board —

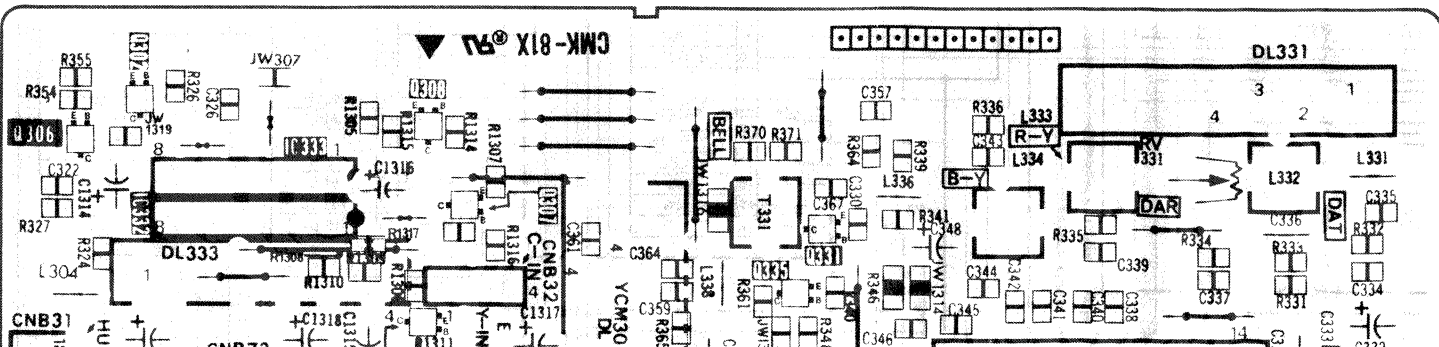

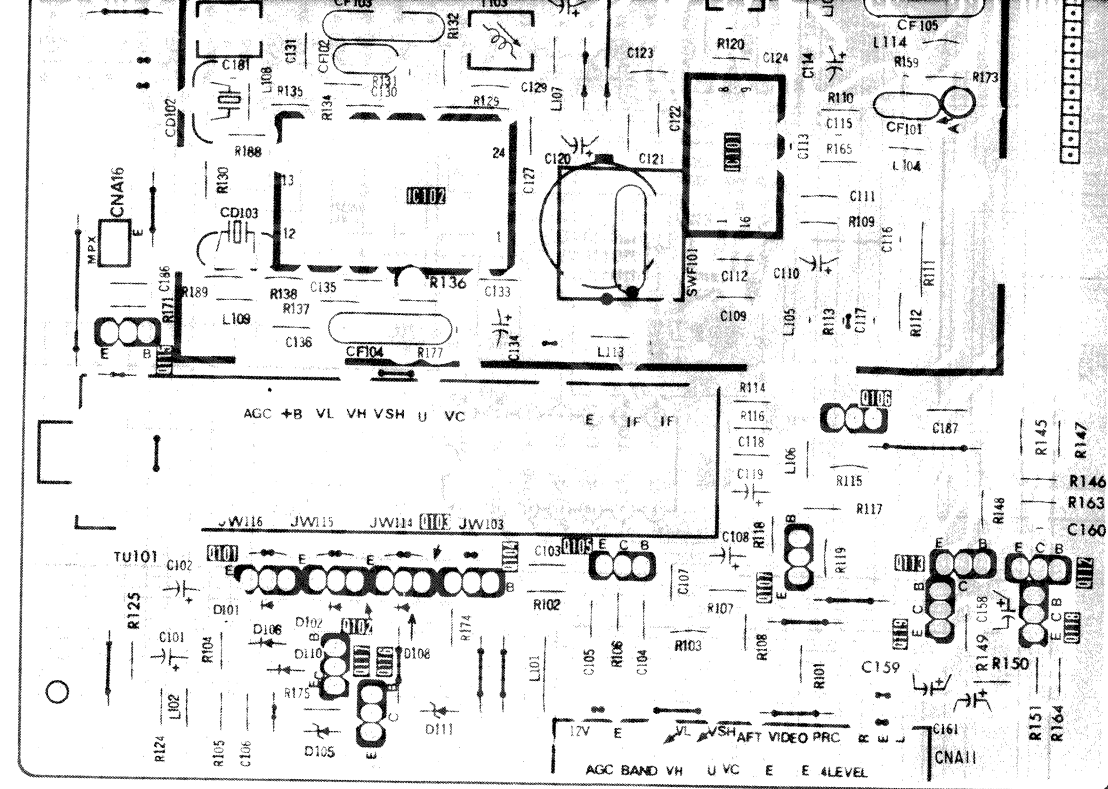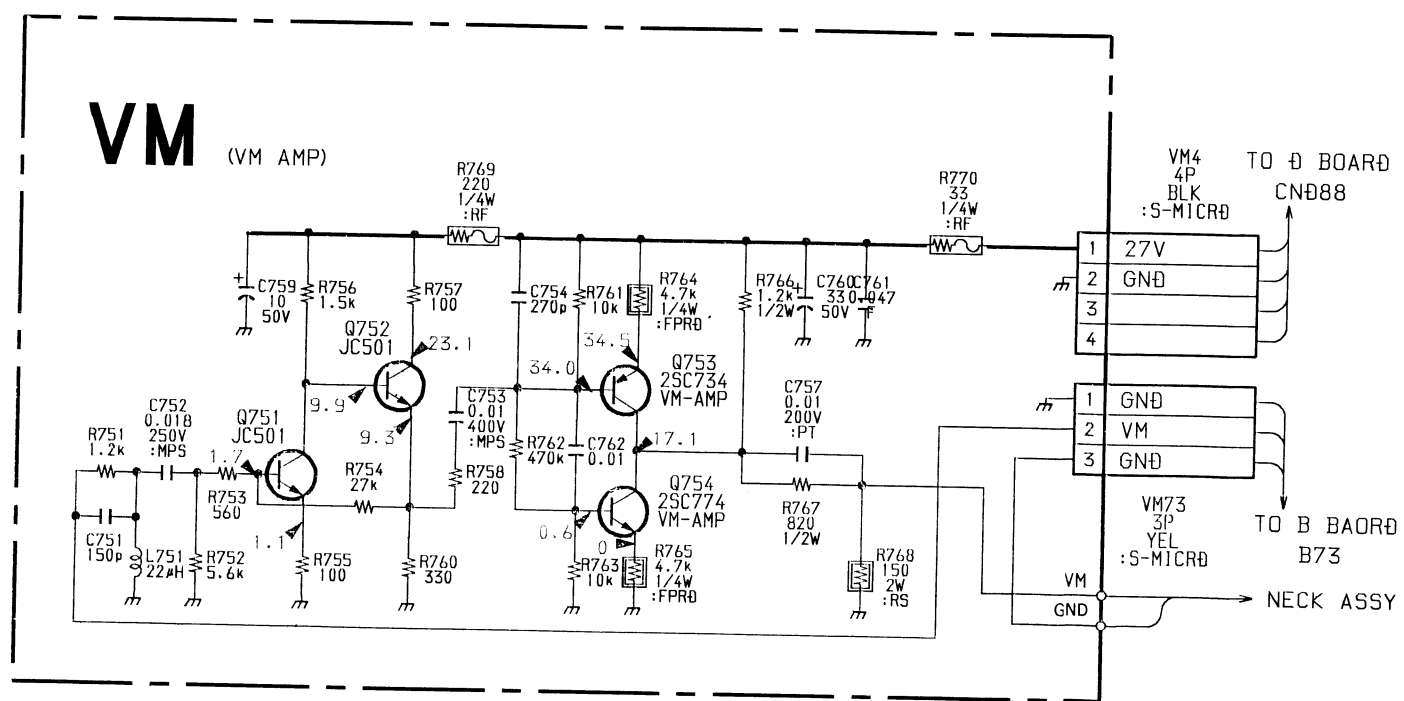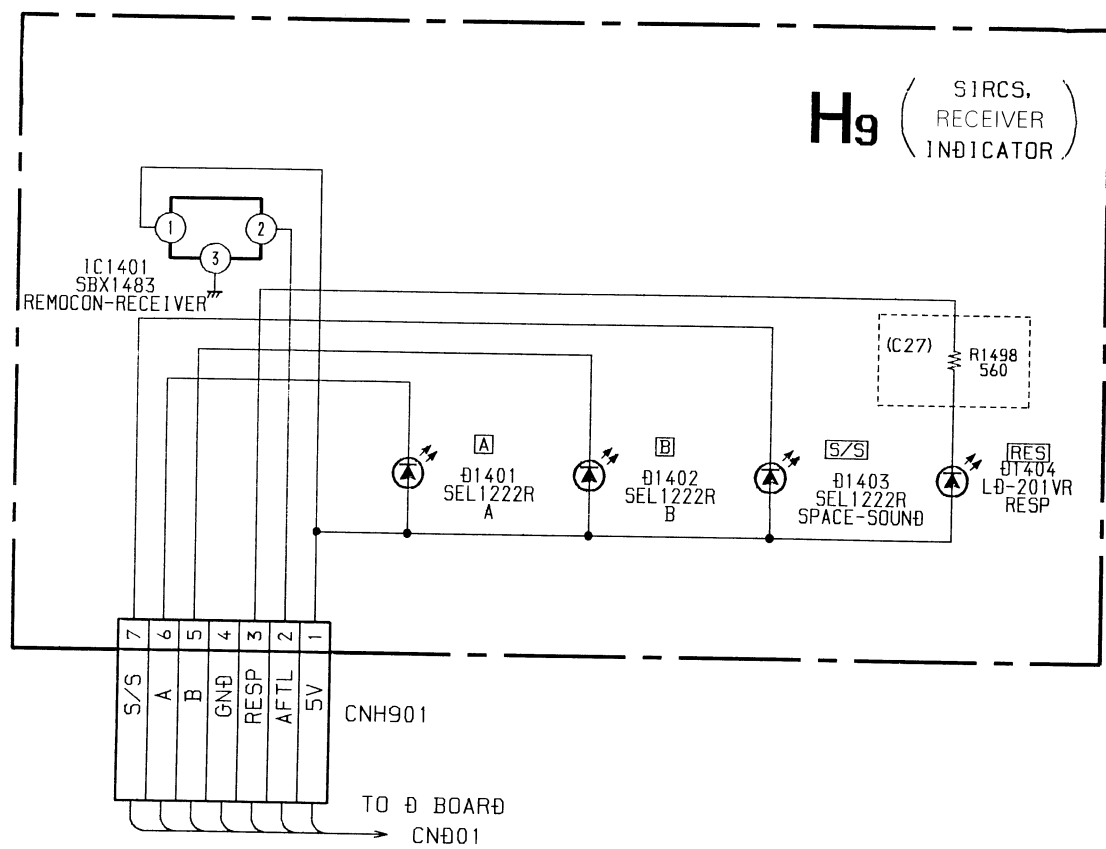


- B Board -

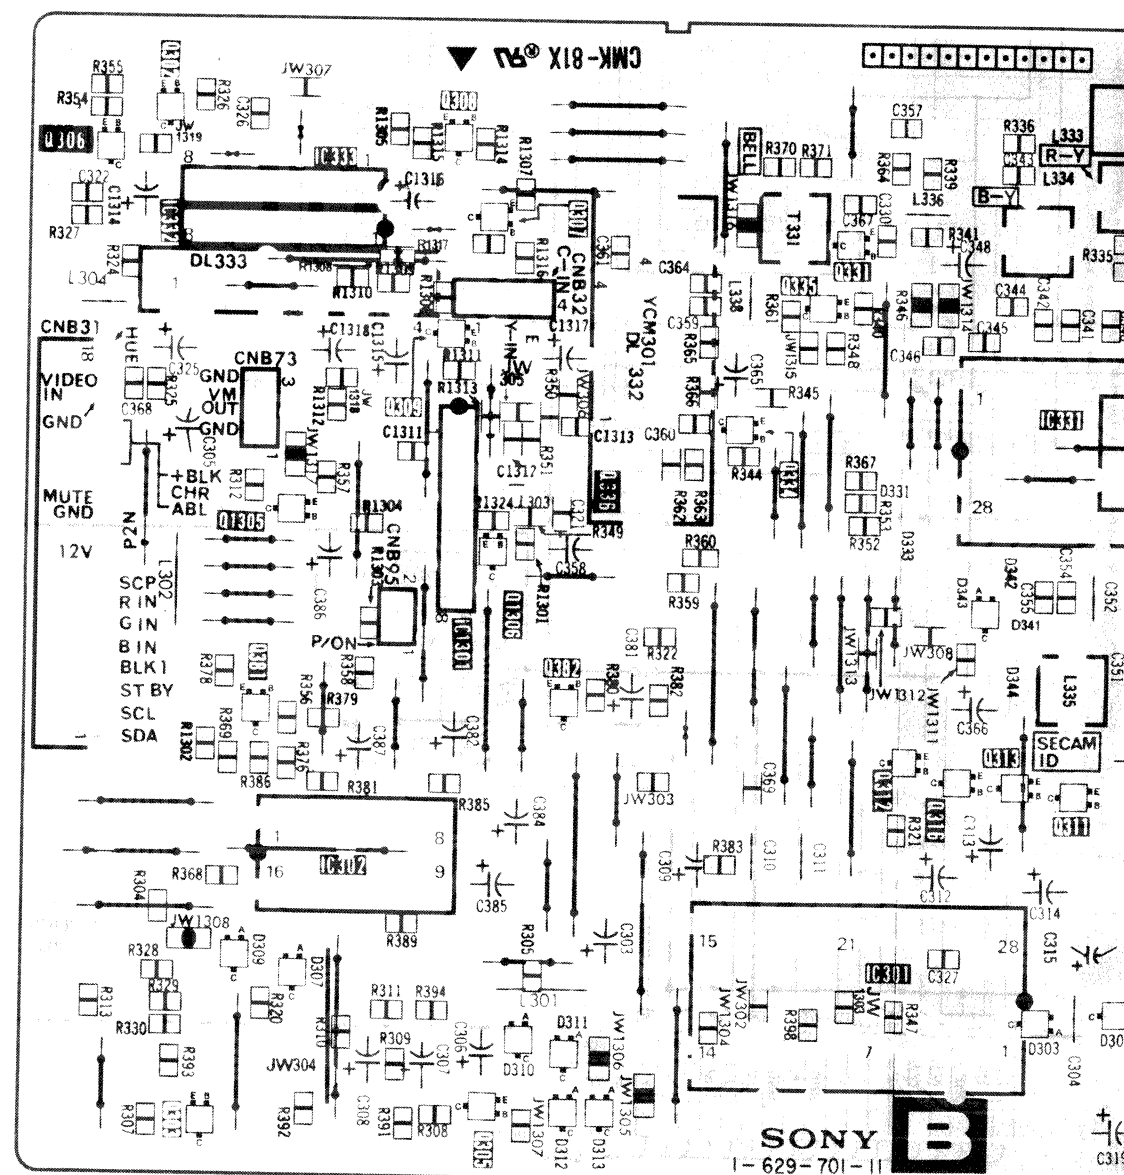


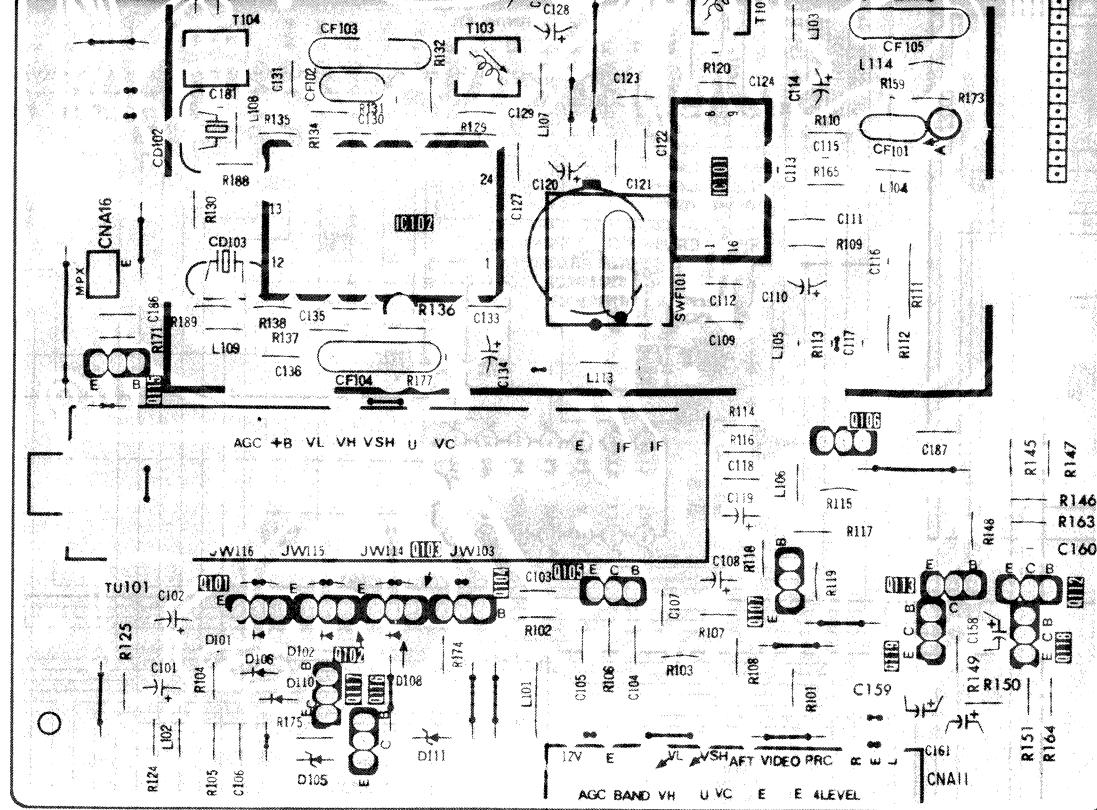


– B Board –

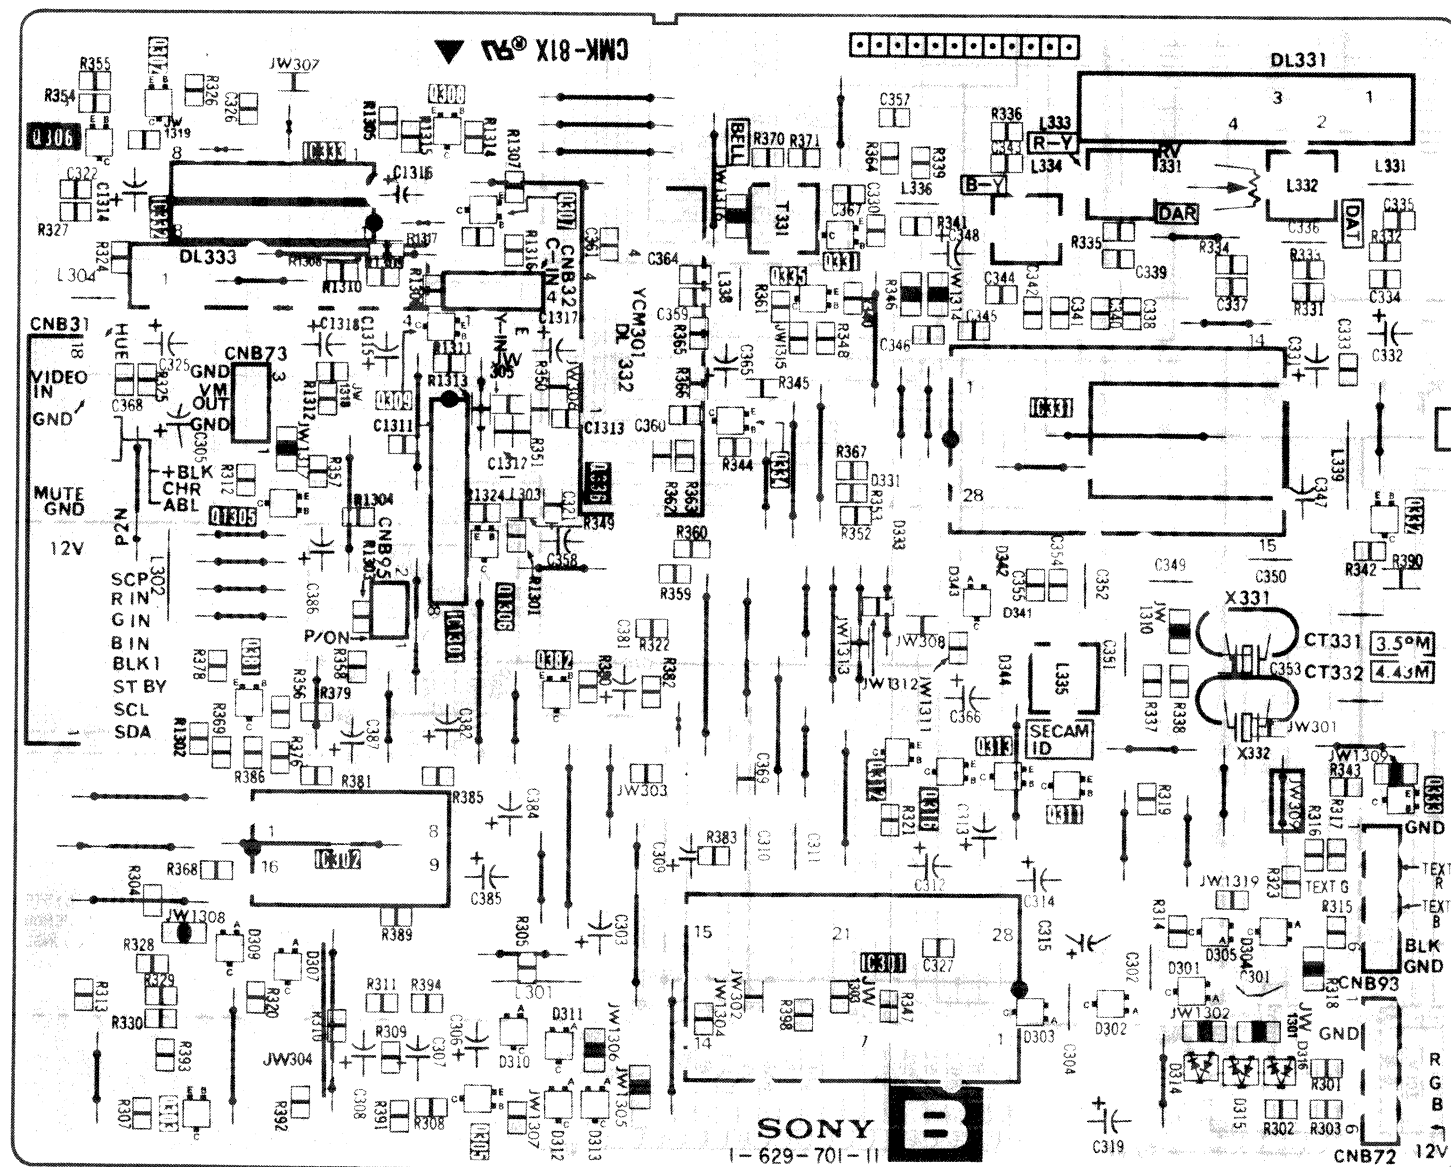


– F2 Board –

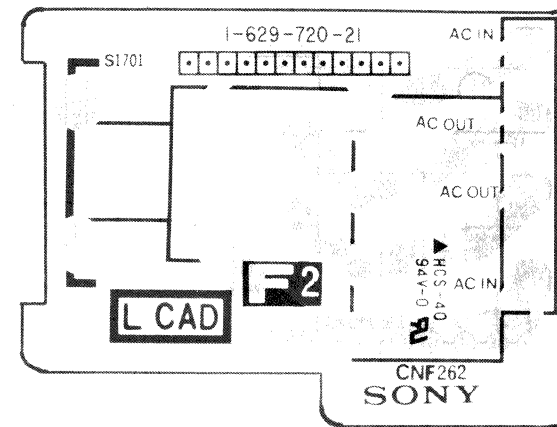



– VM Board –

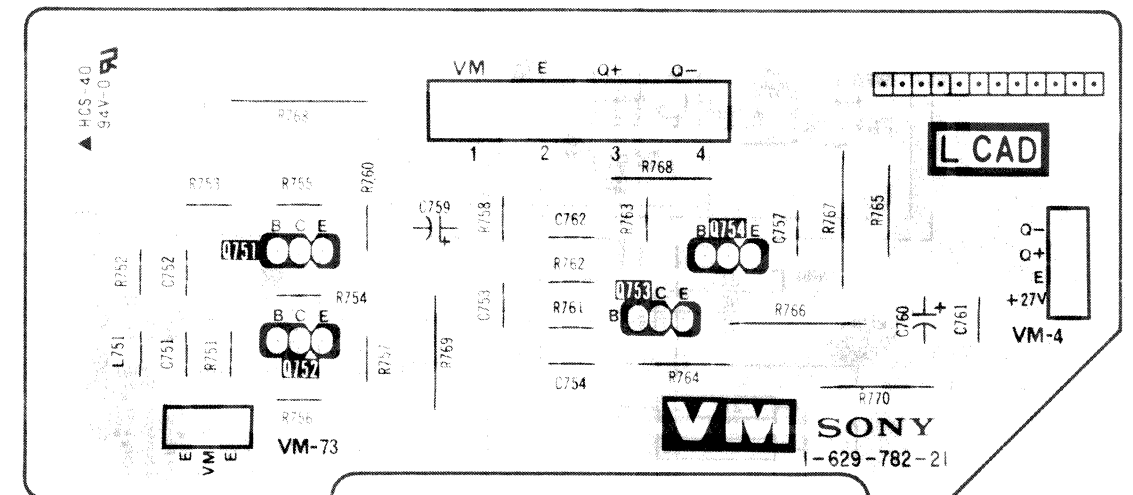


— H9 Board —

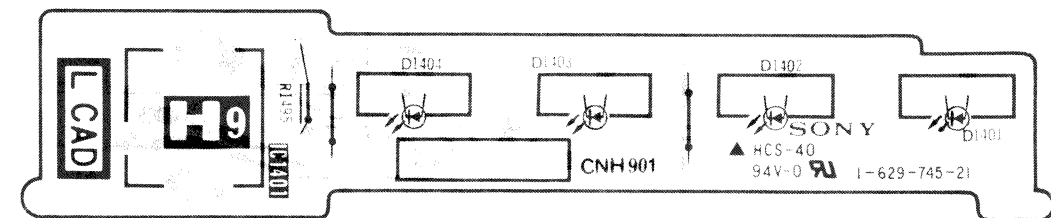


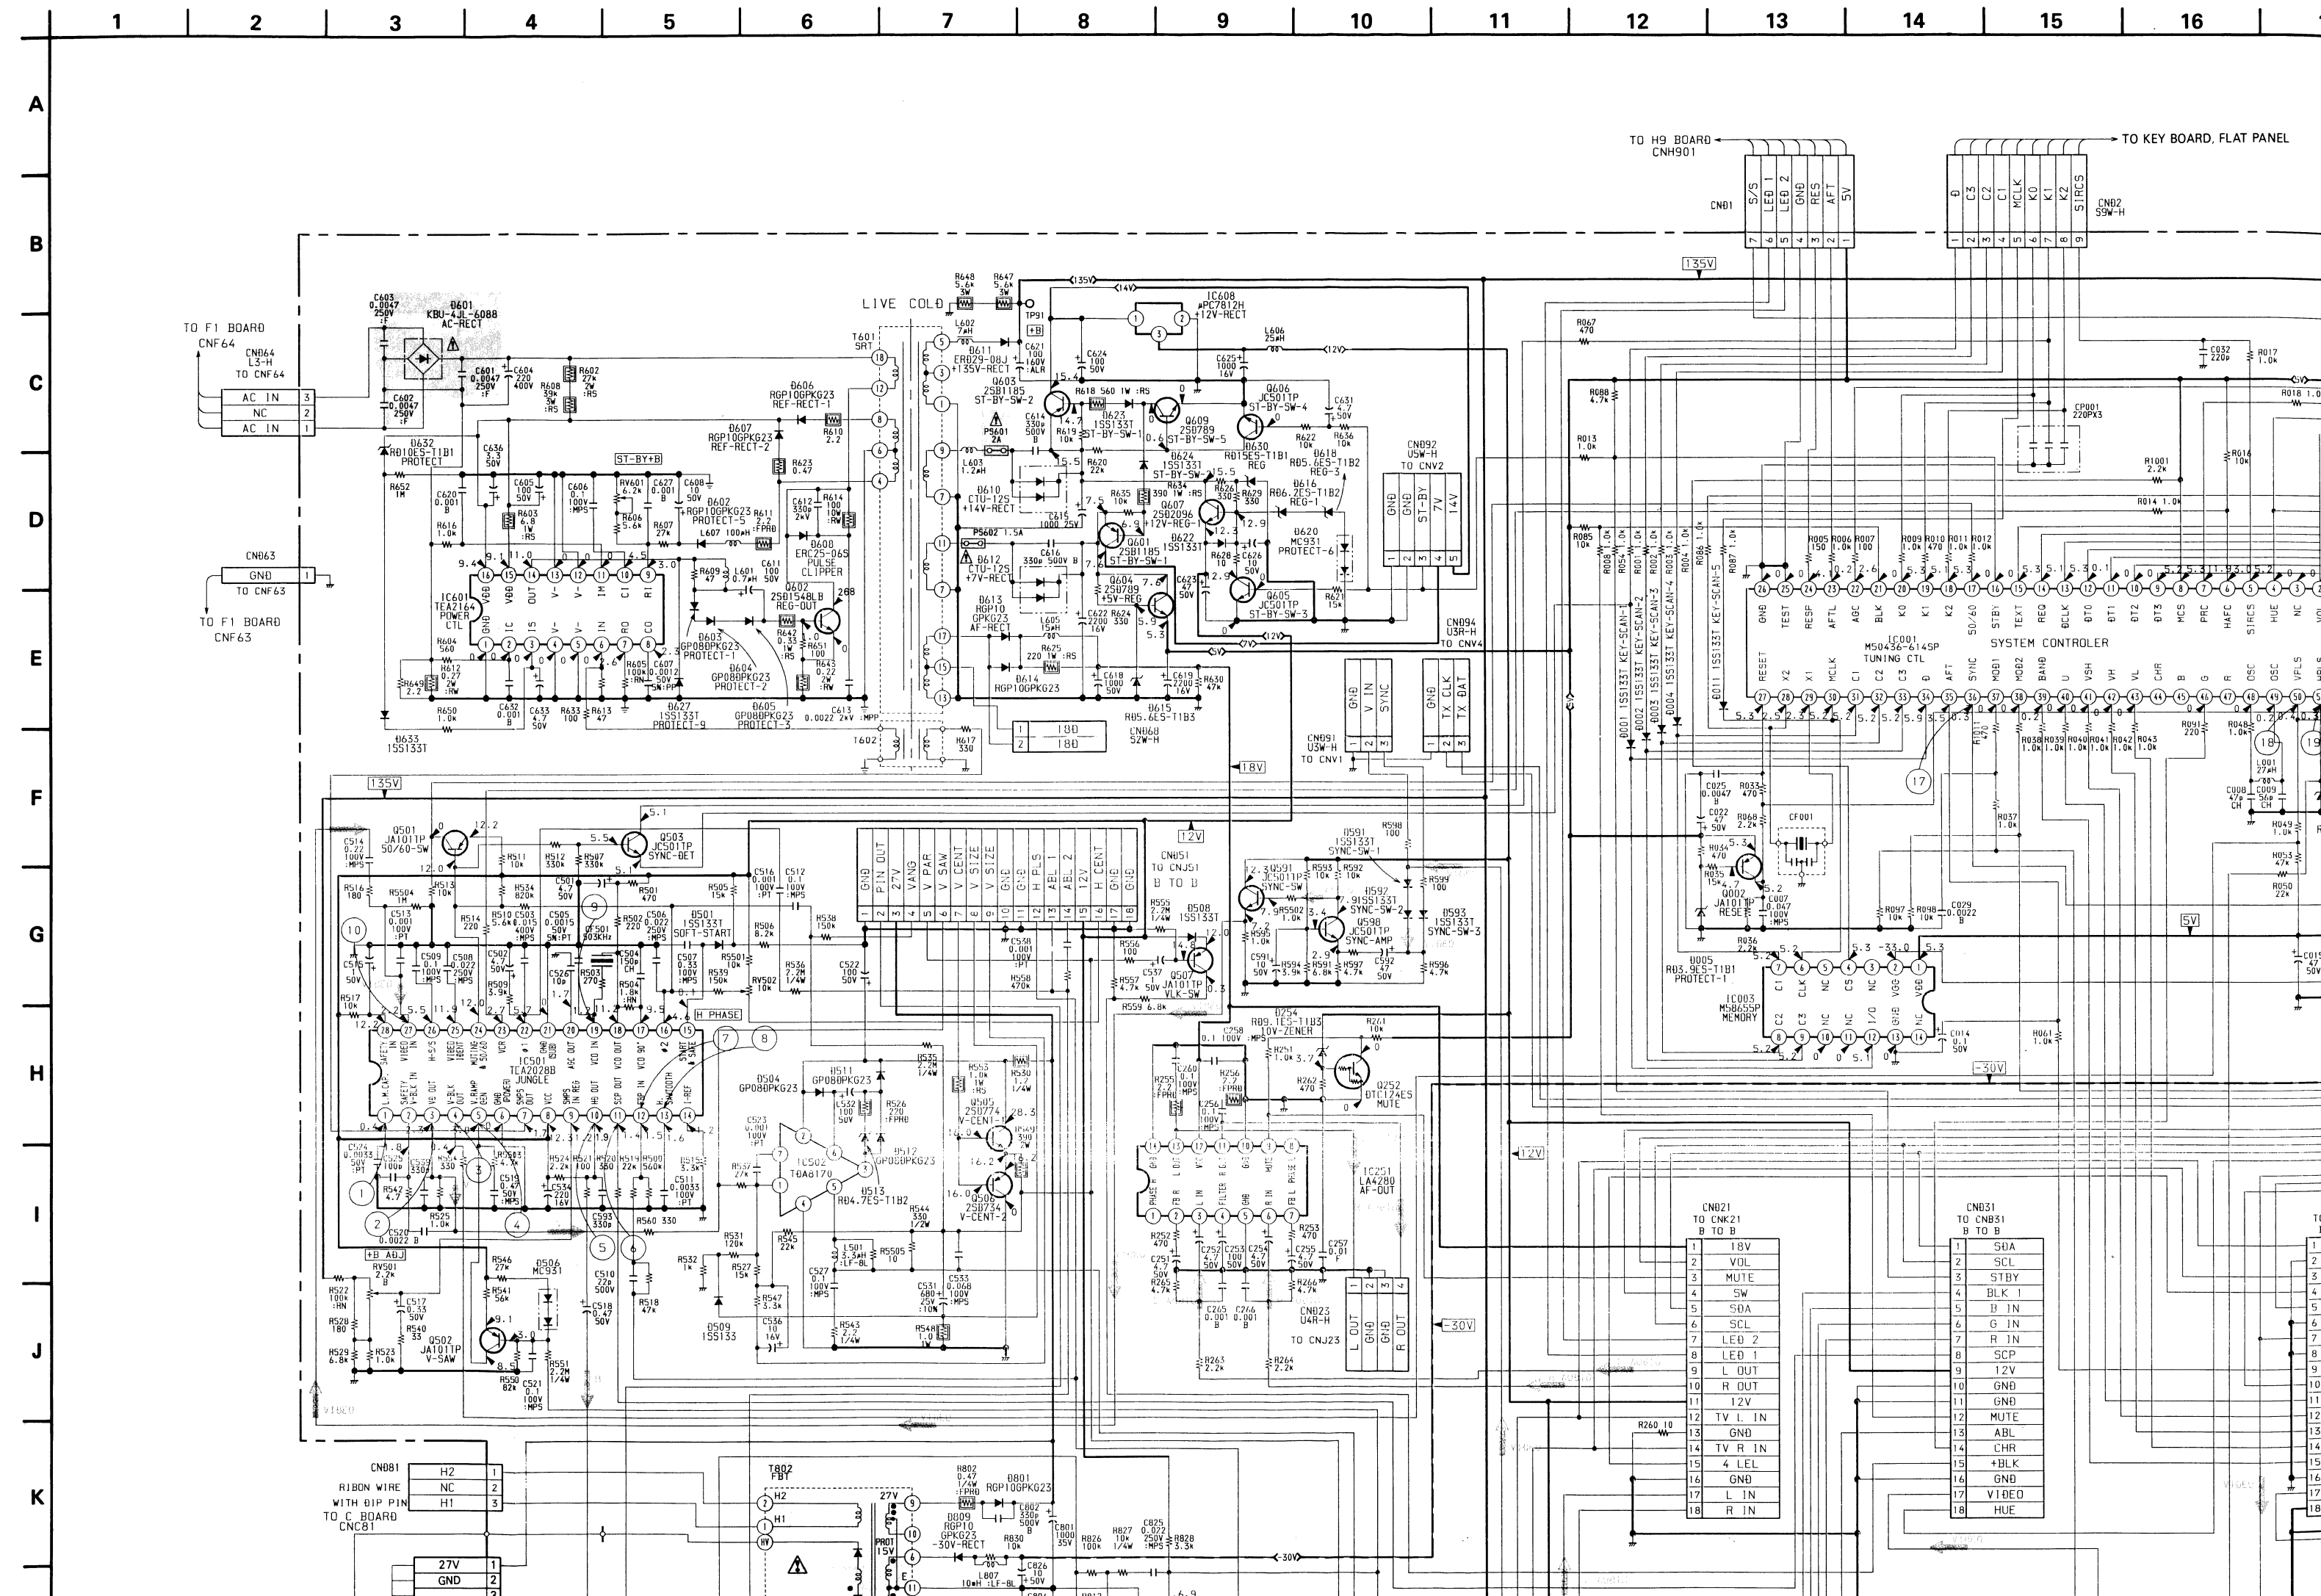


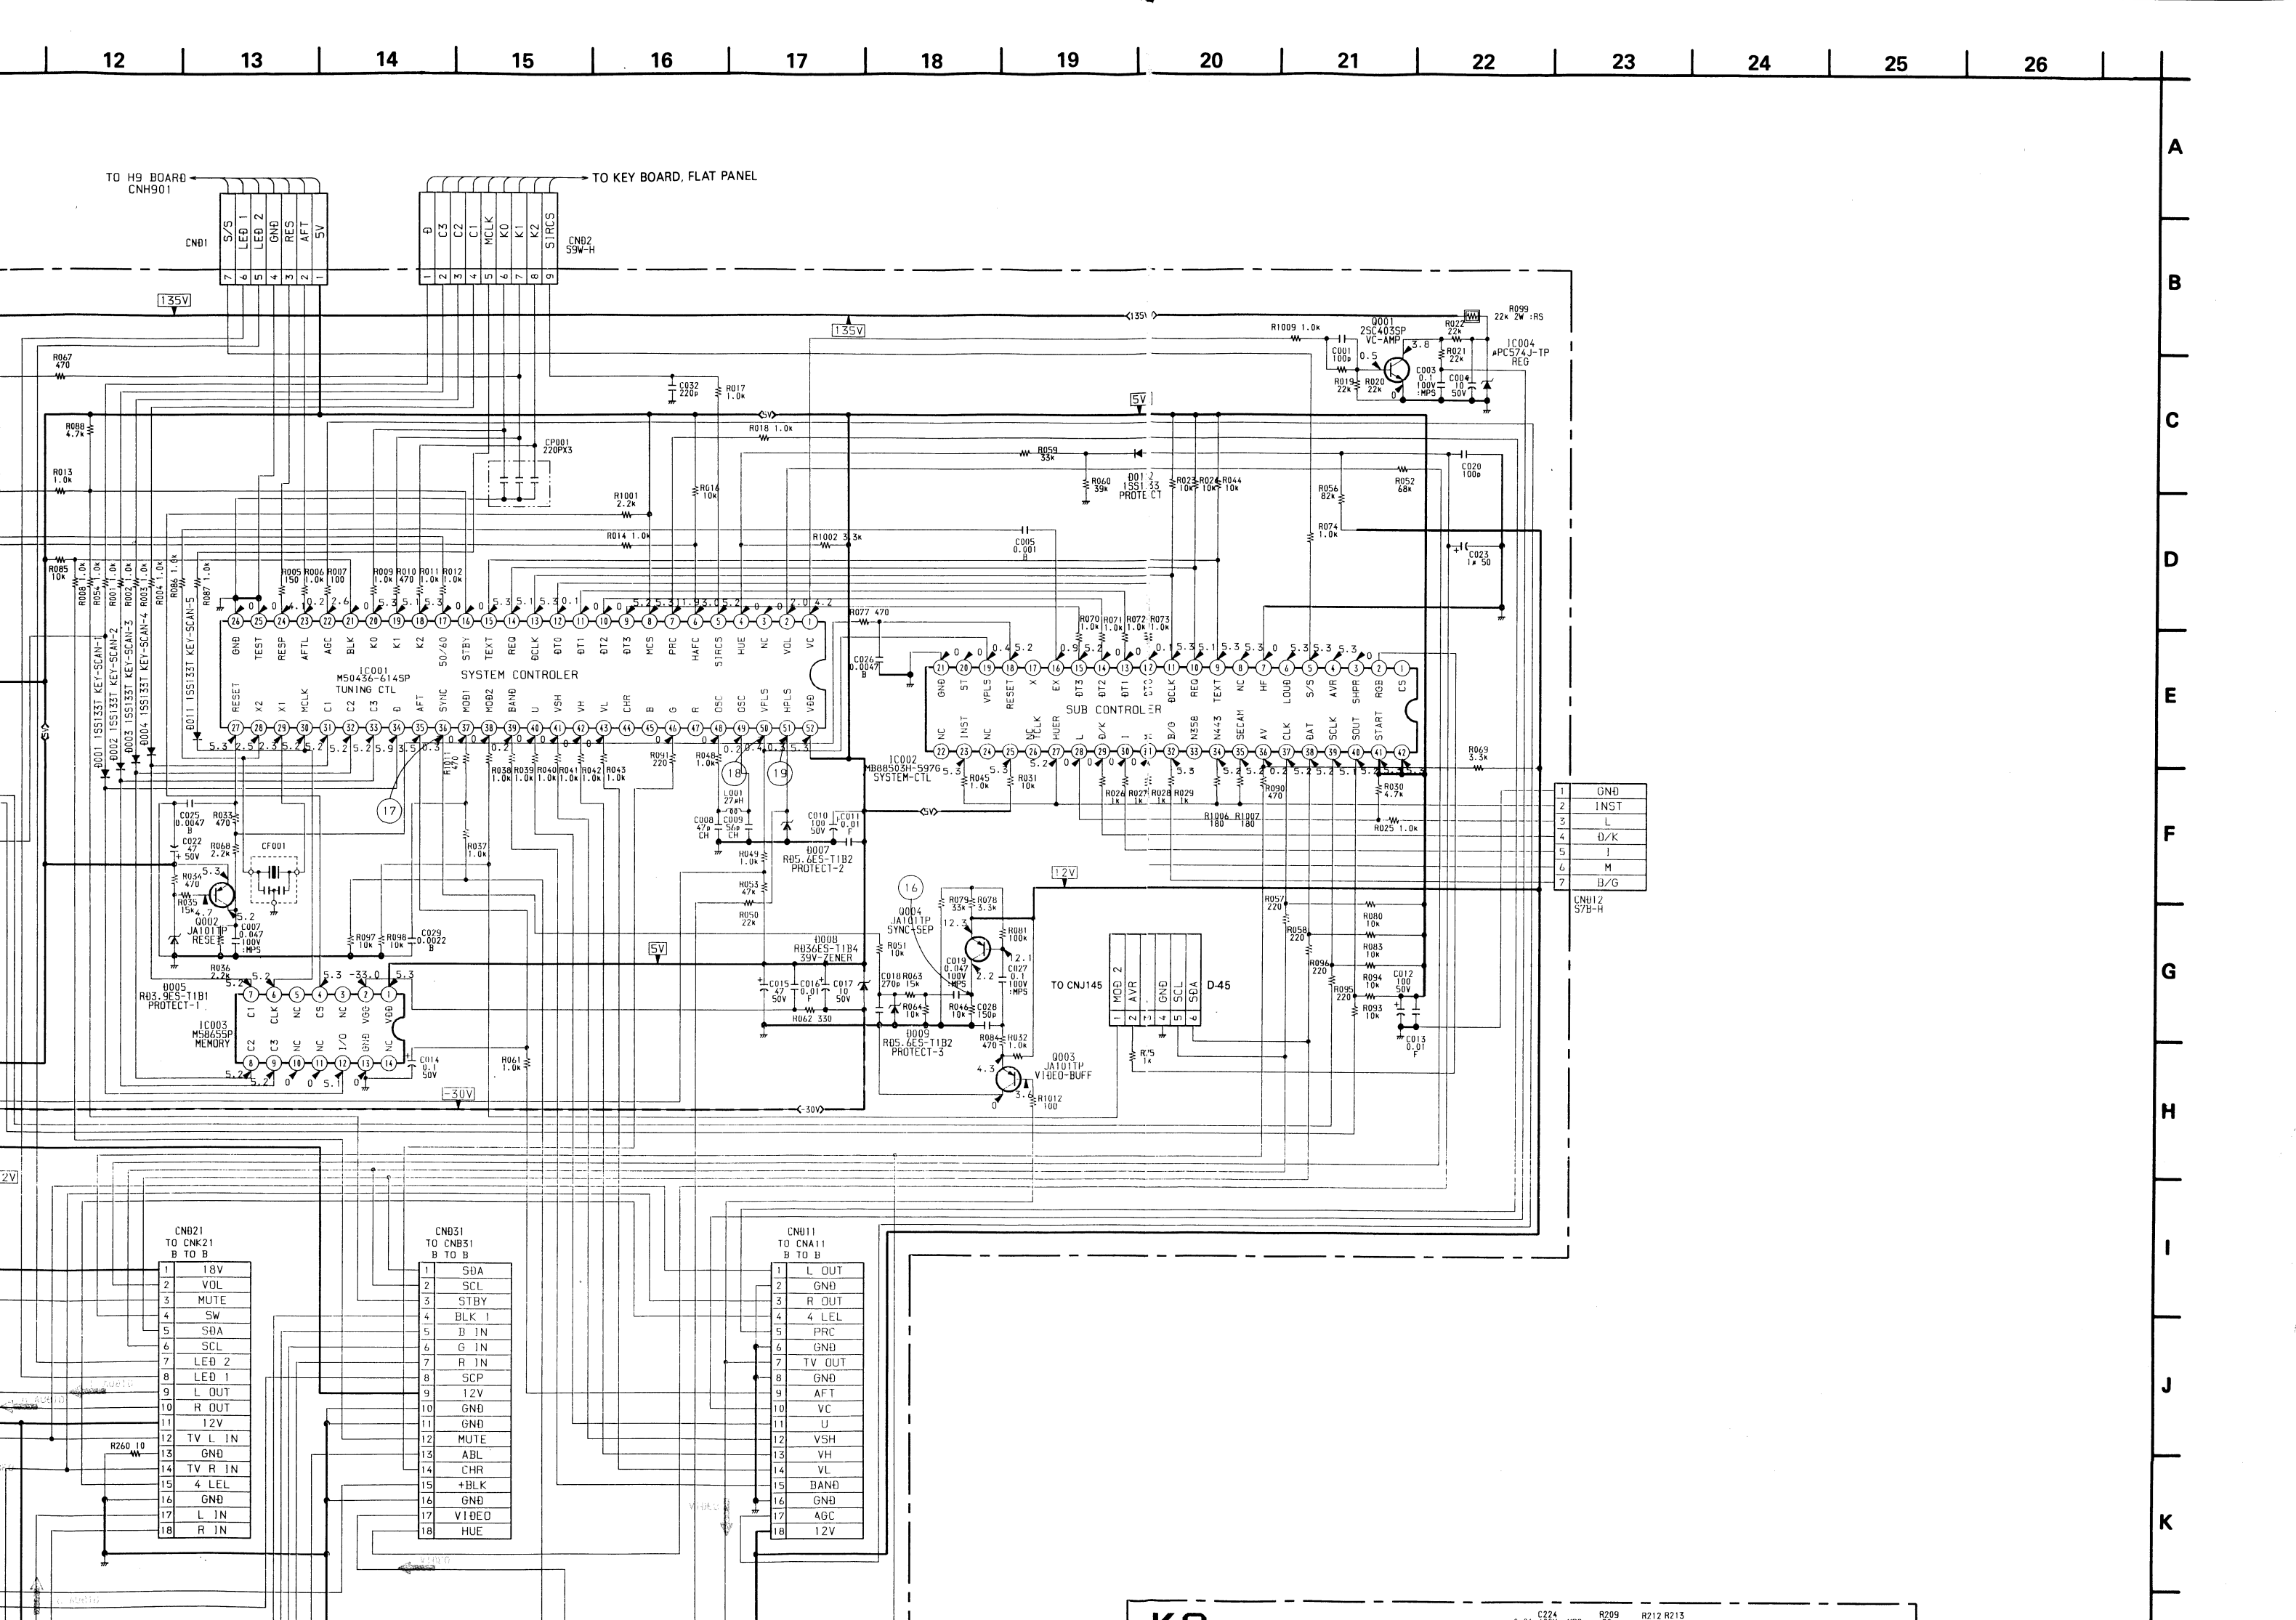

A
B
C
D
E
F
G
H
I
J
K

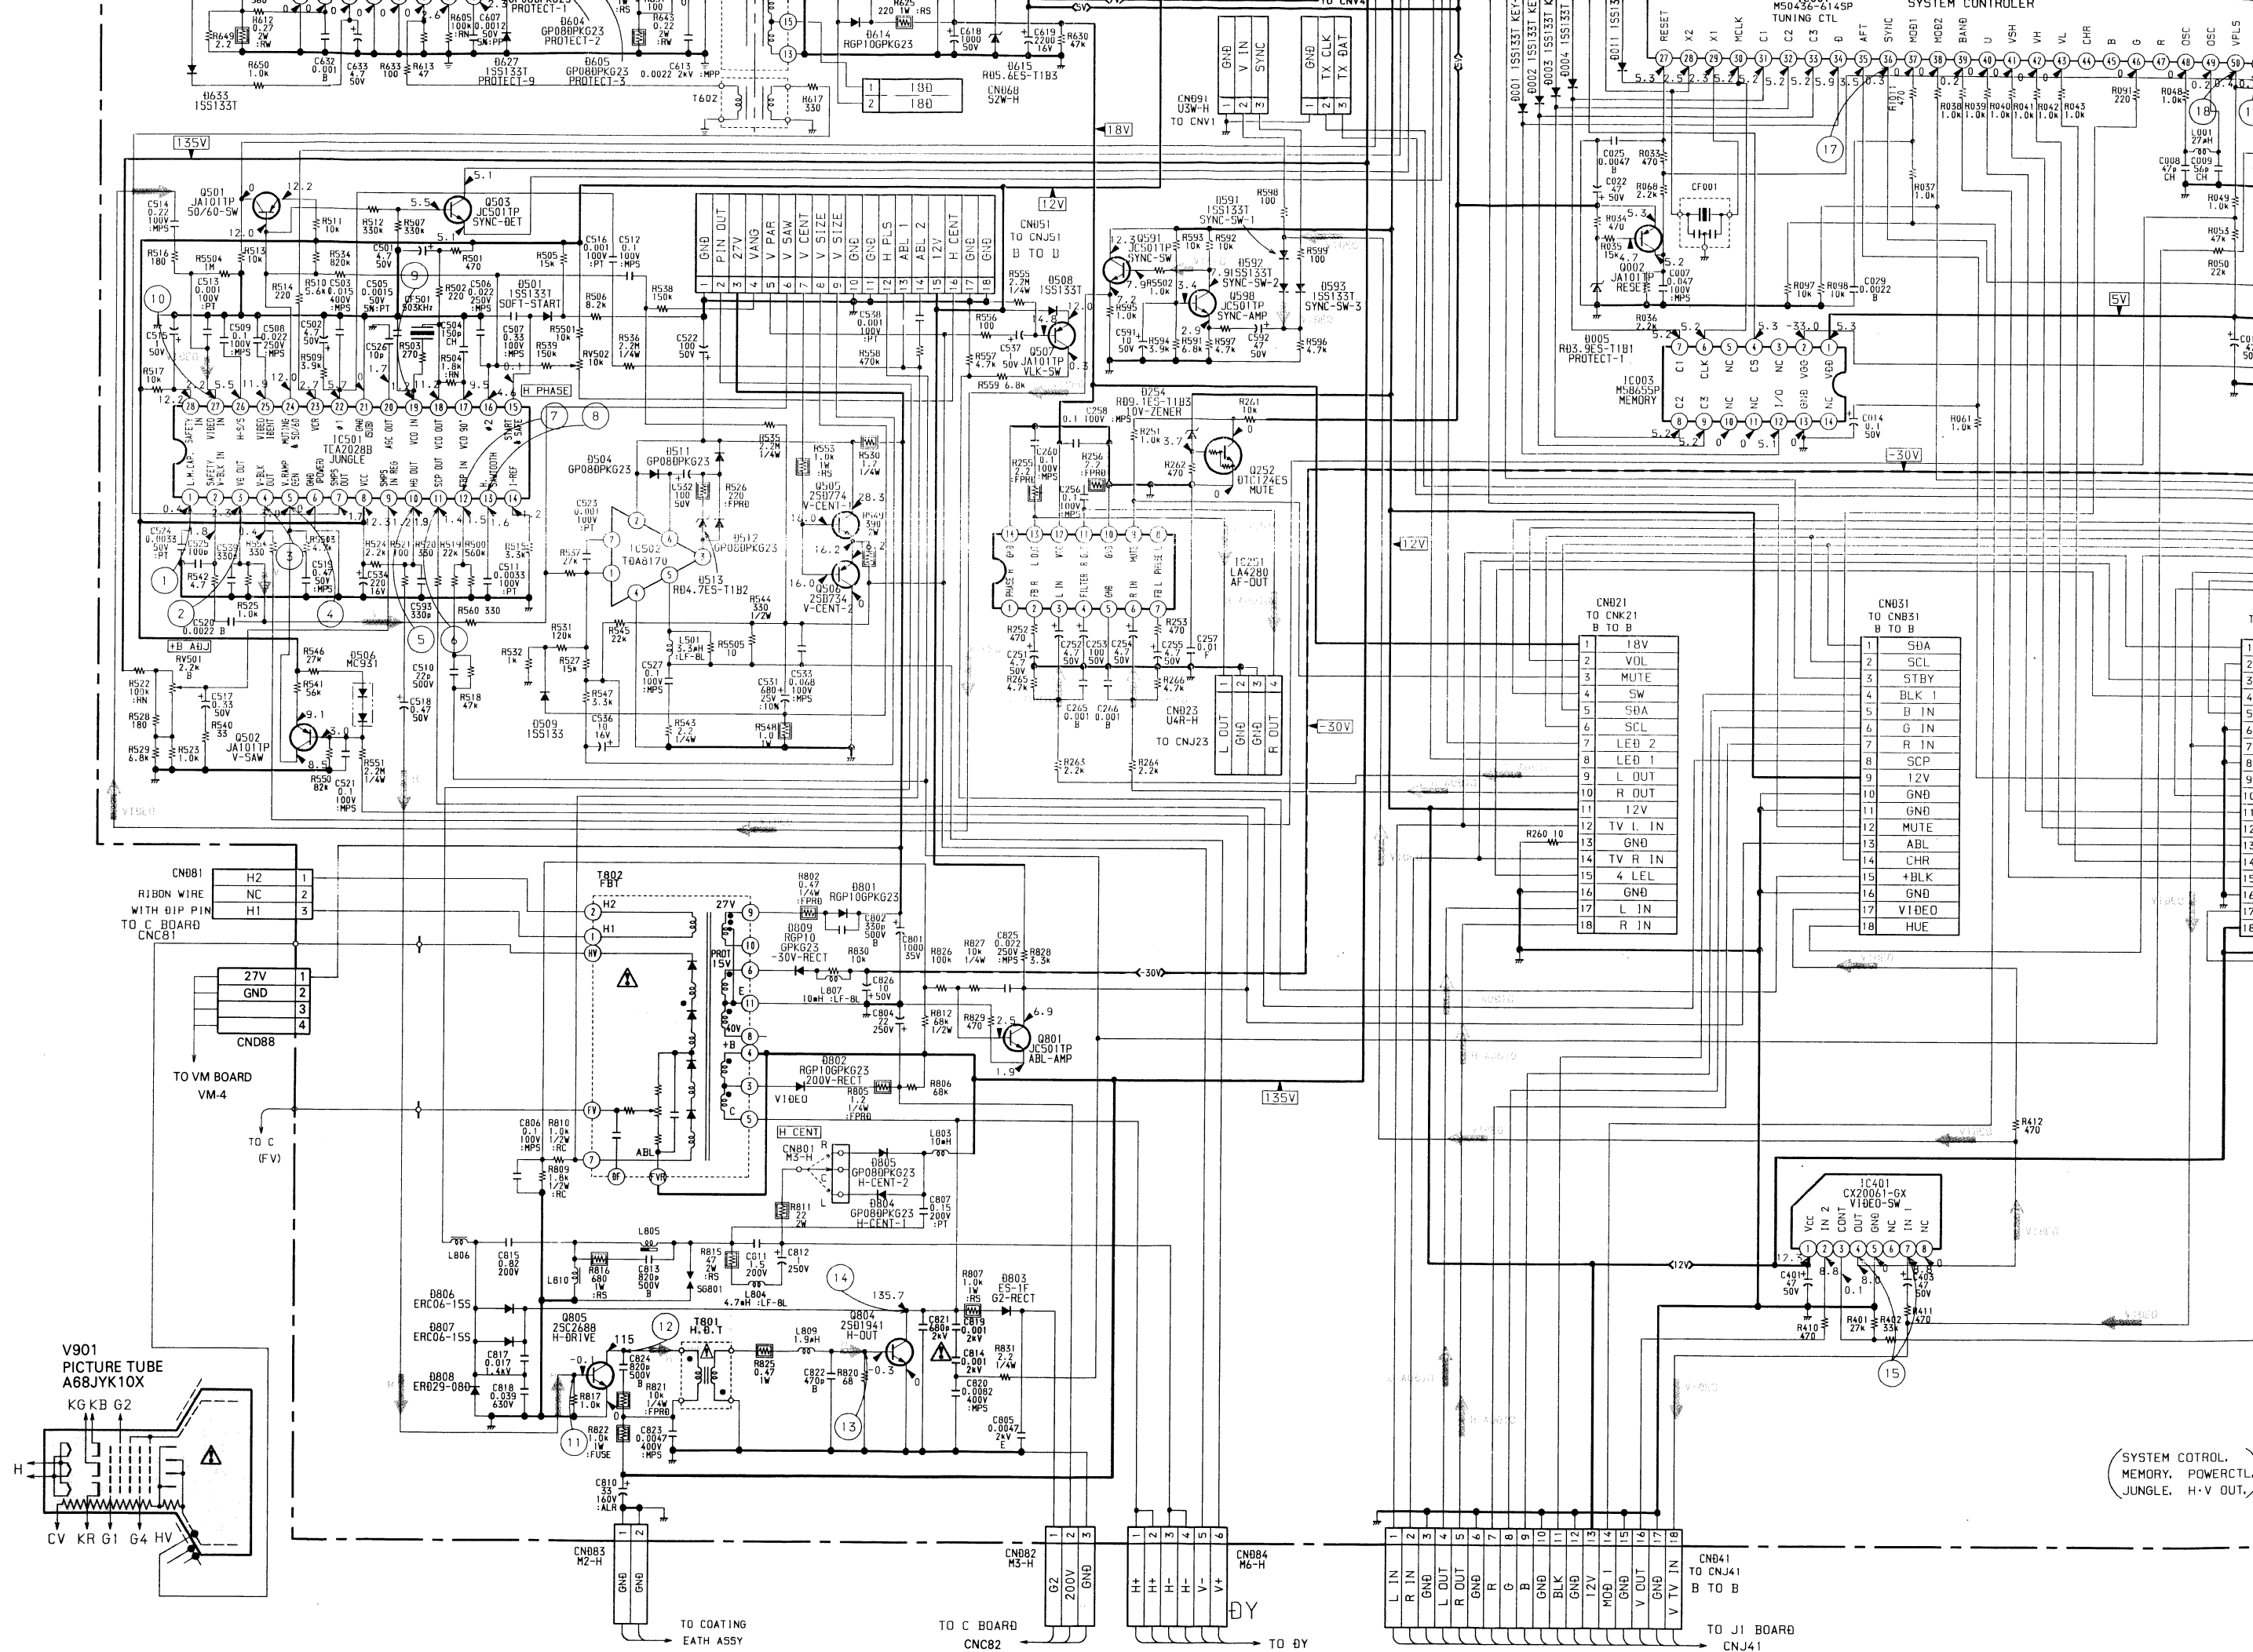

(SYSTEM COTROL,
MEMORY, POWERC
JUNGLE. H·V QU

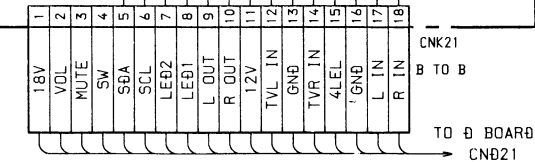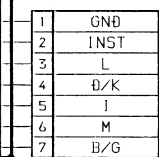




Ks [AF INTERFACE]

D [AF OUT, Y-CHROMA,
JUNGLE, V-H DEF


– KS Board –


– D Board –

KS BOARD IC201 TDA6200

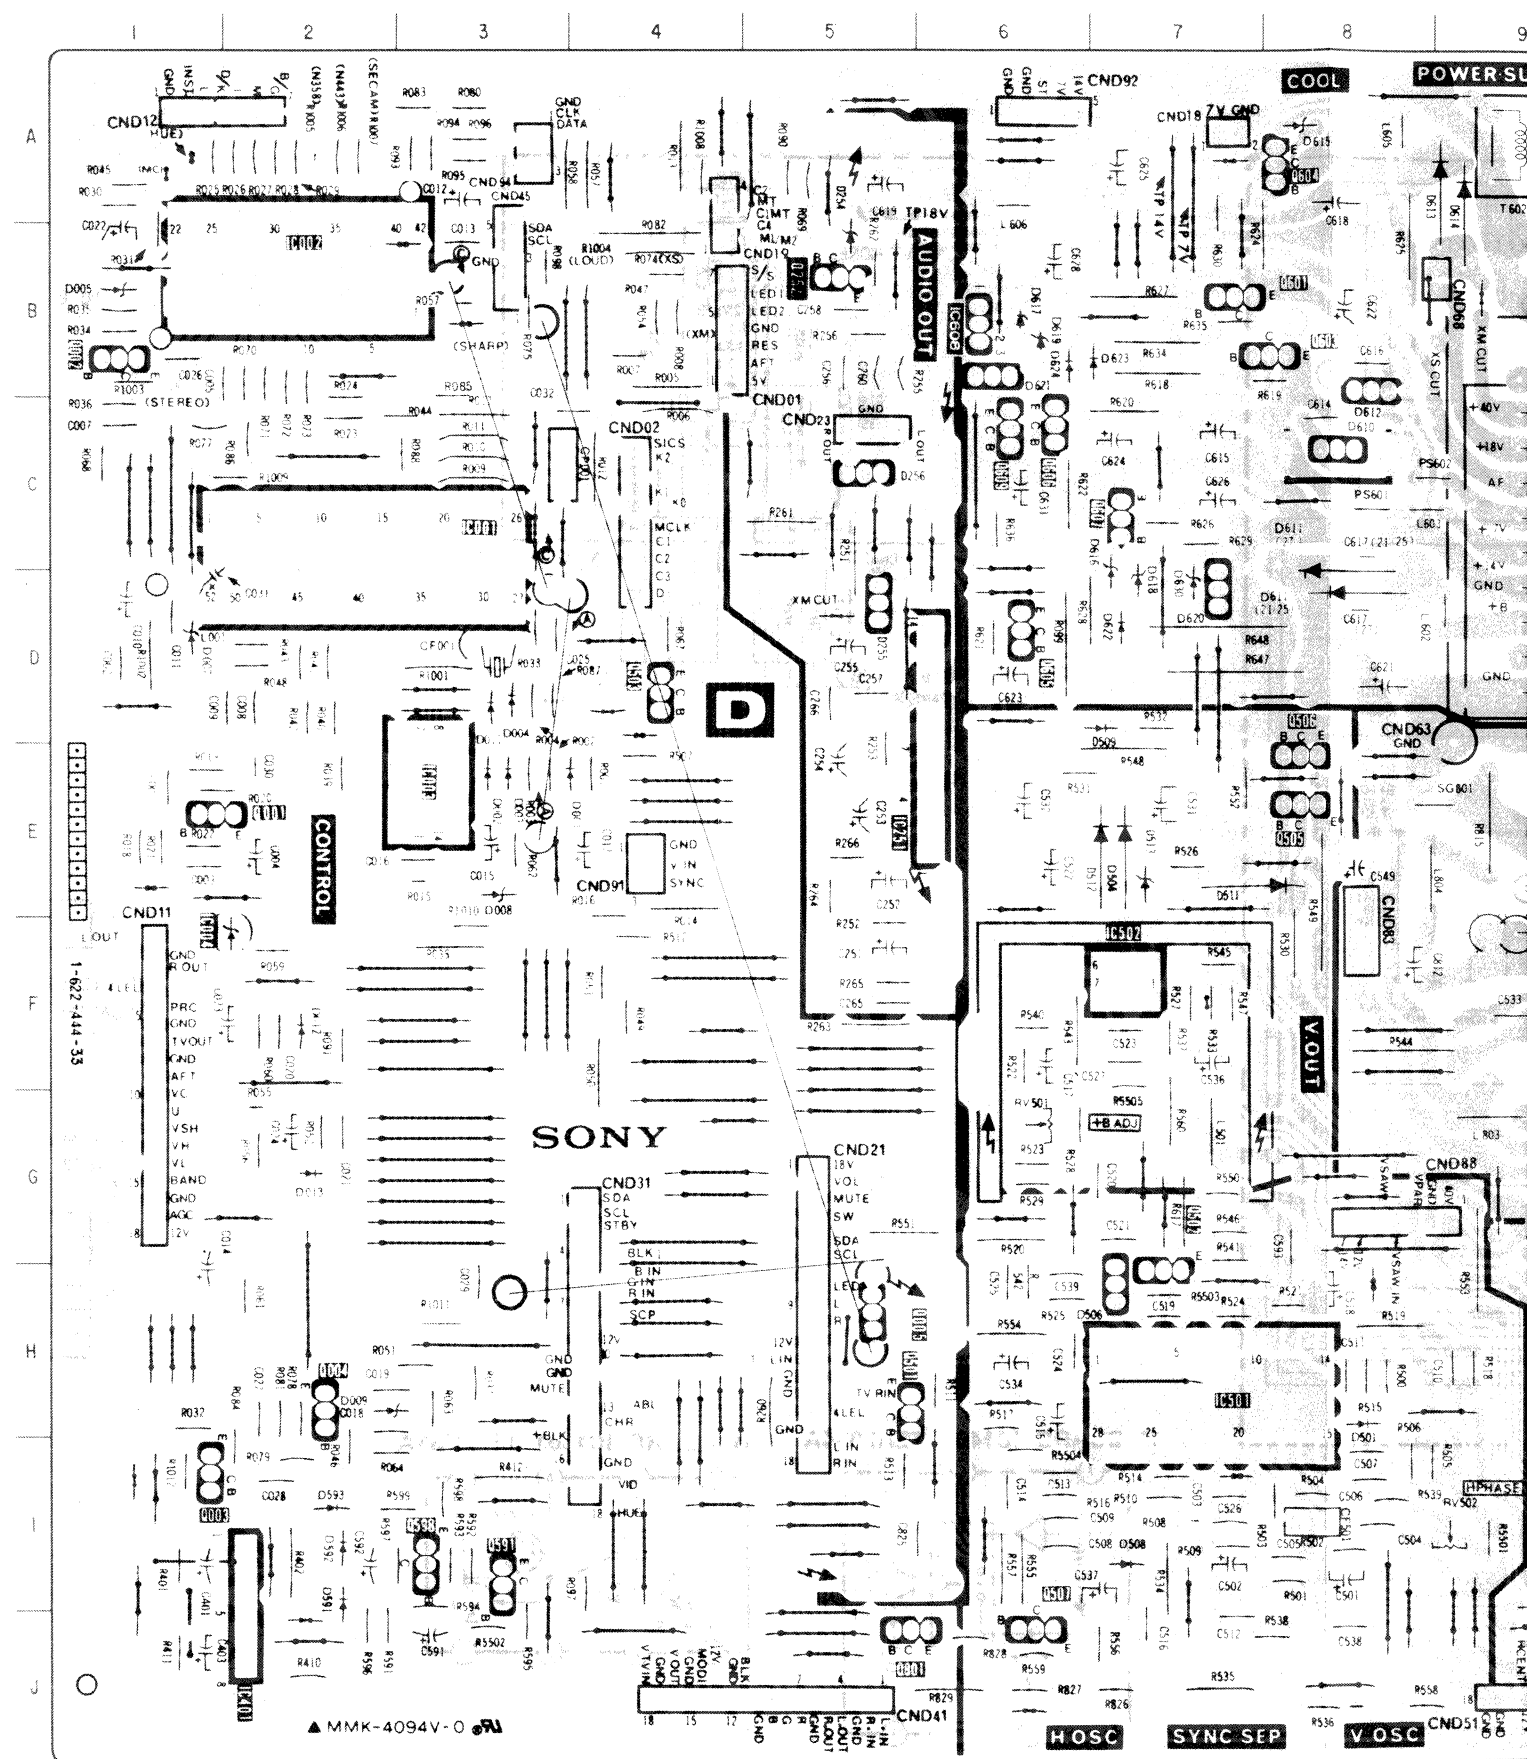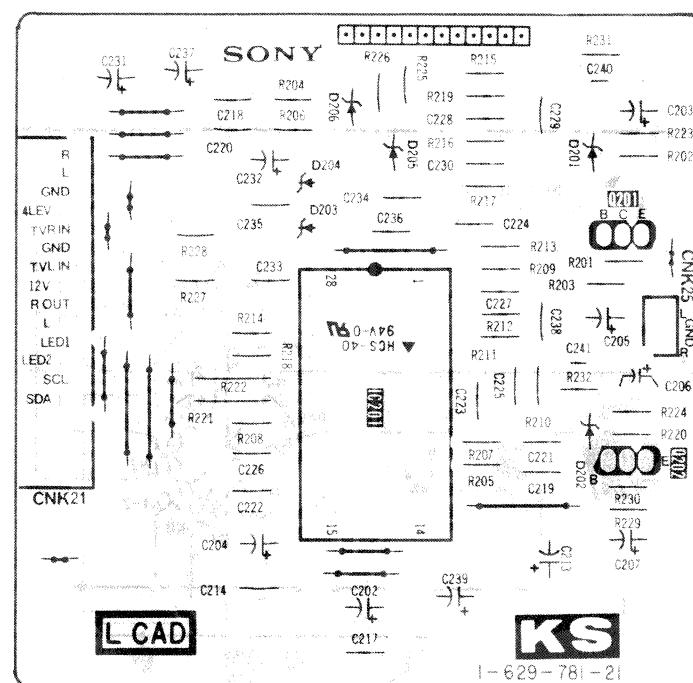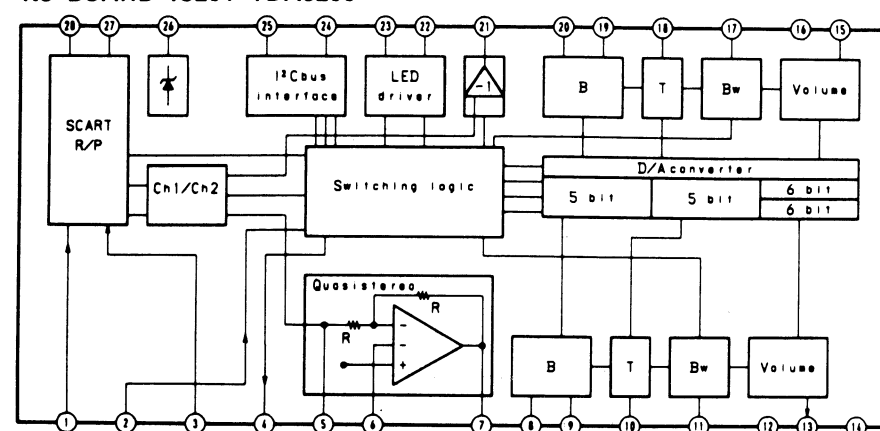


- **D BOARD WAVEFORM**

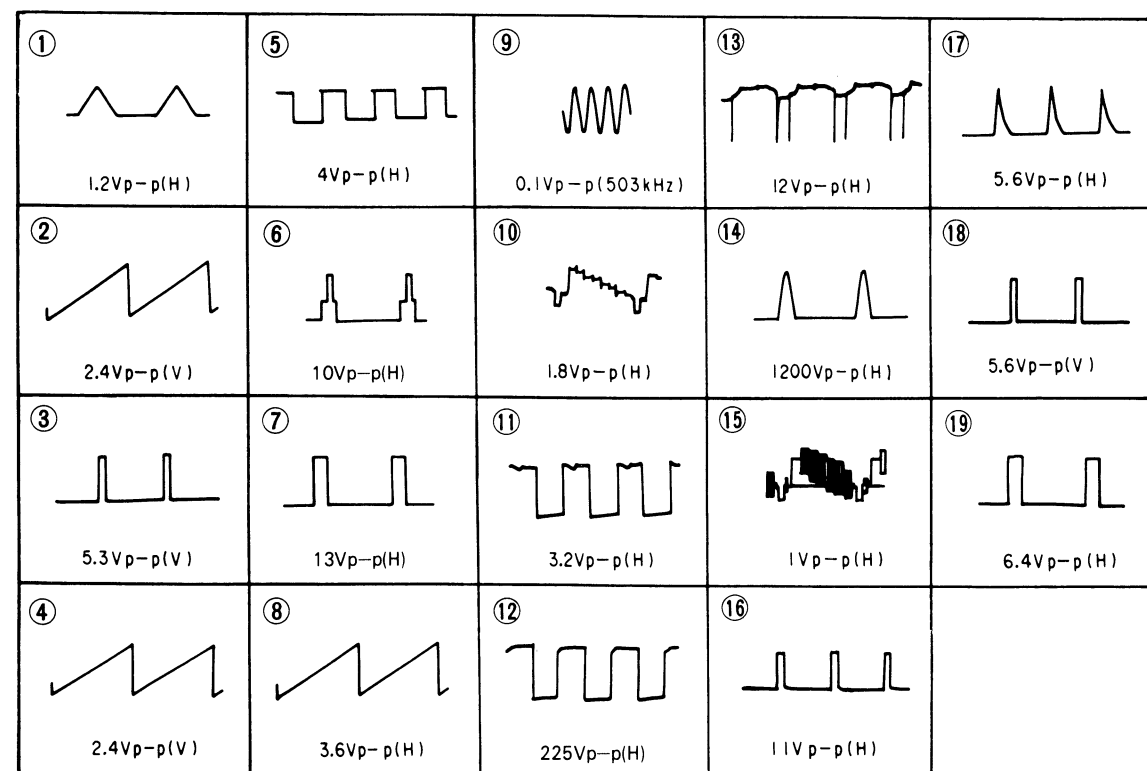

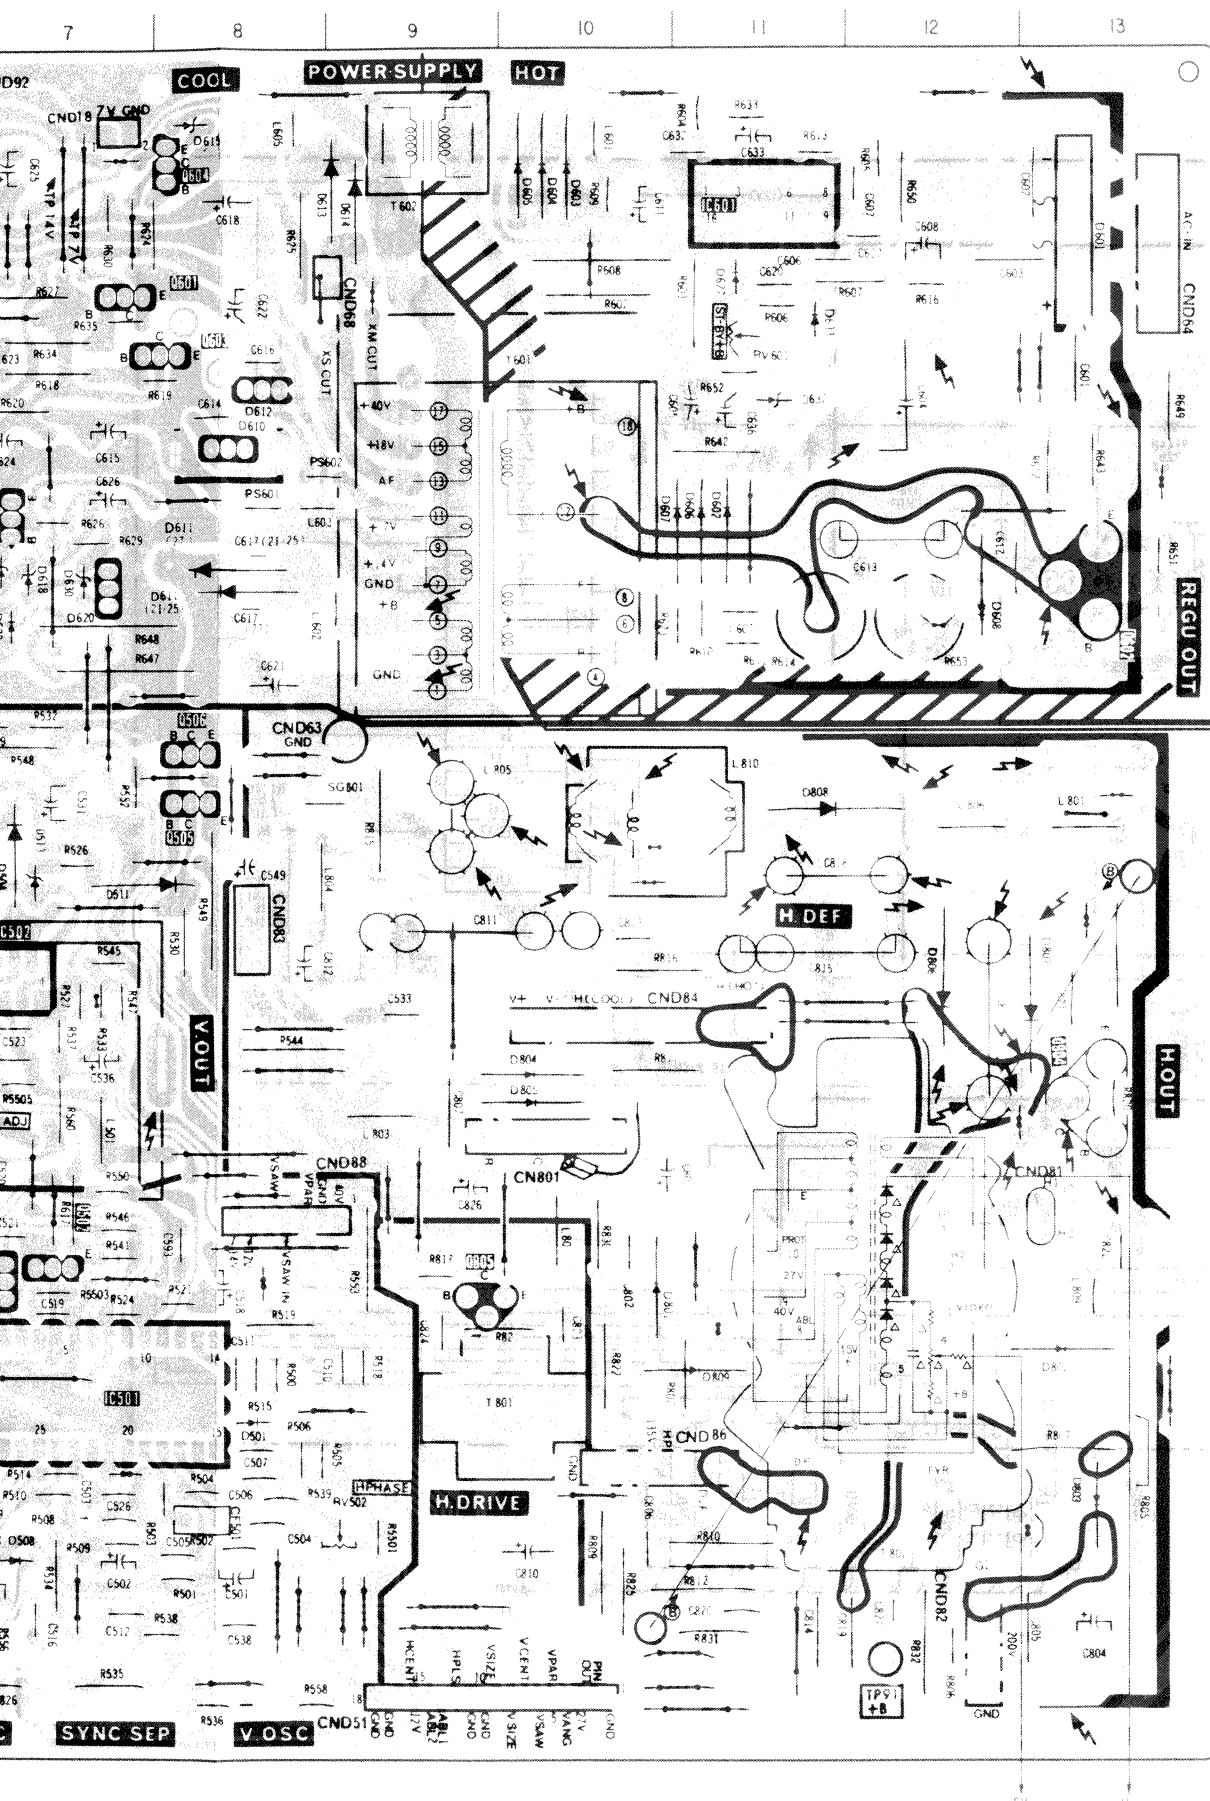


IC	DIODE
IC001 D-3	D001 E-4
IC002 B-2	D002 E-3
IC003 E-3	D003 E-3
IC004 F-2	D004 D-3
IC251 E-6	D005 B-1
IC401 J-2	D007 D-1
IC501 H-7	D008 T-3
IC502 F-7	D009 I-3
IC601 B-11	D011 E-3
	D012 F-2
	D013 G-2
TRANSISTOR	
Q001 E-2	D254 B-5
Q002 B-1	D501 I-8
Q003 I-2	D504 E-7
Q004 H-2	D506 H-7
Q252 B-6	D508 I-7
Q501 H-6	D511 F-8
Q502 H-7	D512 E-7
Q503 D-4	D513 F-7
Q505 E-8	D591 J-2
Q506 E-8	D592 I-2
Q507 J-6	D593 I-2
Q591 I-3	D601 B-13
Q598 I-3	D602 C-11
Q601 B-8	D603 A-10
Q602 D-13	D604 A-10
Q603 B-8	D605 A-10
Q604 A-8	D606 C-11
Q605 D-6	D607 C-11
Q606 C-6	D608 D-11
Q607 C-7	D610 C-8
Q608 B-6	D611 D-8
Q609 C-6	D612 C-8
Q801 J-6	D613 A-9
Q804 G-13	D614 B-9
Q805 H-10	D615 A-8
	D616 D-7
	D617 B-6
	D618 D-7
	D619 B-6
	D620 D-8
	D621 C-6
	D622 D-7
	D623 C-7
	D624 C-7
	D627 B-11
	D630 D-7
	D632 C-11
	D633 C-11
	D801 H-11
	D802 H-13
	D803 I-13
	D804 G-10
	D805 G-10
	D806 T-12
	D808 E-12
	D809 H-11
VARIABLE RESISTOR	
RV501 G-6	
RV502 I-9	
RV601 B-11	


D BOARD IC501 TEA2028A

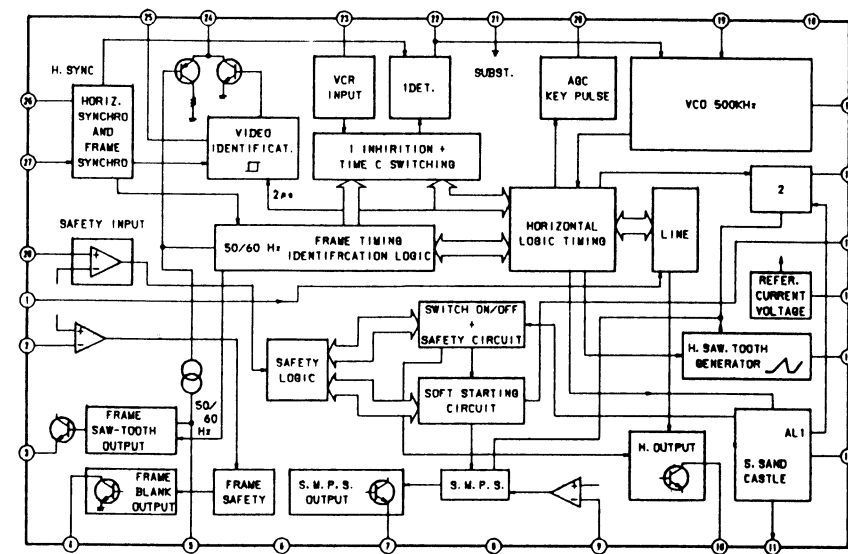


D BOARD IC601 TEA2164

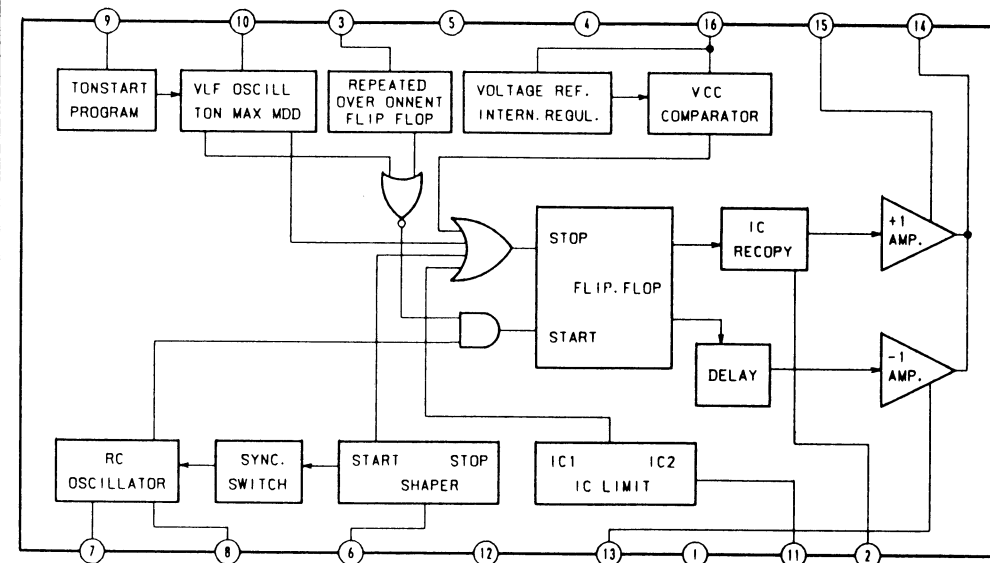


D BOARD IC502 TDA8170

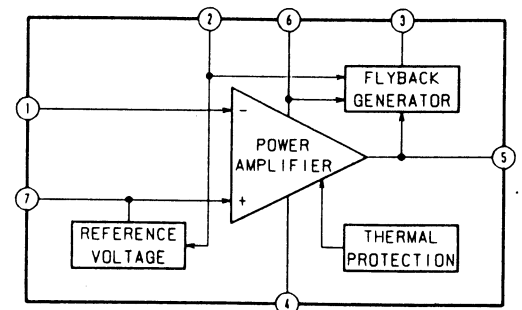

D BOARD IC251 LA4280

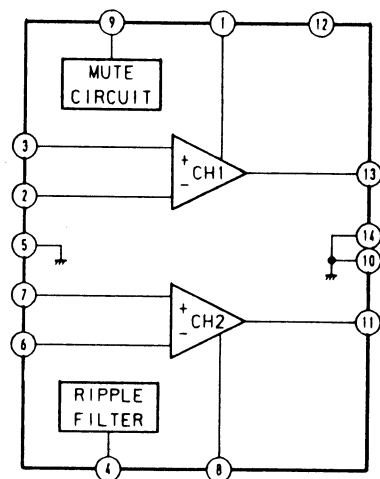**NOTE:**

The circuit indicated as left contains high voltage of over 600 Vp-p. Care must be paid to prevent an electric shock in inspection or repairing.





1	2	3	4	5	6	7	8
---	---	---	---	---	---	---	---

J₁ [INTERFACE]

J2 [HEADPHONE JACK]


– J1 Board –

- C Board -

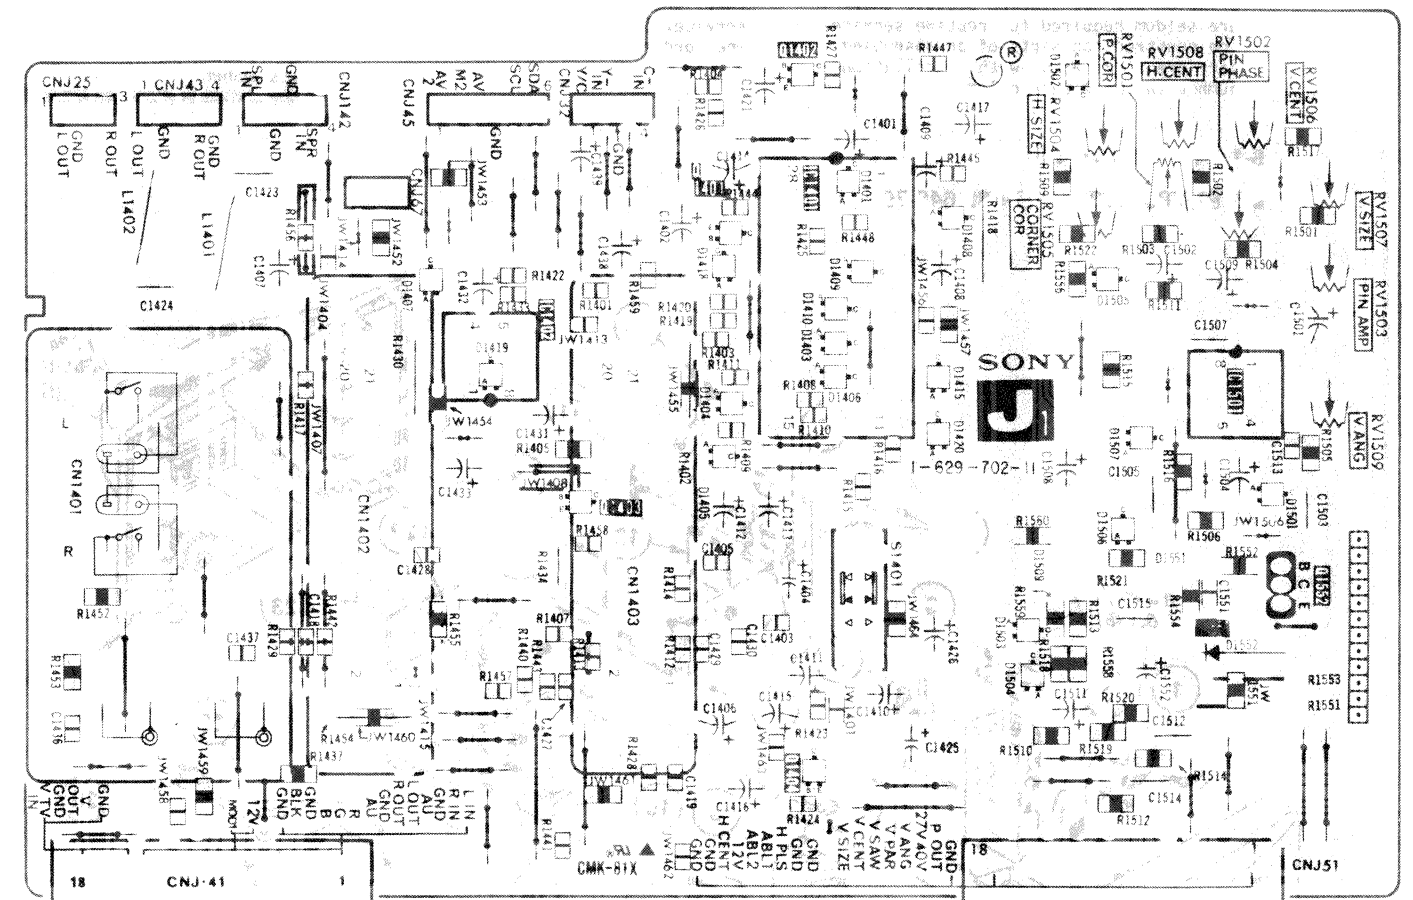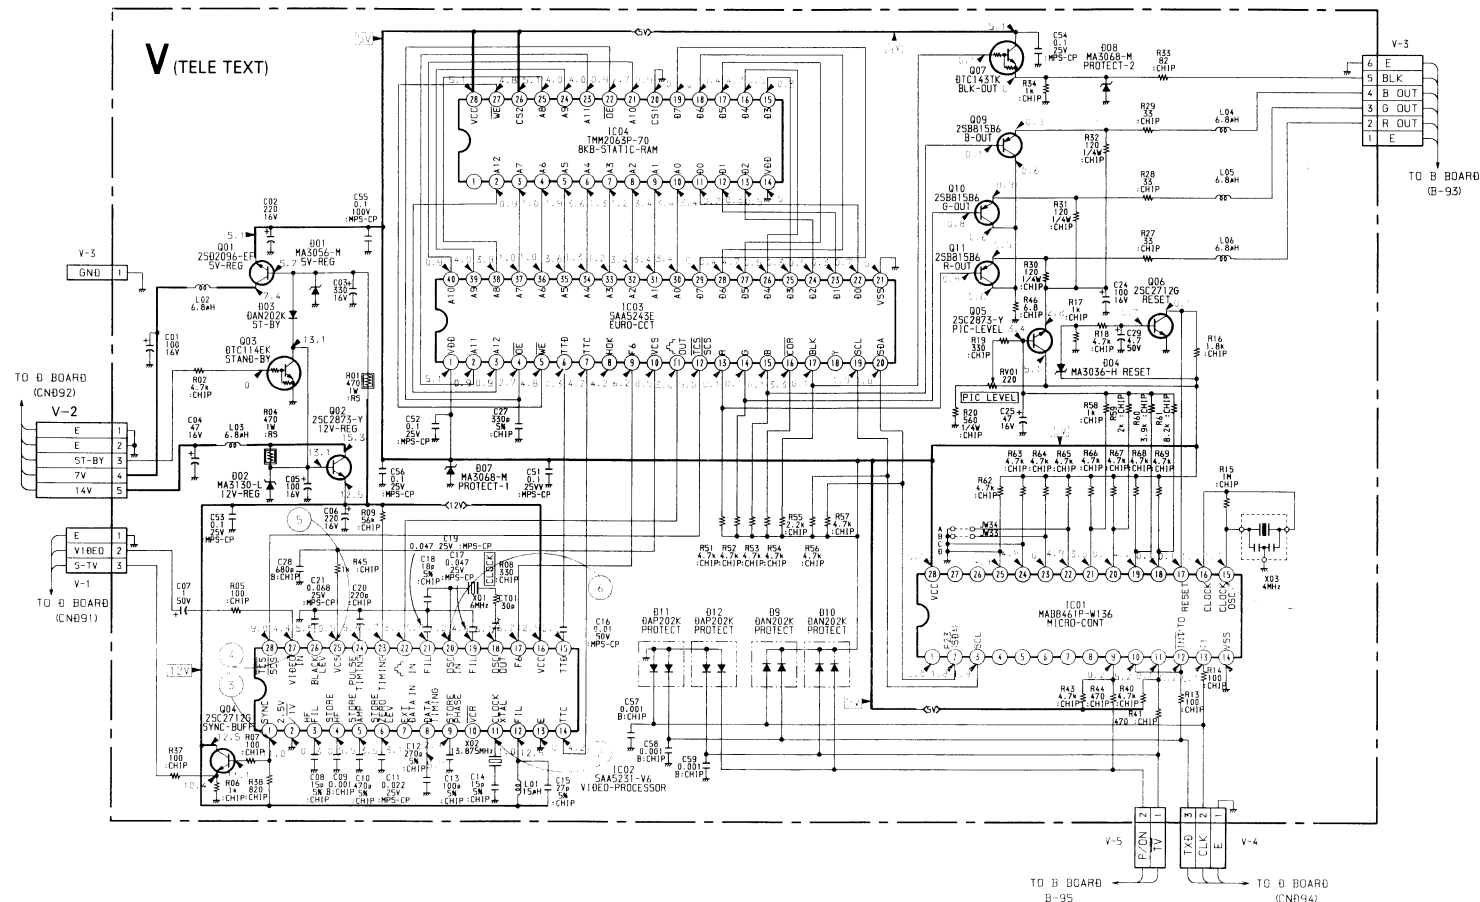


- V Board -

● V BOARD WAVEFORM

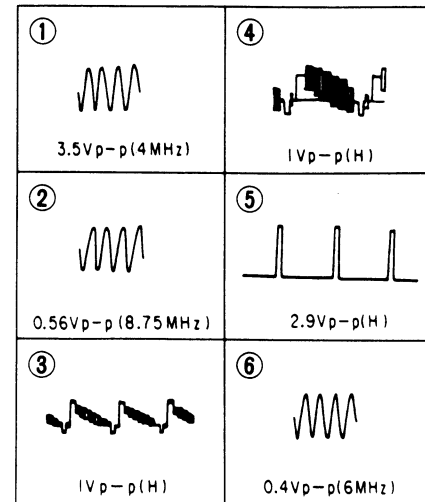

– J2 Board –

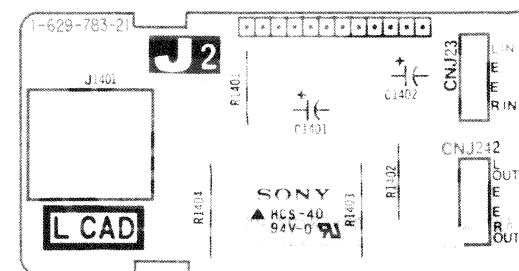

8

J1

(INTERFACE)

J2

(HEADPHONE JACK)


C

(R-G-B OUT)


V

(TELETEXT)


— J1 Board —

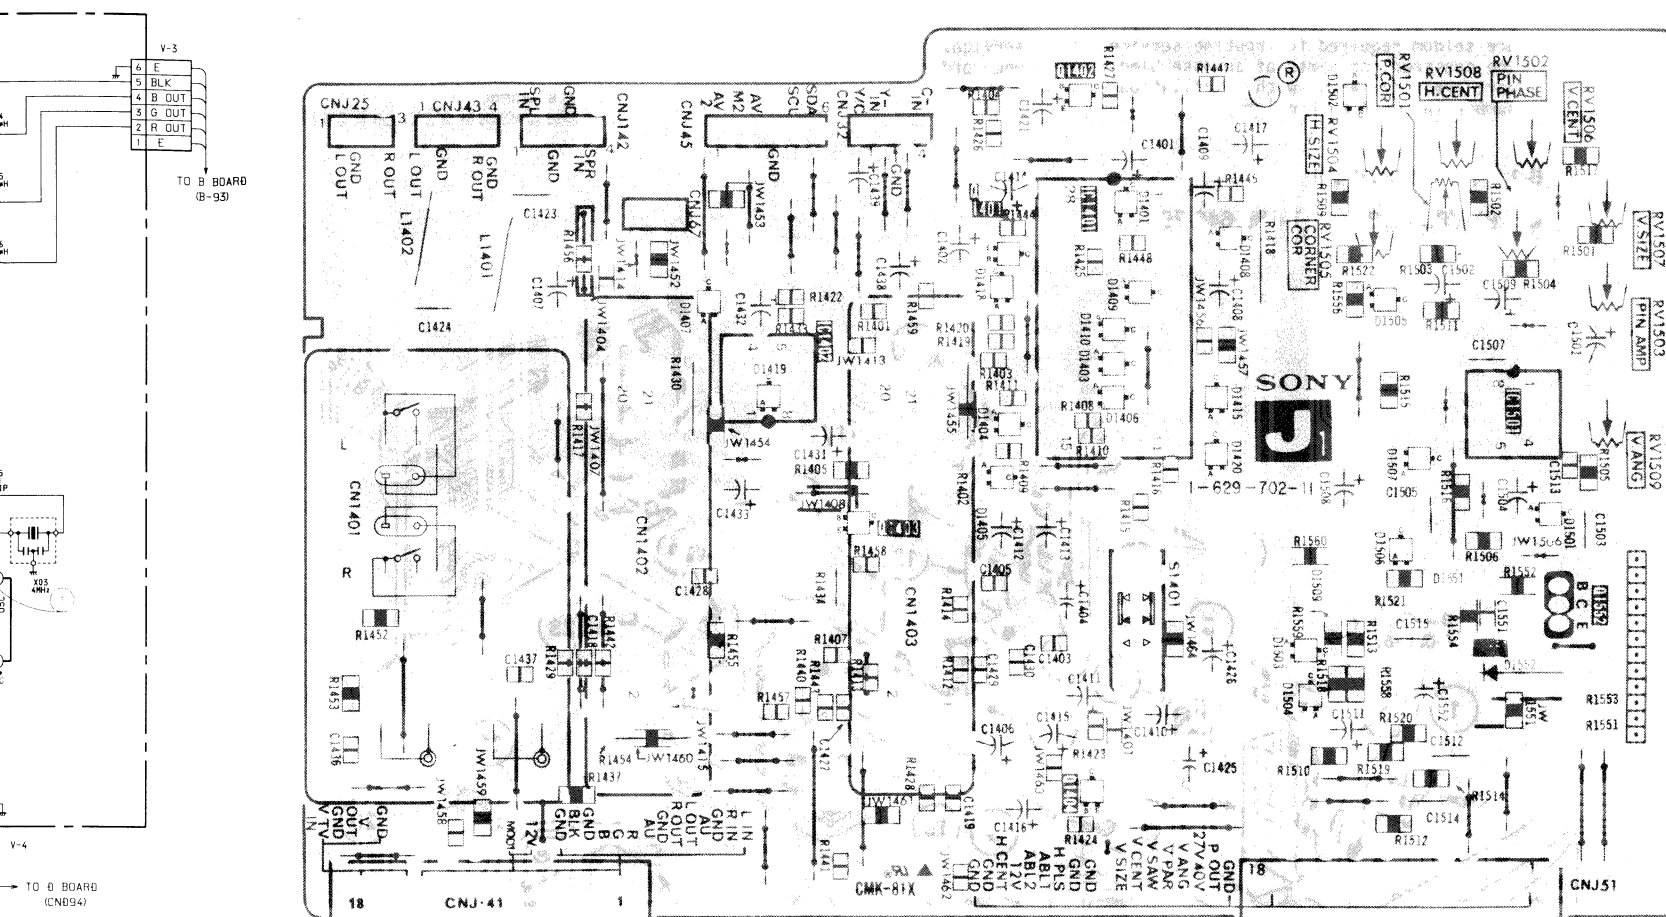


— J2 Board —

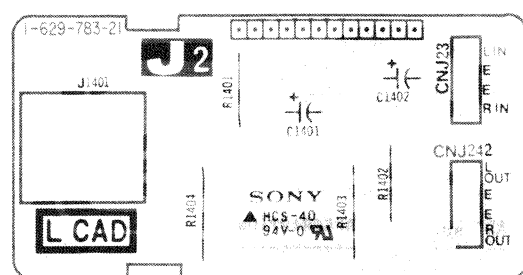

— C Board —

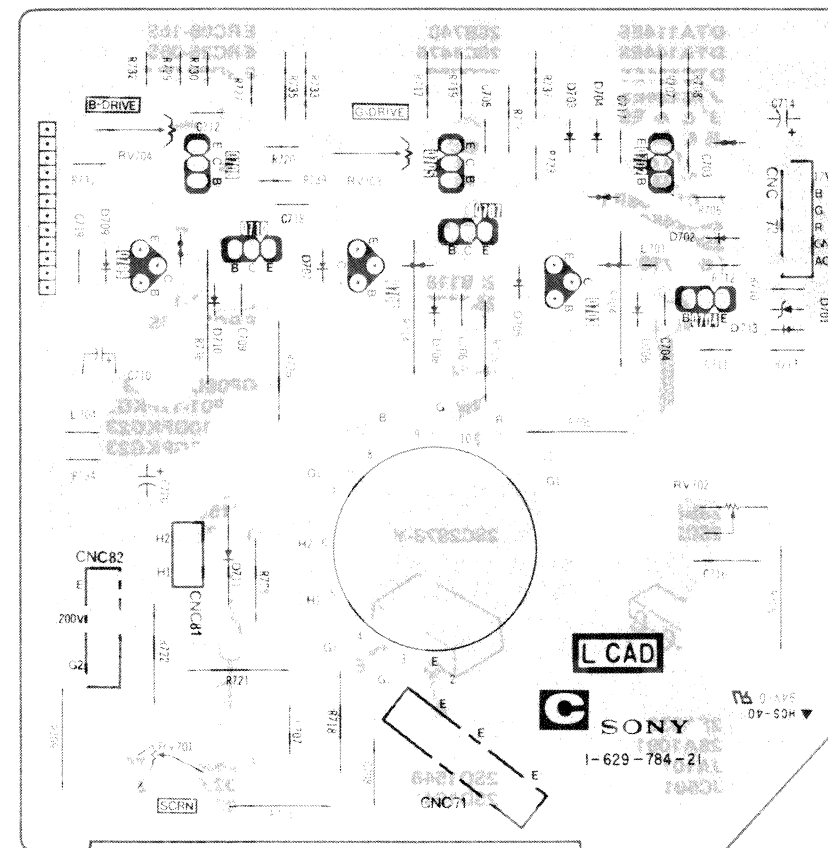


— V Board —

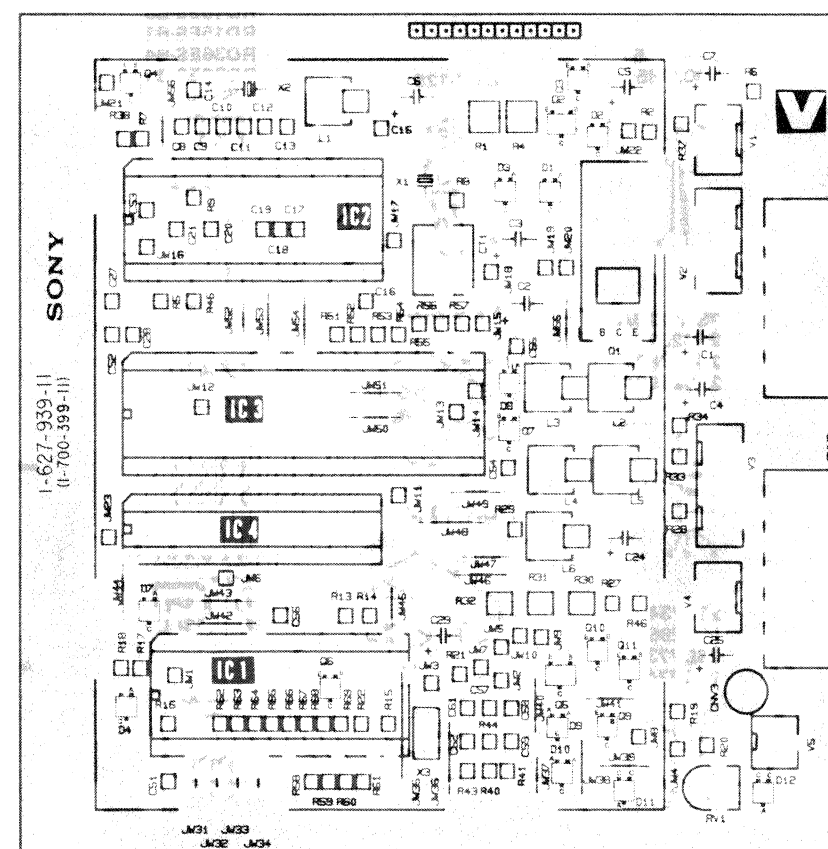


SECTION 6
EXPLODED VIEWS

5-4. SEMICONDUCTORS


BX1387
SBX1483




CXA1114P
MAB8461P
SAA5231-V6
TDA4555
TDA4580
TDA6200
TDA6600
TEA2028B
TMM2063D




CX20061




LA4280




M50436-614SP




M58655P




MB88503H




NJM7812B
μPC7812J




SAA5243E
SDA5241




TBA129
TEA2014A
TEA2031A




TDA2556
TDA2558




TDA2595



TDA3541
TDA4510
TDA8442
TEA2162A
TEA2164




TDA8170




μPC574J




2SB734
2SC2958
2SD773
2SD774




DTA114ES
DTA144ES
DTC114ES
DTC124ES
DTC144ES
2SA1048
2SA1175
2SC403SP
2SC1740SRT
2SC2458
2SC2603
2SC2710




DTC114EK
2SB815B6
2SC2712G




2SA933
2SA1091
JA101
JC501




2SA1175
2SC2785




2SA1220A
2SC2611
2SC2688
2SC2690A




2SB740
2SC1475
2SD789




2SB1185
2SD1761




2SC2873-Y




2SD1548
2SD1941




CTU-12S




DAN-202K




DAP202K




ERC06-15S
ERC25-06S
ERD29-08J




EQB01-11
ERC24-06S
ERD28-06S
ES1F
GP08DPKG23
RGP01-17PKG23
RGP10GPKG23
RGP15GPKG23
1SS168
1SS238
1S1555
10E2




HZS39NB4TD
RD3.6ES-B2
RD3.9ES-B1
RD4.7ES-B1
RD5.6ES-B2
RD6.2ES-B2
RD6.8ES-B2
RD7.5ES-B3
RD9.1ES-B3
RD10ES-B3
RD15ES-B1
RD36ES-B4
RD39ES-B4
1SS119
1SS120
1SS133




KBU4JL




MA3036H
MA3056M
MA3068M
MA3130L




MC921




MC931




U05G
V19E



SE303AY




SLP162B



SR632D




TLR124
LD201VR



NOTE:
• Items with no part number and no description are not stocked because they are seldom required for routine service.
• The construction parts of an assembled part are indicated with a collation number in the remark column.
• Items marked "★" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

The components identified by shading and mark ▲ are critical for safety.
Replace only with part number specified.

6-1. REAR COVER
●: BVTP3 x 12 7-685-648-79

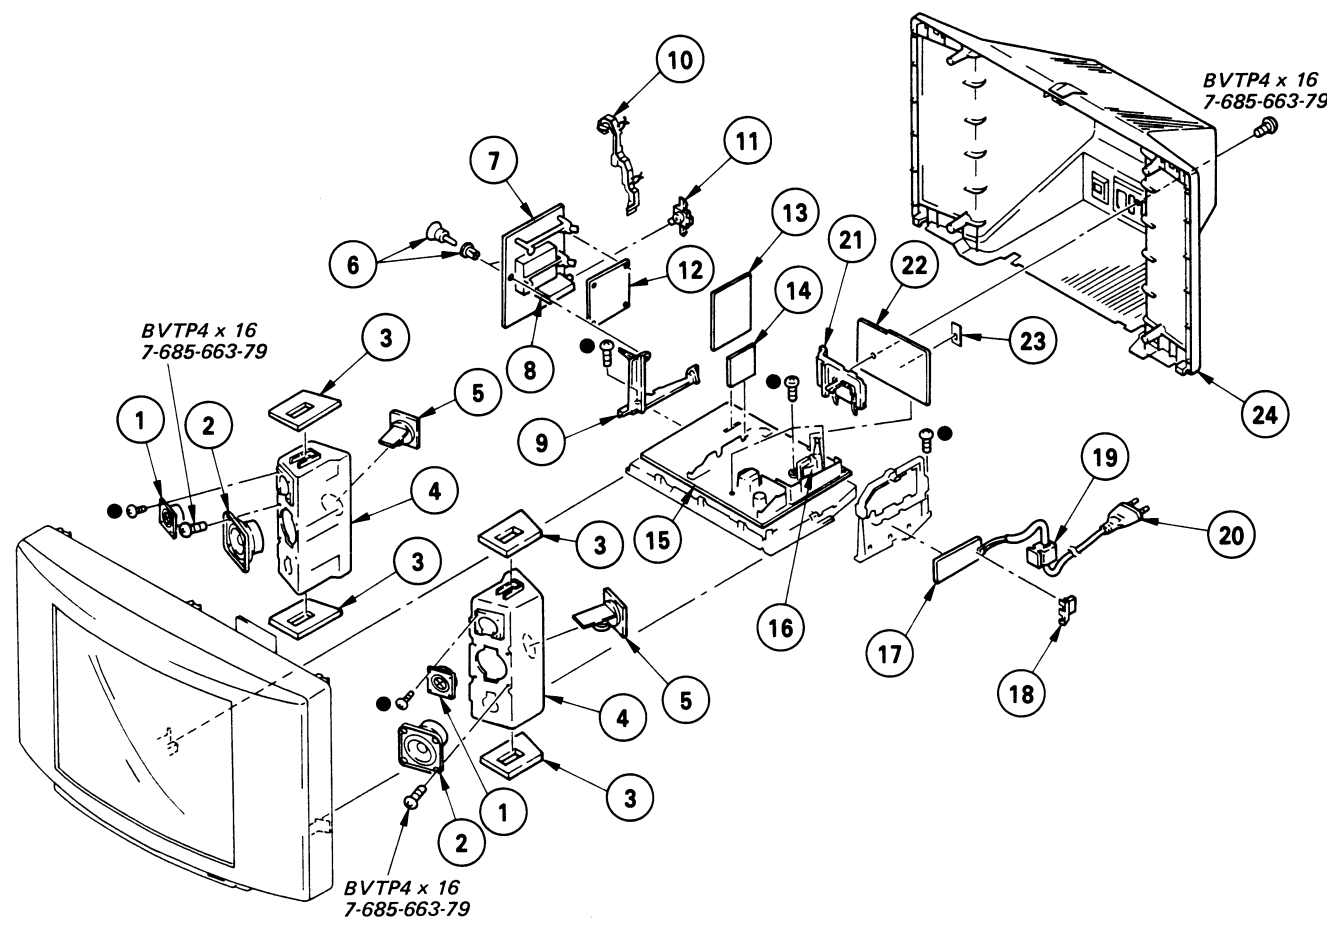

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
1	1-544-146-11	SPEAKER		14	*1-629-781-21	KS BOARD	
2	1-544-147-11	SPEAKER		15	*A-1345-839-A	D BOARD, COMPLETE	
3	*4-394-306-01	CUSHION, BOX		16	▲1-439-416-11	TRANSFORMER ASSY, FLYBACK (UX-1600)	
4	X-4394-302-1	FRAME ASSY		17	*1-629-719-21	F1 BOARD	
5	1-236-510-11	NETWORK, DIVIDING		18	*4-386-620-02	COVER, POWER	
6	4-386-618-01	RIVET, T TYPE		19	▲4-022-115-01	HOLDER, AC CORD	
7	*A-1296-569-A	A BOARD, COMPLETE		20	▲1-559-346-12	CORD, POWER (WITH CONNECTOR) (AEP ONLY)	
8	▲1-465-053-11	TUNER, ET (UV-615S)		21	▲1-559-912-12	CORD, POWER (WITH CONNECTOR) (AUS ONLY)	
9	*4-386-629-12	BRACKET, A		22	*4-386-624-11	BRACKET, J	
10	*4-386-628-11	SUPPORTER, PC BOARD		23	*A-1388-088-A	J1 BOARD, COMPLETE	
11	*4-386-617-01	HOLDER, TERMINAL		24	4-394-328-01	COVER	
12	*A-1347-030-A	V BOARD, COMPLETE			4-394-312-01	COVER, REAR	
13	*A-1135-561-A	B BOARD, COMPLETE					

SECTION 6
EXPLODED VIEWS

NOTE:


- Items with no part number and no description are not stocked because they are seldom required for routine service.
- The construction parts of an assembled part are indicated with a collation number in the remark column.

- Items marked "★" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

The components identified by shading and mark Δ are critical for safety.
Replace only with part number specified.


6-1. REAR COVER

●: BVTP3 x 12 7-685-648-79

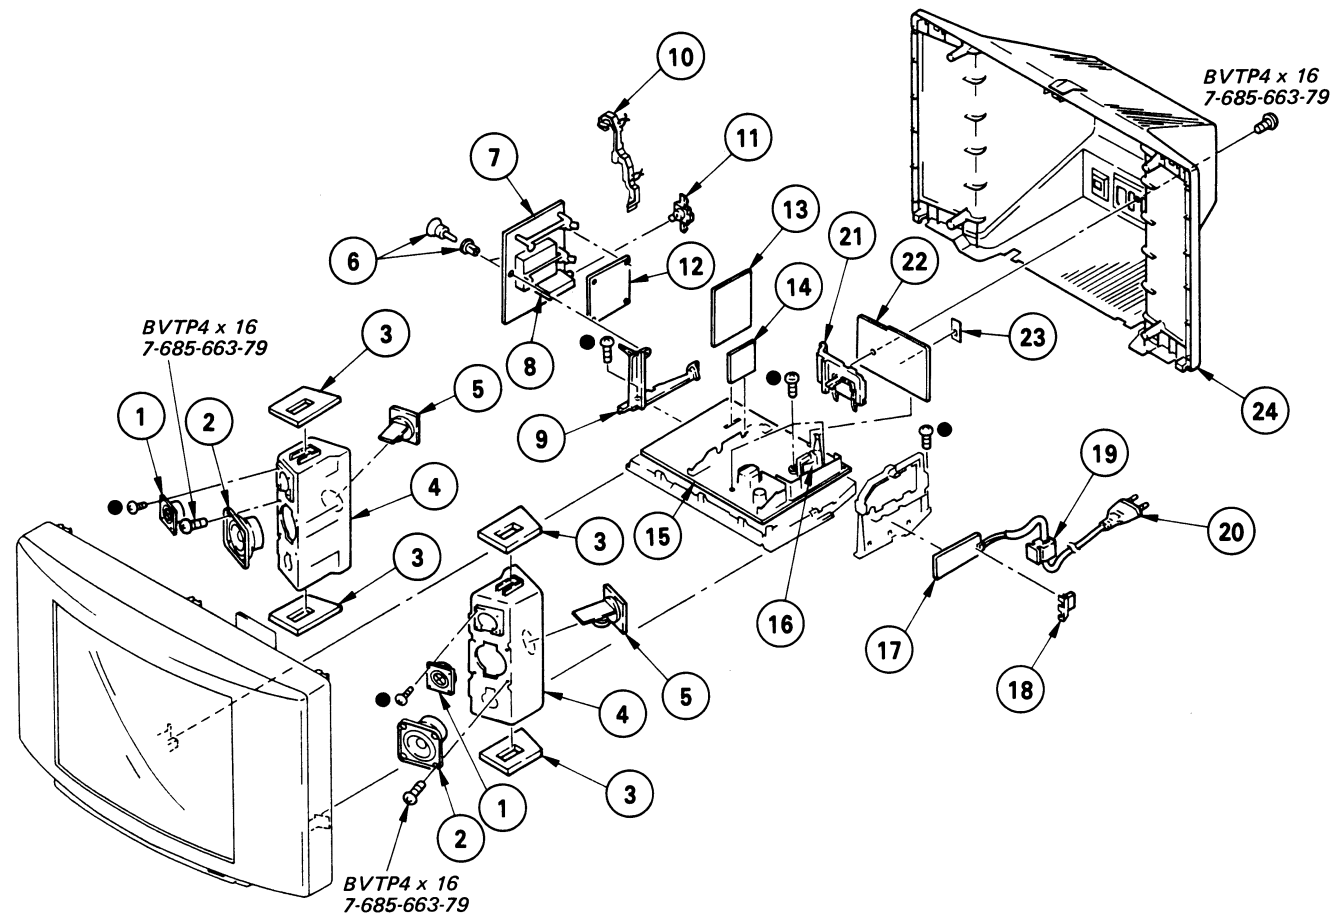

6-2. PICTURE TUBE

●: BVTP3 x 12 7-685-648-79

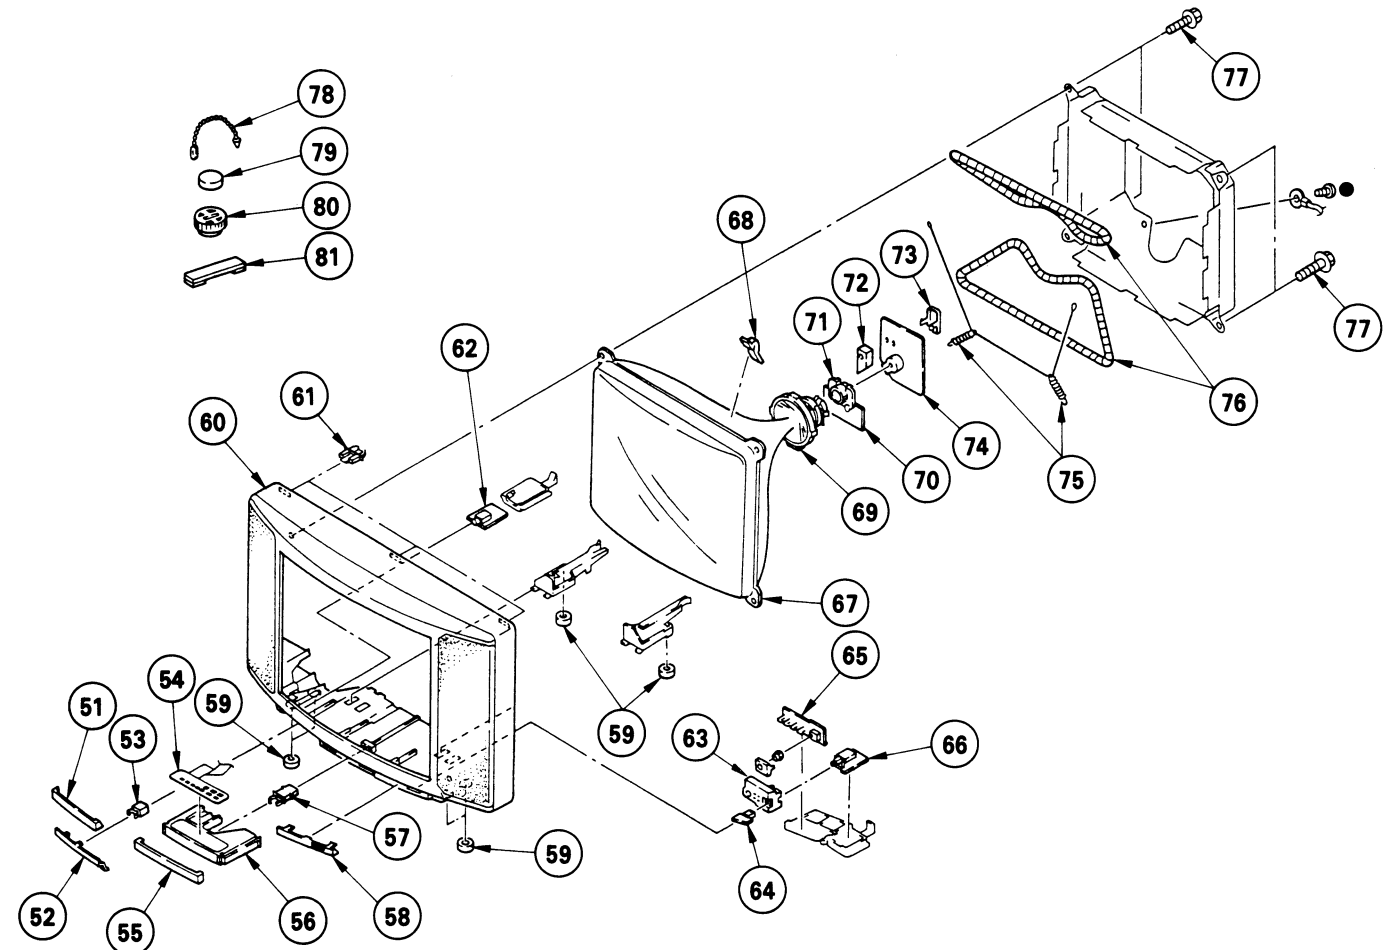

The components identified by shading and mark Δ are critical for safety.
Replace only with part number specified.

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
1	1-544-146-11	SPEAKER		14	*1-629-781-21	KS BOARD	
2	1-544-147-11	SPEAKER		15	*A-1345-839-A	D BOARD, COMPLETE	
3	*4-394-306-01	CUSHION, BOX		16	Δ 1-439-416-11	TRANSFORMER ASSY, FLYBACK (UX-1600)	
4	X-4394-302-1	FRAME ASSY		17	*1-629-719-21	F1 BOARD	
5	1-236-510-11	NETWORK, DIVIDING		18	*4-386-620-02	COVER, POWER	
6	4-386-618-01	RIVET, T TYPE		19	Δ 4-022-115-01	HOLDER, AC CORD	
7	*A-1296-569-A	A BOARD, COMPLETE		20	Δ 1-559-346-12	CORD, POWER (WITH CONNECTOR) (AEP ONLY)	
8	Δ 1-465-053-11	TUNER, ET (UV-615S)		21	Δ 1-559-912-12	CORD, POWER (WITH CONNECTOR) (AUS ONLY)	
9	*4-386-629-12	BRACKET, A		22	*4-386-624-11	BRACKET, J	
10	*4-386-628-11	SUPPORTER, PC BOARD		23	*A-1388-088-A	J1 BOARD, COMPLETE	
11	*4-386-617-01	HOLDER, TERMINAL		24	4-394-328-01	COVER	
12	*A-1347-030-A	V BOARD, COMPLETE			4-394-312-01	COVER, REAR	
13	*A-1135-561-A	B BOARD, COMPLETE					

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
51	4-394-309-01	COVER, DOOR		67	Δ 8-733-821-05	PICTURE TUBE (A68JYK10X) (AEP ONLY)	
52	4-394-330-01	BARE, DOOR		76	Δ 8-733-825-05	PICTURE TUBE (A68JYK10X) (AUS ONLY)	
53	4-374-714-01	CATCH, PUSH		68	3-703-961-01	SPACER, DY	
54	1-466-141-11	KEY BOARD, FLAT PANEL		69	Δ 1-451-313-21	DEFLECTION YOKE (Y29FXA)	
55	4-394-308-01	COVER, FRONT		70	*1-629-782-22	VM BOARD	
56	4-394-310-01	PANEL, CONTROL		71	Δ 1-452-509-41	NECK ASSY, PICTURE TUBE (NA-308)	
57	4-352-034-00	CATCHER, PUSH		72	*4-379-167-01	COVER (MAIN), CV	
58	4-394-315-01	WINDOW, ORNAMENTAL		73	*4-379-160-01	COVER (REAR LID), CV	
59	4-809-913-99	FOOT, F		74	*A-1330-951-A	C BOARD, COMPLETE	
60	X-4394-304-1	BEZNET ASSY	53, 57	75	4-369-318-00	SPRING, TENSION	
61	4-382-745-01	HOLDER, RC		76	Δ 1-426-398-11	COIL, DEMAGNETIZATION	
62	*1-629-783-21	J2 BOARD		77	4-373-263-11	SCREW (M), PT	
63	*4-389-124-01	PANEL, POWER SWITCH		78	4-308-870-00	CLIP, LEAD WIRE	
64	4-394-305-01	BUTTON, POWER		79	1-452-032-00	MAGNET, DISK; 10MM ϕ	
65	*1-629-745-21	H9 BOARD		80	1-452-094-00	MAGNET, ROTATABLE DISK; 15MM ϕ	
66	*1-629-720-21	F2 BOARD		81	X-4306-312-0	PERMALLOY ASSY, CONVERGENCE	

SECTION 7

ELECTRICAL PARTS LIST

B

NOTE:

The components identified by shading and mark Δ are critical for safety.
Replace only with part number specified.

• Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

• All variable and adjustable resistors have characteristic curve B, unless otherwise noted.

RESISTORS

• All resistors are in ohms
• F : nonflammable

When indicating parts by reference number, please include the board name.

CAPACITORS

COILS

• MF : μ F, PF : μ F • MMH : mH, UH : μ H

Note) In this parts list, the mounting diagram is for a different product.
Therefore, an excess of parts is listed.

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
	*A-1135-561-A	B BOARD, COMPLETE *****		C358	1-124-963-11	ELECT 33MF	20% 16V
		<CAPACITOR>		C359	1-163-105-00	CERAMIC CHIP 33PF	5% 50V
C301	1-106-228-00	MYLAR 0.22MF	10% 100V	C360	1-163-021-00	CERAMIC CHIP 0.01MF	50V
C302	1-106-228-00	MYLAR 0.22MF	10% 100V	C361	1-163-021-00	CERAMIC CHIP 0.01MF	50V
C303	1-126-101-11	ELECT 100MF	20% 16V	C364	1-163-121-00	CERAMIC CHIP 150PF	5% 50V
C304	1-106-228-00	MYLAR 0.22MF	10% 100V	C365	1-124-477-11	ELECT 47MF	20% 16V
C305	1-124-119-00	ELECT 330MF	20% 16V	C366	1-124-477-11	ELECT 47MF	20% 16V
C306	1-124-902-00	ELECT 0.47MF	20% 50V	C367	1-163-021-00	CERAMIC CHIP 0.01MF	50V
C307	1-124-902-00	ELECT 0.47MF	20% 50V	C368	1-163-109-00	CERAMIC CHIP 47PF	5% 50V
C308	1-124-902-00	ELECT 0.47MF	20% 50V	C381	1-124-902-00	ELECT 0.47MF	20% 50V
C309	1-124-902-00	ELECT 0.47MF	20% 50V	C382	1-124-927-11	ELECT 4.7MF	20% 50V
C310	1-106-220-00	MYLAR 0.1MF	10% 100V	C384	1-124-477-11	ELECT 47MF	20% 16V
C311	1-106-220-00	MYLAR 0.1MF	10% 100V	C385	1-124-927-11	ELECT 4.7MF	20% 50V
C312	1-124-902-00	ELECT 0.47MF	20% 50V	C386	1-124-927-11	ELECT 4.7MF	20% 50V
C313	1-124-902-00	ELECT 0.47MF	20% 50V	C387	1-124-902-00	ELECT 0.47MF	20% 50V
C314	1-124-902-00	ELECT 0.47MF	20% 50V	C1311	1-163-109-00	CERAMIC CHIP 47PF	5% 50V
C315	1-124-499-11	ELECT 1MF	20% 50V	C1313	1-163-107-00	CERAMIC CHIP 39PF	5% 50V
C319	1-124-477-11	ELECT 47MF	20% 16V	C1314	1-124-477-11	ELECT 47MF	20% 16V
C322	1-163-113-00	CERAMIC CHIP 68PF	5% 50V	C1315	1-124-477-11	ELECT 47MF	20% 16V
C325	1-124-477-11	ELECT 47MF	20% 16V	C1316	1-124-477-11	ELECT 47MF	20% 16V
C326	1-163-021-00	CERAMIC CHIP 0.01MF	50V	C1317	1-124-477-11	ELECT 47MF	20% 16V
C327	1-163-021-00	CERAMIC CHIP 0.01MF	50V	C1318	1-124-477-11	ELECT 47MF	20% 16V
C330	1-163-021-00	CERAMIC CHIP 0.01MF	50V			<CONNECTOR>	
C331	1-124-963-11	ELECT 33MF	20% 16V	CNB31	*1-562-370-21	CONNECTOR, BOARD TO BOARD 18P	
C332	1-124-119-00	ELECT 330MF	20% 16V	CNB32	*1-564-881-11	PLUG, CONNECTOR 4P	
C333	1-163-033-00	CERAMIC CHIP 0.022MF	50V	CNB72	*1-564-895-11	PLUG, CONNECTOR 6P	
C334	1-163-111-00	CERAMIC CHIP 56PF	5% 50V	CNB73	*1-564-880-31	PLUG, CONNECTOR 3P	
C335	1-163-035-00	CERAMIC CHIP 0.047MF	50V	CNB93	*1-560-278-41	PLUG, CONNECTOR 6P	
C336	1-106-367-00	MYLAR 0.01MF	10% 400V	CNB95	*1-560-290-00	PLUG, CONNECTOR (2.5MM PITCH)	
C337	1-163-021-00	CERAMIC CHIP 0.01MF	50V			<TRIMMER>	
C338	1-163-113-00	CERAMIC CHIP 68PF	5% 50V	CT331	1-141-181-11	CAP, TRIMMER	
C339	1-163-119-00	CERAMIC CHIP 120PF	5% 50V	CT332	1-141-181-11	CAP, TRIMMER	
C340	1-163-099-00	CERAMIC CHIP 18PF	5% 50V			<DIODE>	
C341	1-163-125-00	CERAMIC CHIP 220PF	5% 50V	D301	8-719-400-18	DIODE MA152WK	
C342	1-163-099-00	CERAMIC CHIP 18PF	5% 50V	D302	8-719-400-18	DIODE MA152WK	
C343	1-163-119-00	CERAMIC CHIP 120PF	5% 50V	D303	8-719-400-18	DIODE MA152WK	
C344	1-163-113-00	CERAMIC CHIP 68PF	5% 50V	D304	8-719-400-18	DIODE MA152WK	
C345	1-163-125-00	CERAMIC CHIP 220PF	5% 50V	D305	8-719-400-18	DIODE MA152WK	
C346	1-163-009-11	CERAMIC CHIP 0.001MF	10% 50V	D307	8-719-106-62	DIODE RD11M-B2	
C347	1-124-499-11	ELECT 1MF	20% 50V	D309	8-719-400-18	DIODE MA152WK	
C348	1-124-499-11	ELECT 1MF	20% 50V	D310	8-719-106-62	DIODE RD11M-B2	
C349	1-136-173-00	FILM 0.47MF	5% 50V	D311	8-719-106-62	DIODE RD11M-B2	
C350	1-106-383-00	MYLAR 0.047MF	10% 100V	D312	8-719-106-62	DIODE RD11M-B2	
C351	1-106-375-12	MYLAR 0.022MF	10% 250V	D313	8-719-106-62	DIODE RD11M-B2	
C352	1-106-375-12	MYLAR 0.022MF	10% 250V	D314	8-719-800-76	DIODE 1SS226	
C354	1-163-009-11	CERAMIC CHIP 0.001MF	10% 50V				
C355	1-163-119-00	CERAMIC CHIP 120PF	5% 50V				
C357	1-163-107-00	CERAMIC CHIP 39PF	5% 50V				

B

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
D315	8-719-800-76	DIODE 1SS226		JW1305	1-216-296-00	METAL GLAZE	0 5% 1/8W
D316	8-719-800-76	DIODE 1SS226		JW1306	1-216-296-00	METAL GLAZE	0 5% 1/8W
D331	8-719-400-18	DIODE MA152WK		JW1307	1-216-295-00	METAL GLAZE	0 5% 1/10W
D333	8-719-400-18	DIODE MA152WK		JW1308	1-216-296-00	METAL GLAZE	0 5% 1/8W
D341	8-719-400-18	DIODE MA152WK		JW1309	1-216-296-00	METAL GLAZE	0 5% 1/8W
<DELAY LINE>				JW1310	1-216-296-00	METAL GLAZE	0 5% 1/8W
DL331	1-415-122-00	DELAY LINE		JW1311	1-216-295-00	METAL GLAZE	0 5% 1/10W
DL332	1-236-062-11	MODULE, Y DELAY LINE		JW1312	1-216-295-00	METAL GLAZE	0 5% 1/10W
DL333	1-415-613-11	DELAY LINE, Y		JW1313	1-216-295-00	METAL GLAZE	0 5% 1/10W
<IC>				JW1314	1-216-296-00	METAL GLAZE	0 5% 1/8W
IC301	8-759-979-85	IC TDA4580-V4		JW1315	1-216-089-00	METAL GLAZE	47K 5% 1/10W
IC302	8-759-980-60	IC TDA8442-N3		JW1316	1-216-296-00	METAL GLAZE	0 5% 1/8W
IC331	8-759-947-20	IC TDA4555-V8		JW1317	1-216-296-00	METAL GLAZE	0 5% 1/8W
IC332	8-752-006-12	IC CX20061		JW1318	1-216-295-00	METAL GLAZE	0 5% 1/10W
IC333	8-752-006-12	IC CX20061		JW1319	1-216-295-00	METAL GLAZE	0 5% 1/10W
IC1301	1-235-534-11	CONTROL MODULE, PICTURE		JW1320	1-216-295-00	METAL GLAZE	0 5% 1/10W
<COIL>				R301	1-216-033-00	METAL GLAZE	220 5% 1/10W
L301	1-410-868-21	INDUCTOR	4.7UH	R302	1-216-033-00	METAL GLAZE	220 5% 1/10W
L302	1-410-868-21	INDUCTOR	4.7UH	R303	1-216-033-00	METAL GLAZE	220 5% 1/10W
L304	1-408-409-00	INDUCTOR	10UH	R304	1-216-033-00	METAL GLAZE	220 5% 1/10W
L331	1-408-408-00	INDUCTOR	8.2UH	R305	1-216-057-00	METAL GLAZE	2.2K 5% 1/10W
L332	1-404-539-11	COIL		R307	1-216-097-00	METAL GLAZE	100K 5% 1/10W
L333	1-404-554-11	COIL		R308	1-216-043-00	METAL GLAZE	560 5% 1/10W
L334	1-404-554-11	COIL		R309	1-216-025-00	METAL GLAZE	100 5% 1/10W
L335	1-404-554-11	COIL		R310	1-216-025-00	METAL GLAZE	100 5% 1/10W
L336	1-408-417-00	INDUCTOR	47UH	R311	1-216-025-00	METAL GLAZE	100 5% 1/10W
L338	1-408-416-00	INDUCTOR	39UH	R312	1-216-033-00	METAL GLAZE	220 5% 1/10W
L339	1-410-868-21	INDUCTOR	4.7UH	R313	1-216-081-00	METAL GLAZE	22K 5% 1/10W
<TRANSISTOR>				R314	1-216-041-00	METAL GLAZE	470 5% 1/10W
Q302	8-729-271-22	TRANSISTOR 2SC2712G		R315	1-216-029-00	METAL GLAZE	150 5% 1/10W
Q303	8-729-271-22	TRANSISTOR 2SC2712G		R316	1-216-029-00	METAL GLAZE	150 5% 1/10W
Q305	8-729-901-00	TRANSISTOR DTC124EK		R317	1-216-029-00	METAL GLAZE	150 5% 1/10W
Q306	8-729-271-22	TRANSISTOR 2SC2712G		R318	1-216-222-00	METAL GLAZE	10K 5% 1/8W
Q307	8-729-271-22	TRANSISTOR 2SC2712G		R319	1-216-033-00	METAL GLAZE	220 5% 1/10W
Q308	8-729-216-22	TRANSISTOR 2SA1162		R320	1-216-049-00	METAL GLAZE	1K 5% 1/10W
Q309	8-729-271-22	TRANSISTOR 2SC2712G		R321	1-216-057-00	METAL GLAZE	2.2K 5% 1/10W
Q311	8-729-271-22	TRANSISTOR 2SC2712G		R322	1-216-055-00	METAL GLAZE	1.8K 5% 1/10W
Q312	8-729-271-22	TRANSISTOR 2SC2712G		R323	1-216-057-00	METAL GLAZE	2.2K 5% 1/10W
Q313	8-729-271-22	TRANSISTOR 2SC2712G		R324	1-216-067-00	METAL GLAZE	5.6K 5% 1/10W
Q316	8-729-271-22	TRANSISTOR 2SC2712G		R325	1-216-073-00	METAL GLAZE	10K 5% 1/10W
Q331	8-729-271-22	TRANSISTOR 2SC2712G		R326	1-216-053-00	METAL GLAZE	1.5K 5% 1/10W
Q332	8-729-901-00	TRANSISTOR DTC124EK		R327	1-216-069-00	METAL GLAZE	6.8K 5% 1/10W
Q333	8-729-901-00	TRANSISTOR DTC124EK		R328	1-216-009-00	METAL GLAZE	22 5% 1/10W
Q334	8-729-271-22	TRANSISTOR 2SC2712G		R329	1-216-009-00	METAL GLAZE	22 5% 1/10W
Q335	8-729-271-22	TRANSISTOR 2SC2712G		R330	1-216-009-00	METAL GLAZE	22 5% 1/10W
Q381	8-729-901-00	TRANSISTOR DTC124EK		R331	1-216-051-00	METAL GLAZE	1.2K 5% 1/10W
Q382	8-729-271-22	TRANSISTOR 2SC2712G		R332	1-216-017-00	METAL GLAZE	47 5% 1/10W
Q1305	8-729-271-22	TRANSISTOR 2SC2712G		R333	1-216-039-00	METAL GLAZE	390 5% 1/10W
Q1306	8-729-216-22	TRANSISTOR 2SA1162		R334	1-216-031-00	METAL GLAZE	180 5% 1/10W
<RESISTOR>				R335	1-216-045-00	METAL GLAZE	680 5% 1/10W
JW303	1-216-295-00	METAL GLAZE	0 5% 1/10W	R336	1-216-051-00	METAL GLAZE	1.2K 5% 1/10W
JW1301	1-216-296-00	METAL GLAZE	0 5% 1/8W	R337	1-216-066-00	METAL GLAZE	5.1K 5% 1/10W
JW1302	1-216-296-00	METAL GLAZE	0 5% 1/8W	R338	1-216-073-00	METAL GLAZE	10K 5% 1/10W
JW1303	1-216-295-00	METAL GLAZE	0 5% 1/10W	R339	1-216-033-00	METAL GLAZE	220 5% 1/10W
JW1304	1-216-295-00	METAL GLAZE	0 5% 1/10W	R340	1-216-089-00	METAL GLAZE	47K 5% 1/10W
				R341	1-216-035-00	METAL GLAZE	270 5% 1/10W
				R342	1-216-073-00	METAL GLAZE	10K 5% 1/10W
				R343	1-216-073-00	METAL GLAZE	10K 5% 1/10W
				R344	1-216-089-00	METAL GLAZE	47K 5% 1/10W
				R346	1-216-202-00	METAL GLAZE	1.5K 5% 1/8W
				R347	1-216-073-00	METAL GLAZE	10K 5% 1/10W
				R348	1-216-295-00	METAL GLAZE	0 5% 1/10W
				R352	1-216-109-00	METAL GLAZE	330K 5% 1/10W

The components identified by shading and mark Δ are critical for safety.
Replace only with part number specified.

KV-C2911D
RM-673

B

F₂

F₁

A

REF.NO.	PART NO.	DESCRIPTION	REMARK
R353	1-216-109-00	METAL GLAZE 330K 5%	1/10W
R354	1-216-033-00	METAL GLAZE 220 5%	1/10W
R355	1-216-061-00	METAL GLAZE 3.3K 5%	1/10W
R356	1-216-069-00	METAL GLAZE 6.8K 5%	1/10W
R357	1-216-033-00	METAL GLAZE 220 5%	1/10W
R358	1-216-033-00	METAL GLAZE 220 5%	1/10W
R359	1-216-089-00	METAL GLAZE 47K 5%	1/10W
R360	1-216-089-00	METAL GLAZE 47K 5%	1/10W
R361	1-216-053-00	METAL GLAZE 1.5K 5%	1/10W
R363	1-216-035-00	METAL GLAZE 270 5%	1/10W
R364	1-216-049-00	METAL GLAZE 1K 5%	1/10W
R365	1-216-049-00	METAL GLAZE 1K 5%	1/10W
R367	1-216-033-00	METAL GLAZE 220 5%	1/10W
R368	1-216-049-00	METAL GLAZE 1K 5%	1/10W
R369	1-216-049-00	METAL GLAZE 1K 5%	1/10W
R370	1-216-051-00	METAL GLAZE 1.2K 5%	1/10W
R371	1-216-049-00	METAL GLAZE 1K 5%	1/10W
R376	1-216-073-00	METAL GLAZE 10K 5%	1/10W
R378	1-216-097-00	METAL GLAZE 100K 5%	1/10W
R379	1-216-097-00	METAL GLAZE 100K 5%	1/10W
R380	1-216-067-00	METAL GLAZE 5.6K 5%	1/10W
R381	1-216-093-00	METAL GLAZE 68K 5%	1/10W
R382	1-216-103-00	METAL GLAZE 180K 5%	1/10W
R383	1-216-111-00	METAL GLAZE 390K 5%	1/10W
R385	1-216-085-00	METAL GLAZE 33K 5%	1/10W
R386	1-216-061-00	METAL GLAZE 3.3K 5%	1/10W
R389	1-216-101-00	METAL GLAZE 150K 5%	1/10W
R391	1-216-023-00	METAL GLAZE 82 5%	1/10W
R392	1-216-019-00	METAL GLAZE 56 5%	1/10W
R393	1-216-019-00	METAL GLAZE 56 5%	1/10W
R394	1-216-019-00	METAL GLAZE 56 5%	1/10W
R398	1-216-081-00	METAL GLAZE 22K 5%	1/10W
R1301	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
R1302	1-216-089-00	METAL GLAZE 47K 5%	1/10W
R1303	1-216-089-00	METAL GLAZE 47K 5%	1/10W
R1304	1-216-097-00	METAL GLAZE 100K 5%	1/10W
R1305	1-216-053-00	METAL GLAZE 1.5K 5%	1/10W
R1306	1-216-047-00	METAL GLAZE 820 5%	1/10W
R1307	1-216-053-00	METAL GLAZE 1.5K 5%	1/10W
R1308	1-216-073-00	METAL GLAZE 10K 5%	1/10W
R1309	1-216-029-00	METAL GLAZE 150 5%	1/10W
R1310	1-216-045-00	METAL GLAZE 680 5%	1/10W
R1311	1-216-073-00	METAL GLAZE 10K 5%	1/10W
R1312	1-216-073-00	METAL GLAZE 10K 5%	1/10W
R1313	1-216-053-00	METAL GLAZE 1.5K 5%	1/10W
R1314	1-216-085-00	METAL GLAZE 33K 5%	1/10W
R1315	1-216-085-00	METAL GLAZE 33K 5%	1/10W
R1316	1-216-081-00	METAL GLAZE 22K 5%	1/10W
R1317	1-216-077-00	METAL GLAZE 15K 5%	1/10W
R1324	1-216-053-00	METAL GLAZE 1.5K 5%	1/10W

<VARIABLE RESISTOR>

RV331 1-238-009-11 RES, ADJ, CARBON 220

<TRANSFORMER>

T331 1-404-584-11 COIL

<CRYSTAL>

X331 1-567-307-11 OSCILLATOR, CRYSTAL
X332 1-567-131-00 OSCILLATOR, CRYSTAL

REF.NO. PART NO. DESCRIPTION REMARK

*1-629-720-21 F2 BOARD

<CONNECTOR>

CNF262*1-566-664-11 PIN, CONNECTOR 4P

<SWITCH>

S1701A 1-571-410-11 SWITCH, PUSH (AC POWER) (1 KEY)

*1-629-719-21 F1 BOARD

<CAPACITOR>

C1601A	1-136-518-11	FILM	0.33MF	20%	300V
C1602A	1-136-519-11	FILM	0.47MF	20%	300V
C1603A	1-162-578-51	CERAMIC	0.0047MF	20%	400V
C1604A	1-162-578-51	CERAMIC	0.0047MF	20%	400V
C1605A	1-162-578-51	CERAMIC	0.0047MF	20%	400V
C1606A	1-162-578-51	CERAMIC	0.0047MF	20%	400V
C1607A	1-161-964-61	CERAMIC	0.0047MF		250V

<CONNECTOR>

CNF61 *1-566-664-11 PIN, CONNECTOR 4P
CNF64 *1-506-348-99 PIN, CONNECTOR 3P
CNF65 *1-508-765-00 PIN, CONNECTOR (5MM PITCH) 3P
CNF66 *1-508-786-00 PIN, CONNECTOR (5MM PITCH) 2P
CNF67 *1-560-290-00 PLUG, CONNECTOR (2.5MM PITCH)

CNF162*1-506-348-99 PIN, CONNECTOR 4P

<FUSE>

F1601A 1-576-041-11 FUSE, GLASS-TUBE (TIME-LAG) 4A/250V
1-533-087-00 HOLDER, FUSE; F1601

<TRANSFORMER>

LF1601A 1-421-866-12 LFT
LF1602A 1-421-776-11 LFT
LF1603A 1-421-592-11 TRANSFORMER, FERRITE

<RESISTOR>

R1601A	1-246-513-75	CARBON	47K	5%	1/4W
R1602A	1-244-945-91	CARBON	1M	5%	1/2W
R1603A	1-217-328-11	WIREWOUND	2.7	10%	7W
R1604A	1-246-513-75	CARBON	47K	5%	1/4W
R1605A	1-218-265-91	METAL GLAZE	8.2M	5%	1W

<THERMISTOR>

THP601A 1-808-059-31 THERMISTOR, POSITIVE

*A-1296-569-A A BOARD, COMPLETE

*4-380-698-01 CASE (MAIN), SHIELD, A1

The components identified by shading and mark Δ are critical for safety.
Replace only with part number specified.

KV-C2911D
RM-673

A

C

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
Q107	8-729-119-76	TRANSISTOR 2SA1175-HFE		R163	1-249-424-11	CARBON 3.9K 5% 1/4W	
Q108	8-729-900-65	TRANSISTOR DTA144ES		R165	1-249-423-11	CARBON 3.3K 5% 1/4W	
Q109	8-729-900-89	TRANSISTOR DTC144ES		R166	1-249-437-11	CARBON 47K 5% 1/4W	
Q110	8-729-119-76	TRANSISTOR 2SA1175-HFE		R171	1-249-417-11	CARBON 1K 5% 1/4W	
Q111	8-729-900-89	TRANSISTOR DTC144ES		R174	1-249-429-11	CARBON 10K 5% 1/4W	
Q112	8-729-119-78	TRANSISTOR 2SC2785-HFE		R175	1-249-429-11	CARBON 10K 5% 1/4W	
Q113	8-729-119-78	TRANSISTOR 2SC2785-HFE		R177	1-249-417-11	CARBON 1K 5% 1/4W	
Q115	8-729-119-78	TRANSISTOR 2SC2785-HFE		R188	1-249-419-11	CARBON 1.5K 5% 1/4W	
Q116	8-729-900-65	TRANSISTOR DTA144ES		R189	1-249-419-11	CARBON 1.5K 5% 1/4W	
Q117	8-729-119-76	TRANSISTOR 2SA1175-HFE					
Q120	8-729-900-89	TRANSISTOR DTC144ES					
		<RESISTOR>				<VARIABLE RESISTOR>	
R101	1-249-405-11	CARBON 100 5% 1/4W		RV101	1-237-753-11	RES, ADJ, CARBON 47K	
R102	1-249-423-11	CARBON 3.3K 5% 1/4W		RV102	1-237-751-11	RES, ADJ, CARBON 10K	
R103	1-249-433-11	CARBON 22K 5% 1/4W		RV103	1-237-753-11	RES, ADJ, CARBON 47K	
R104	1-249-429-11	CARBON 10K 5% 1/4W				<TRANSFORMER>	
R105	1-249-418-11	CARBON 1.2K 5% 1/4W		T101	1-404-493-00	COIL	
R106	1-247-891-00	CARBON 330K 5% 1/4W		T102	1-404-493-00	COIL	
R107	1-249-421-11	CARBON 2.2K 5% 1/4W		T103	1-404-493-00	COIL	
R108	1-249-421-11	CARBON 2.2K 5% 1/4W				<TUNER>	
R109	1-249-423-11	CARBON 3.3K 5% 1/4W		TU101A	1-465-053-11	TUNER, ET (UV-615S)	
R110	1-249-410-11	CARBON 270 5% 1/4W				*****	
R111	1-249-416-11	CARBON 820 5% 1/4W				*A-1330-951-A C BOARD, COMPLETE	
R112	1-249-421-11	CARBON 2.2K 5% 1/4W				*****	
R114	1-249-413-11	CARBON 470 5% 1/4W				*4-379-160-01 COVER (REAR LID), CV	
R115	1-249-413-11	CARBON 470 5% 1/4W				*4-379-167-01 COVER (MAIN), CV	
R116	1-249-419-11	CARBON 1.5K 5% 1/4W				*4-386-664-01 SPRING	
R117	1-249-431-11	CARBON 15K 5% 1/4W				<CAPACITOR>	
R118	1-249-425-11	CARBON 4.7K 5% 1/4W		C703	1-102-980-00	CERAMIC 270PF 5% 50V	
R119	1-249-417-11	CARBON 1K 5% 1/4W		C704	1-102-116-00	CERAMIC 680PF 10% 50V	
R121	1-249-429-11	CARBON 10K 5% 1/4W		C705	1-102-978-00	CERAMIC 220PF 5% 50V	
R122	1-249-436-11	CARBON 39K 5% 1/4W		C706	1-102-116-00	CERAMIC 680PF 10% 50V	
R123	1-249-417-11	CARBON 1K 5% 1/4W		C707	1-162-116-00	CERAMIC 680PF 10% 2KV	
R124	1-249-423-11	CARBON 3.3K 5% 1/4W		C708	1-162-114-00	CERAMIC 0.0047MF 2KV	
R125	1-249-429-11	CARBON 10K 5% 1/4W		C709	1-102-116-00	CERAMIC 680PF 10% 50V	
R127	1-249-432-11	CARBON 18K 5% 1/4W		C710	1-123-947-00	ELECT 10MF 20% 250V	
R128	1-249-432-11	CARBON 18K 5% 1/4W		C711	1-101-880-00	CERAMIC 47PF 5% 50V	
R129	1-249-429-11	CARBON 10K 5% 1/4W		C712	1-102-980-00	CERAMIC 270PF 5% 50V	
R130	1-249-429-11	CARBON 10K 5% 1/4W		C714	1-124-360-00	ELECT 1000MF 20% 16V	
R132	1-249-414-11	CARBON 560 5% 1/4W		C716	1-162-622-11	CERAMIC 330PF 10% 400V	
R133	1-249-425-11	CARBON 4.7K 5% 1/4W		C717	1-102-114-00	CERAMIC 470PF 10% 50V	
R134	1-249-414-11	CARBON 560 5% 1/4W		C718	1-102-114-00	CERAMIC 470PF 10% 50V	
R135	1-249-419-11	CARBON 1.5K 5% 1/4W		C719	1-102-114-00	CERAMIC 470PF 10% 50V	
R136	1-249-414-11	CARBON 560 5% 1/4W				<CONNECTOR>	
R137	1-249-414-11	CARBON 560 5% 1/4W		CNC71	*1-506-371-00	PIN, CONNECTOR 2P	
R138	1-249-419-11	CARBON 1.5K 5% 1/4W		CNC72	*1-564-883-11	PLUG, CONNECTOR 6P	
R139	1-249-431-11	CARBON 15K 5% 1/4W		CNC81	*1-560-123-00	PLUG, CONNECTOR (2.5MM PITCH)	
R140	1-249-441-11	CARBON 100K 5% 1/4W		CNC82	*1-508-765-00	PIN, CONNECTOR (5MM PITCH) 3P	
R141	1-249-425-11	CARBON 4.7K 5% 1/4W				<DIODE>	
R142	1-249-441-11	CARBON 100K 5% 1/4W		D701	8-719-110-14	DIODE RD9.1ES-B3	
R143	1-249-441-11	CARBON 100K 5% 1/4W		D702	8-719-911-19	DIODE 1SS119	
R144	1-249-422-11	CARBON 2.7K 5% 1/4W		D703	8-719-911-19	DIODE 1SS119	
R146	1-249-424-11	CARBON 3.9K 5% 1/4W		D704	8-719-911-19	DIODE 1SS119	
R148	1-249-413-11	CARBON 470 5% 1/4W					
R150	1-249-423-11	CARBON 3.3K 5% 1/4W					
R151	1-249-423-11	CARBON 3.3K 5% 1/4W					
R152	1-249-431-11	CARBON 15K 5% 1/4W					
R153	1-249-416-11	CARBON 820 5% 1/4W					
R154	1-249-441-11	CARBON 100K 5% 1/4W					
R155	1-249-430-11	CARBON 12K 5% 1/4W					
R156	1-247-881-00	CARBON 120K 5% 1/4W					
R161	1-249-427-11	CARBON 6.8K 5% 1/4W					

The components identified by shading and mark  are critical for safety.
Replace only with part number specified.

C

 V_M

D

REF. NO.	PART NO.	DESCRIPTION
----------	----------	-------------

D705	8-719-911-19	D10DE	1SS119
D706	8-719-911-19	D10DE	1SS119
D707	8-719-911-19	D10DE	1SS119
D708	8-719-911-19	D10DE	1SS119
D709	8-719-911-19	D10DE	1SS119
D710	8-719-911-19	D10DE	1SS119
D711	8-719-300-33	D10DE	RU-3AM
D713	8-719-911-19	D10DE	1SS119

<JACK>

J701 1-526-798-51 SOCKET, PICTURE TUBE

<COIL>

L704 1-410-878-21 INDUCTOR 33UH

<TRANSISTOR>

Q702	8-729-119-78	TRANSISTOR	2SC2785-HFE
Q703	8-729-326-11	TRANSISTOR	2SC2611
Q704	8-729-200-17	TRANSISTOR	2SA1091
Q705	8-729-119-78	TRANSISTOR	2SC2785-HFE
Q706	8-729-326-11	TRANSISTOR	2SC2611
Q707	8-729-200-17	TRANSISTOR	2SA1091
Q708	8-729-119-78	TRANSISTOR	2SC2785-HFE
Q709	8-729-326-11	TRANSISTOR	2SC2611
Q710	8-729-200-17	TRANSISTOR	2SA1091

<RESISTOR>

R704	1-216-486-00	METAL OXIDE	8.2K	5%	3W	F
R705	1-202-824-00	SOLID	3.3K	10%	1/2W	
R706	1-249-409-11	CARBON	220	5%	1/4W	
R707	1-249-412-11	CARBON	390	5%	1/4W	
R708	1-249-401-11	CARBON	47	5%	1/4W	
R709	1-202-844-00	SOLID	330K	10%	1/2W	
R710	1-215-465-00	METAL	68K	1%	1/6W	
R712	1-249-417-11	CARBON	1K	5%	1/4W	
R713	1-215-471-00	METAL	120K	1%	1/6W	
R714	1-216-486-00	METAL OXIDE	8.2K	5%	3W	F
R715	1-202-824-00	SOLID	3.3K	10%	1/2W	
R716	1-249-409-11	CARBON	220	5%	1/4W	
R717	1-249-415-11	CARBON	680	5%	1/4W	
R718	1-202-814-11	SOLID	33K	10%	1/2W	
R719	1-249-401-11	CARBON	47	5%	1/4W	
R720	1-249-423-11	CARBON	3.3K	5%	1/4W	
R721	1-202-842-11	SOLID	220K	10%	1/2W	
R722	1-202-848-00	SOLID	680K	10%	1/2W	
R723	1-249-417-11	CARBON	1K	5%	1/4W	
R724	1-202-846-00	SOLID	470K	10%	1/2W	
R725	1-202-838-00	SOLID	100K	10%	1/2W	
R726	1-202-824-00	SOLID	3.3K	10%	1/2W	
R727	1-249-409-11	CARBON	220	5%	1/4W	
R728	1-216-347-11	METAL OXIDE	0.68	5%	1W	F
R729	1-249-416-11	CARBON	820	5%	1/4W	
R730	1-249-401-11	CARBON	47	5%	1/4W	
R731	1-249-423-11	CARBON	3.3K	5%	1/4W	
R732	1-249-415-11	CARBON	680	5%	1/4W	
R733	1-249-415-11	CARBON	680	5%	1/4W	
R734	1-249-405-11	CARBON	100	5%	1/4W	
R735	1-215-493-00	METAL	1M	1%	1/6W	
R736	1-216-486-00	METAL OXIDE	8.2K	5%	3W	F
R737	1-215-485-00	METAL	470K	1%	1/6W	

REMARK

REF. NO.	PART NO.
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
10	10
11	11
12	12
13	13
14	14
15	15
16	16
17	17
18	18
19	19
20	20
21	21
22	22
23	23
24	24
25	25
26	26
27	27
28	28
29	29
30	30
31	31
32	32
33	33
34	34
35	35
36	36
37	37
38	38
39	39
40	40
41	41
42	42
43	43
44	44
45	45
46	46
47	47
48	48
49	49
50	50
51	51
52	52
53	53
54	54
55	55
56	56
57	57
58	58
59	59
60	60
61	61
62	62
63	63
64	64
65	65
66	66
67	67
68	68
69	69
70	70
71	71
72	72
73	73
74	74
75	75
76	76
77	77
78	78
79	79
80	80
81	81
82	82
83	83
84	84
85	85
86	86
87	87
88	88
89	89
90	90
91	91
92	92
93	93
94	94
95	95
96	96
97	97
98	98
99	99
100	100

DESCRIPTION

REMARK

R739 1-249-417-11 CARBON 1K 5% 1/4W

<VARIABLE RESISTOR>

RV701 1-230-641-11 RES, ADJ, METAL GLAZE 2.2M
RV702A 1-230-619-11 RES, ADJ, METAL GLAZE 110M
RV703 1-237-749-11 RES, ADJ, CARBON 2200
RV704 1-237-749-11 RES, ADJ, CARBON 2200

*-629-782-22 VM BOARD

*1-564-880-31 PLUG, CONNECTOR 3P
*1-564-881-11 PLUG, CONNECTOR 4P

<CAPACITOR>

C751	1-101-361-00	CERAMIC	150PF	5%	50V
C752	1-106-373-00	MYLAR	0.018MF	10%	250V
C753	1-106-367-00	MYLAR	0.01MF	10%	400V
C754	1-102-980-00	CERAMIC	270PF	5%	50V
C757	1-108-692-11	MYLAR	0.01MF	10%	200V
C759	1-123-875-11	ELECT	10MF	20%	50V
C760	1-124-917-11	ELECT	33MF	20%	50V
C761	1-101-006-00	CERAMIC	0.047MF		50V
C762	1-106-367-00	MYLAR	0.01MF	10%	400V

<COIL>

L751 1-408-413-00 INDUCTOR 22UH

<TRANSISTOR>

Q751	8-729-119-78	TRANSISTOR	2SC2785-HFE
Q752	8-729-119-78	TRANSISTOR	2SC2785-HFE
Q753	8-729-140-97	TRANSISTOR	2SB734-34
Q754	8-729-177-42	TRANSISTOR	2SD774-3

<RESISTOR>

R751	1-249-418-11	CARBON	1.2K	5%	1/4W
R752	1-249-426-11	CARBON	5.6K	5%	1/4W
R753	1-249-414-11	CARBON	560	5%	1/4W
R754	1-249-434-11	CARBON	27K	5%	1/4W
R755	1-249-405-11	CARBON	100	5%	1/4W
R756	1-249-419-11	CARBON	1.5K	5%	1/4W
R757	1-249-405-11	CARBON	100	5%	1/4W
R758	1-249-409-11	CARBON	220	5%	1/4W
R760	1-249-411-11	CARBON	330	5%	1/4W
R761	1-249-429-11	CARBON	10K	5%	1/4W
R762	1-247-895-00	CARBON	470K	5%	1/4W
R763	1-249-429-11	CARBON	10K	5%	1/4W
R764	1-249-455-11	CARBON	4.7	5%	1/4W
R765	1-249-455-11	CARBON	4.7	5%	1/4W
R766	1-247-753-11	CARBON	1.2K	5%	1/2W
R767	1-247-751-11	CARBON	820	5%	1/2W
R768	1-215-887-00	METAL OXIDE	150	5%	2W
R769	1-212-889-00	FUSIBLE	220	5%	1/4W
R770	1-212-936-00	FUSIBLE	1.2	5%	1/2W

*A-1345-839-A D BOARD, COMPLETE

The components identified by shading and mark Δ are critical for safety.
Replace only with part number specified.

KV-C2911D
RM-673

D

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
	*4-341-751-01	EYELET		C519	1-136-173-00	FILM	0.47MF
	*4-341-752-01	EYELET		C520	1-102-121-00	CERAMIC	0.0022MF
	*4-368-683-01	SPRING (Q608)					
	<CAPACITOR>						
C001	1-102-973-00	CERAMIC	100PF	C521	1-106-220-00	MYLAR	0.1MF
C003	1-106-220-00	MYLAR	0.1MF	C522	1-124-122-11	ELECT	100MF
C004	1-123-875-11	ELECT	10MF	C523	1-108-614-11	MYLAR	0.001MF
C005	1-102-074-00	CERAMIC	0.001MF	C524	1-108-798-11	MYLAR	0.0033MF
C007	1-106-383-00	MYLAR	0.047MF	C525	1-102-973-00	CERAMIC	100PF
C008	1-101-880-00	CERAMIC	47PF	C526	1-102-951-00	CERAMIC	15PF
C009	1-101-884-00	CERAMIC	56PF	C527	1-106-220-00	MYLAR	0.1MF
C010	1-124-122-11	ELECT	100MF	C531	1-124-190-00	ELECT	680MF
C011	1-101-004-00	CERAMIC	0.01MF	C532	1-124-122-11	ELECT	100MF
C012	1-124-122-11	ELECT	100MF	C533	1-106-216-00	MYLAR	0.068MF
C013	1-101-004-00	CERAMIC	0.01MF	C534	1-124-120-11	ELECT	220MF
C014	1-124-463-00	ELECT	0.1MF	C536	1-131-365-00	TANTALUM	10MF
C015	1-124-910-11	ELECT	47MF	C537	1-124-499-11	ELECT	1MF
C016	1-101-004-00	CERAMIC	0.01MF	C538	1-108-614-11	MYLAR	0.001MF
C017	1-123-875-11	ELECT	10MF	C539	1-102-820-00	CERAMIC	330PF
C018	1-102-980-00	CERAMIC	270PF	C591	1-123-875-11	ELECT	10MF
C019	1-106-383-00	MYLAR	0.047MF	C592	1-124-910-11	ELECT	47MF
C020	1-102-973-00	CERAMIC	100PF	C593	1-102-820-00	CERAMIC	330PF
C022	1-124-910-11	ELECT	47MF	C601 Δ	1-161-964-61	CERAMIC	0.0047MF
C023	1-124-499-11	ELECT	1MF	C602 Δ	1-161-964-61	CERAMIC	0.0047MF
C025	1-102-125-00	CERAMIC	0.0047MF	C603 Δ	1-161-964-61	CERAMIC	0.0047MF
C026	1-102-125-00	CERAMIC	0.0047MF	C604	1-125-318-00	ELECT (BLOCK)	220MF
C027	1-106-220-00	MYLAR	0.1MF	C605	1-124-122-11	ELECT	100MF
C028	1-101-361-00	CERAMIC	150PF	C606	1-106-220-00	MYLAR	0.1MF
C029	1-102-121-00	CERAMIC	0.0022MF	C607	1-130-019-00	FILM	0.0012MF
C031	1-124-120-11	ELECT	220MF	C608	1-123-875-11	ELECT	10MF
C032	1-102-978-00	CERAMIC	220PF	C611	1-124-122-11	ELECT	100MF
C251	1-124-927-11	ELECT	4.7MF	C612	1-162-115-00	CERAMIC	330PF
C252	1-124-927-11	ELECT	4.7MF	C613	1-136-539-11	FILM	0.0022MF
C253	1-124-122-11	ELECT	100MF	C614	1-102-030-00	CERAMIC	330PF
C254	1-124-927-11	ELECT	4.7MF	C615	1-124-557-11	ELECT	1000MF
C255	1-124-927-11	ELECT	4.7MF	C616	1-102-030-00	CERAMIC	330PF
C256	1-106-220-00	MYLAR	0.1MF	C618	1-124-637-11	ELECT	1000MF
C257	1-101-004-00	CERAMIC	0.01MF	C619	1-124-556-11	ELECT	2200MF
C258	1-106-220-00	MYLAR	0.1MF	C620	1-102-074-00	CERAMIC	0.001MF
C260	1-106-220-00	MYLAR	0.1MF	C621	1-124-347-00	ELECT	100MF
C265	1-102-074-00	CERAMIC	0.001MF	C622	1-124-556-11	ELECT	2200MF
C266	1-102-074-00	CERAMIC	0.001MF	C623	1-124-910-11	ELECT	47MF
C401	1-124-910-11	ELECT	47MF	C624	1-124-122-11	ELECT	100MF
C403	1-124-910-11	ELECT	47MF	C625	1-124-360-00	ELECT	1000MF
C501	1-124-927-11	ELECT	4.7MF	C626	1-123-875-11	ELECT	10MF
C502	1-124-927-11	ELECT	4.7MF	C627	1-102-074-00	CERAMIC	0.001MF
C503	1-106-371-00	MYLAR	0.015MF	C631	1-123-875-11	ELECT	10MF
C504	1-101-361-00	CERAMIC	150PF	C632	1-102-074-00	CERAMIC	0.001MF
C505	1-108-794-11	MYLAR	0.0015MF	C633	1-124-927-11	ELECT	4.7MF
C506	1-106-375-12	MYLAR	0.022MF	C636	1-123-382-00	ELECT	3.3MF
C507	1-130-783-00	MYLAR	0.33MF	C801	1-126-105-11	ELECT	1000MF
C508	1-106-375-12	MYLAR	0.022MF	C802	1-102-030-00	CERAMIC	330PF
C509	1-106-220-00	MYLAR	0.1MF	C804	1-123-948-00	ELECT	22MF
C510	1-161-959-00	CERAMIC	22PF	C805	1-162-114-00	CERAMIC	0.0047MF
C511	1-108-620-11	MYLAR	0.0033MF	C806	1-106-220-00	MYLAR	0.1MF
C512	1-106-220-00	MYLAR	0.1MF	C807	1-106-395-00	MYLAR	0.15MF
C513	1-108-614-11	MYLAR	0.001MF	C810	1-124-494-00	ELECT	33MF
C514	1-106-228-00	MYLAR	0.22MF	C811	1-136-541-11	FILM	1.5MF
C515	1-124-499-11	ELECT	1MF	C812	1-124-634-11	ELECT	1MF
C516	1-108-614-11	MYLAR	0.001MF	C813	1-102-212-00	CERAMIC	820PF
C517	1-124-252-00	ELECT	0.33MF	C814 Δ	1-161-731-11	CERAMIC	0.001MF
C518	1-124-902-00	ELECT	0.47MF	C815	1-136-540-11	FILM	0.82MF
				C817	1-136-591-11	FILM	0.017MF
				C818	1-136-759-11	FILM	0.039MF
				C819 Δ	1-161-731-11	CERAMIC	0.001MF

D

The components identified by shading and mark Δ are critical for safety.
Replace only with part number specified.

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
C820	1-106-218-00	MYLAR 0.0082MF 10% 400V		D602	8-719-300-33	DIODE RU-3AM	
Δ C821	Δ 1-162-116-51	CERAMIC 680PF 10% 2KV		D603	8-719-911-55	DIODE U05G	
C822	1-102-114-00	CERAMIC 470PF 10% 50V		D604	8-719-911-55	DIODE U05G	
C823	1-106-359-00	MYLAR 0.0047MF 10% 400V		D605	8-719-911-55	DIODE U05G	
C824	1-102-212-00	CERAMIC 820PF 10% 500V		D606	8-719-300-33	DIODE RU-3AM	
C825	1-106-375-12	MYLAR 0.022MF 10% 250V		D607	8-719-300-33	DIODE RU-3AM	
C826	1-123-875-11	ELECT 10MF 20% 50V		D608	8-719-300-33	DIODE RU-3AM	
<FILTER>				D610	8-719-300-59	DIODE CTU-12S	
CF001	1-567-686-11	OSCILLATOR, CERAMIC		D611	8-719-900-26	DIODE ERD29-08J	
CF501	1-567-888-11	OSCILLATOR, CERAMIC		D612	8-719-300-59	DIODE CTU-12S	
<CONNECTOR>				D613	8-719-300-33	DIODE RU-3AM	
CN801	*1-508-765-00	PIN, CONNECTOR (5MM PITCH) 3P		D614	8-719-300-33	DIODE RU-3AM	
CND01	*1-564-884-11	PLUG, CONNECTOR 7P		D615	8-719-109-90	DIODE RD5.6ES-B3	
CND02	*1-568-418-11	CONNECTOR (FPC) 8P		D616	8-719-109-93	DIODE RD6.2ES-B2	
CND11	*1-566-660-11	CONNECTOR, HINGE (PLUG) 18P		D618	8-719-109-89	DIODE RD5.6ES-B2	
CND12	*1-564-884-11	PLUG, CONNECTOR 7P		D620	8-719-000-12	DIODE MC931	
CND18	*1-560-290-00	PLUG, CONNECTOR (2.5MM PITCH)		D622	8-719-911-19	DIODE ISS119	
CND19	*1-564-881-11	PLUG, CONNECTOR 4P		D623	8-719-911-19	DIODE ISS119	
CND21	*1-564-346-00	CONNECTOR, BOARD TO BOARD 18P		D624	8-719-911-19	DIODE ISS119	
CND23	*1-560-124-00	PLUG, CONNECTOR (2.5MM PITCH)		D627	8-719-911-19	DIODE ISS119	
CND31	*1-564-346-00	CONNECTOR, BOARD TO BOARD 18P		D630	8-719-110-39	DIODE RD15ES-B1	
CND41	*1-566-367-11	CONNECTOR, HINGE (RECEPTACLE)		D632	8-719-110-16	DIODE RD10ES-B1	
CND45	*1-564-883-11	PLUG, CONNECTOR 6P		D633	8-719-911-19	DIODE ISS119	
CND51	*1-566-367-11	CONNECTOR, HINGE (RECEPTACLE)		D801	8-719-300-33	DIODE RU-3AM	
CND64	*1-506-348-99	PIN, CONNECTOR 3P		D802	8-719-300-33	DIODE RU-3AM	
CND82	*1-508-765-00	PIN, CONNECTOR (5MM PITCH) 3P		D803	8-719-300-65	DIODE ES1F	
CND83	*1-508-786-00	PIN, CONNECTOR (5MM PITCH) 2P		D804	8-719-911-55	DIODE U05G	
CND84	*1-564-038-00	CONNECTOR PLUG, DY (MINI) 6P		D805	8-719-911-55	DIODE U05G	
CND88	*1-564-881-11	PLUG, CONNECTOR 4P		D806	8-719-945-80	DIODE ERC06-15S	
CND91	*1-560-123-00	PLUG, CONNECTOR (2.5MM) 3P		D807	8-719-945-80	DIODE ERC06-15S	
CND92	*1-560-125-00	PLUG, CONNECTOR (2.5MM) 5P		D808	8-719-900-26	DIODE ERD29-08J	
CND94	*1-560-123-00	PLUG, CONNECTOR (2.5MM PITCH)		D809	8-719-300-33	DIODE RU-3AM	
<DIODE>				<IC>			
D001	8-719-911-19	DIODE ISS119		IC001	8-759-630-06	IC M50436-614SP	
D002	8-719-911-19	DIODE ISS119		IC002	8-759-979-57	IC MB88503H-1022G	
D003	8-719-911-19	DIODE ISS119		IC003	8-759-603-41	IC M58655P	
D004	8-719-911-19	DIODE ISS119		IC004	8-759-157-40	IC UPC574J	
D005	8-719-109-71	DIODE RD3.9ES-B1		IC251	8-759-803-31	IC LA4280	
D007	8-719-109-89	DIODE RD5.6ES-B2		*4-368-683-01		SPRING; IC251	
D008	8-719-110-85	DIODE RD36ES-B4		IC401	8-752-006-12	IC CX20061	
D009	8-719-109-89	DIODE RD5.6ES-B2		IC501	8-759-970-73	IC TEA2028B	
D011	8-719-911-19	DIODE ISS119		IC502	8-759-944-57	IC TDA8170	
D012	8-719-911-19	DIODE ISS119		*4-381-724-01		HOLDER, IC; IC502	
D254	8-719-110-14	DIODE RD9.1ES-B3		IC601	8-759-946-23	IC TEA2164	
D255	8-719-000-12	DIODE MC931		*4-386-642-01		HEAT SINK, IC; IC601	
D256	8-719-000-12	DIODE MC931		IC608	8-759-982-13	IC RC7812FA	
D501	8-719-911-19	DIODE ISS119		<COIL>			
D504	8-719-911-55	DIODE U05G		L001	1-408-414-00	INDUCTOR 27UH	
D506	8-719-000-12	DIODE MC931		L501	1-408-225-00	INDUCTOR 3.3UH	
D508	8-719-911-19	DIODE ISS119		L601	*1-420-872-00	COIL, AIR CORE	
D509	8-719-911-19	DIODE ISS119		L602	1-410-396-41	FERRITE BEAD INDUCTOR	
D511	8-719-911-55	DIODE U05G		L603	1-410-396-41	FERRITE BEAD INDUCTOR	
D512	8-719-911-55	DIODE U05G		L605	1-459-442-00	COIL (WITH CORE)	
D513	8-719-109-81	DIODE RD4.7ES-B2		L606	1-421-013-00	COIL, (HORIZONTAL CHOKE) 25UH	
D591	8-719-911-19	DIODE ISS119		L607	1-408-421-00	INDUCTOR 100UH	
D592	8-719-911-19	DIODE ISS119		L801	1-459-087-00	COIL, HCC DUST CORE 3.9MMH	
D593	8-719-911-19	DIODE ISS119		L803	1-459-104-00	COIL, DUST CORE	
Δ D601	Δ 8-719-946-90	DIODE KBU4JL-6088		L804	1-408-239-00	INDUCTOR 4.7MMH	
				L805	1-459-907-11	COIL, HORIZONTAL LINEARITY	

The components identified by shading and mark Δ are critical for safety.
Replace only with part number specified.

KV-C2911D
RM-673

D

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
L806	1-459-087-00	COIL,HCC DUST CORE 3.9MMH		R026	1-249-417-11	CARBON	1K 5% 1/4W
L807	1-407-504-00	INDUCTOR 10MMH		R027	1-249-417-11	CARBON	1K 5% 1/4W
L809	*1-420-872-00	COIL, AIR CORE		R028	1-249-417-11	CARBON	1K 5% 1/4W
L810	1-421-794-21	TRANSFORMER, FERRITE (PMT)		R029	1-249-417-11	CARBON	1K 5% 1/4W
<IC LINK>				R030	1-249-425-11	CARBON	4.7K 5% 1/4W
PS601A	1-532-984-91	LINK, IC 2A		R031	1-249-429-11	CARBON	10K 5% 1/4W
PS602A	1-532-675-91	LINK, IC 1.5A		R032	1-249-417-11	CARBON	1K 5% 1/4W
<TRANSISTOR>				R033	1-249-413-11	CARBON	470 5% 1/4W
Q001	8-729-600-24	TRANSISTOR 2SC403SP-51		R034	1-249-413-11	CARBON	470 5% 1/4W
Q002	8-729-119-76	TRANSISTOR 2SA1175-HFE		R035	1-249-431-11	CARBON	15K 5% 1/4W
Q003	8-729-119-76	TRANSISTOR 2SA1175-HFE		R036	1-249-421-11	CARBON	2.2K 5% 1/4W
Q004	8-729-119-76	TRANSISTOR 2SA1175-HFE		R037	1-249-417-11	CARBON	1K 5% 1/4W
Q252	8-729-900-36	TRANSISTOR DTC124ES		R038	1-249-417-11	CARBON	1K 5% 1/4W
Q501	8-729-119-76	TRANSISTOR 2SA1175-HFE		R039	1-249-417-11	CARBON	1K 5% 1/4W
Q502	8-729-119-76	TRANSISTOR 2SA1175-HFE		R040	1-249-417-11	CARBON	1K 5% 1/4W
Q503	8-729-119-78	TRANSISTOR 2SC2785-HFE		R041	1-249-417-11	CARBON	1K 5% 1/4W
Q505	8-729-140-96	TRANSISTOR 2SD774-34		R042	1-249-417-11	CARBON	1K 5% 1/4W
Q506	8-729-140-97	TRANSISTOR 2SB734-34		R043	1-249-417-11	CARBON	1K 5% 1/4W
Q507	8-729-119-76	TRANSISTOR 2SA1175-HFE		R044	1-249-429-11	CARBON	10K 5% 1/4W
Q591	8-729-119-78	TRANSISTOR 2SC2785-HFE		R045	1-249-417-11	CARBON	1K 5% 1/4W
Q598	8-729-119-78	TRANSISTOR 2SC2785-HFE		R046	1-249-429-11	CARBON	10K 5% 1/4W
Q601	8-729-820-15	TRANSISTOR 2SB1274-RS		R047	1-249-409-11	CARBON	220 5% 1/4W
Q602	8-729-209-02	TRANSISTOR 2SD1548-LB		R048	1-249-417-11	CARBON	1K 5% 1/4W
*4-368-683-01	SPRING; Q602			R049	1-249-417-11	CARBON	1K 5% 1/4W
Q603	8-729-820-15	TRANSISTOR 2SB1274-RS		R050	1-249-433-11	CARBON	22K 5% 1/4W
Q604	8-729-378-92	TRANSISTOR 2SD789-4		R051	1-249-429-11	CARBON	10K 5% 1/4W
Q605	8-729-119-78	TRANSISTOR 2SC2785-HFE		R053	1-249-437-11	CARBON	47K 5% 1/4W
Q606	8-729-119-78	TRANSISTOR 2SC2785-HFE		R054	1-249-417-11	CARBON	1K 5% 1/4W
Q607	8-729-920-92	TRANSISTOR 2SD2096-EF		R056	1-249-440-11	CARBON	82K 5% 1/4W
Q609	8-729-378-92	TRANSISTOR 2SD789-4		R057	1-249-409-11	CARBON	220 5% 1/4W
Q801	8-729-119-78	TRANSISTOR 2SC2785-HFE		R058	1-249-409-11	CARBON	220 5% 1/4W
Q804	8-729-304-50	TRANSISTOR 2SD1941-06		R059	1-249-435-11	CARBON	33K 5% 1/4W
*4-368-683-01	SPRING; Q804			R060	1-249-436-11	CARBON	39K 5% 1/4W
Q805	8-729-119-80	TRANSISTOR 2SC2688-LK		R061	1-249-417-11	CARBON	1K 5% 1/4W
<RESISTOR>				R062	1-249-411-11	CARBON	330 5% 1/4W
R001	1-249-417-11	CARBON	1K 5% 1/4W	R063	1-249-431-11	CARBON	15K 5% 1/4W
R002	1-249-417-11	CARBON	1K 5% 1/4W	R064	1-249-429-11	CARBON	10K 5% 1/4W
R003	1-249-417-11	CARBON	1K 5% 1/4W	R067	1-249-413-11	CARBON	470 5% 1/4W
R004	1-249-417-11	CARBON	1K 5% 1/4W	R068	1-249-421-11	CARBON	2.2K 5% 1/4W
R005	1-249-411-11	CARBON	330 5% 1/4W	R069	1-249-423-11	CARBON	3.3K 5% 1/4W
R007	1-249-405-11	CARBON	100 5% 1/4W	R070	1-249-417-11	CARBON	1K 5% 1/4W
R008	1-249-417-11	CARBON	1K 5% 1/4W	R071	1-249-417-11	CARBON	1K 5% 1/4W
R009	1-249-417-11	CARBON	1K 5% 1/4W	R072	1-249-417-11	CARBON	1K 5% 1/4W
R010	1-249-413-11	CARBON	470 5% 1/4W	R073	1-249-417-11	CARBON	1K 5% 1/4W
R011	1-249-417-11	CARBON	1K 5% 1/4W	R074	1-249-417-11	CARBON	1K 5% 1/4W
R012	1-249-417-11	CARBON	1K 5% 1/4W	R075	1-249-417-11	CARBON	1K 5% 1/4W
R013	1-249-417-11	CARBON	1K 5% 1/4W	R076	1-249-417-11	CARBON	1K 5% 1/4W
R014	1-249-417-11	CARBON	1K 5% 1/4W	R077	1-249-413-11	CARBON	470 5% 1/4W
R016	1-249-429-11	CARBON	10K 5% 1/4W	R078	1-249-423-11	CARBON	3.3K 5% 1/4W
R017	1-249-417-11	CARBON	1K 5% 1/4W	R079	1-249-435-11	CARBON	33K 5% 1/4W
R018	1-249-417-11	CARBON	1K 5% 1/4W	R080	1-249-429-11	CARBON	10K 5% 1/4W
R019	1-249-433-11	CARBON	22K 5% 1/4W	R081	1-249-441-11	CARBON	100K 5% 1/4W
R020	1-249-433-11	CARBON	22K 5% 1/4W	R082	1-249-409-11	CARBON	220 5% 1/4W
R021	1-249-433-11	CARBON	22K 5% 1/4W	R083	1-249-429-11	CARBON	10K 5% 1/4W
R022	1-249-433-11	CARBON	22K 5% 1/4W	R084	1-249-413-11	CARBON	470 5% 1/4W
R023	1-249-429-11	CARBON	10K 5% 1/4W	R085	1-249-429-11	CARBON	10K 5% 1/4W
R024	1-249-429-11	CARBON	10K 5% 1/4W	R086	1-249-417-11	CARBON	1K 5% 1/4W
R025	1-249-417-11	CARBON	1K 5% 1/4W	R087	1-249-417-11	CARBON	1K 5% 1/4W
				R088	1-249-425-11	CARBON	4.7K 5% 1/4W
				R090	1-249-413-11	CARBON	470 5% 1/4W
				R091	1-249-409-11	CARBON	220 5% 1/4W
				R093	1-249-429-11	CARBON	10K 5% 1/4W
				R094	1-249-429-11	CARBON	10K 5% 1/4W

D

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
R095	1-249-409-11	CARBON	220 5% 1/4W	R545	1-249-433-11	CARBON	22K 5% 1/4W
R096	1-249-409-11	CARBON	220 5% 1/4W	R546	1-249-434-11	CARBON	27K 5% 1/4W
R097	1-249-429-11	CARBON	10K 5% 1/4W	R547	1-249-423-11	CARBON	3.3K 5% 1/4W
R098	1-249-429-11	CARBON	10K 5% 1/4W	R548	1-216-349-00	METAL OXIDE	1 5% 1W F
R099	1-215-900-11	METAL OXIDE	22K 5% 2W F	R549	1-216-454-11	METAL OXIDE	390 5% 2W F
R251	1-249-417-11	CARBON	1K 5% 1/4W	R550	1-249-440-11	CARBON	82K 5% 1/4W
R252	1-249-413-11	CARBON	470 5% 1/4W	R551	1-249-749-00	CARBON	2.2M 5% 1/4W
R253	1-249-413-11	CARBON	470 5% 1/4W	R553	1-216-869-11	METAL OXIDE	1K 5% 1W
R255	1-249-385-11	CARBON	2.2 5% 1/4W F	R554	1-249-411-11	CARBON	330 5% 1/4W
R256	1-249-385-11	CARBON	2.2 5% 1/4W F	R555	1-249-749-00	CARBON	2.2M 5% 1/4W
R260	1-249-393-11	CARBON	10 5% 1/4W	R556	1-249-405-11	CARBON	100 5% 1/4W
R261	1-249-429-11	CARBON	10K 5% 1/4W	R557	1-249-425-11	CARBON	4.7K 5% 1/4W
R262	1-249-413-11	CARBON	470 5% 1/4W	R558	1-247-895-00	CARBON	470K 5% 1/4W
R263	1-249-421-11	CARBON	2.2K 5% 1/4W	R559	1-249-427-11	CARBON	6.8K 5% 1/4W
R264	1-249-421-11	CARBON	2.2K 5% 1/4W	R560	1-249-411-11	CARBON	330 5% 1/4W
R265	1-249-425-11	CARBON	4.7K 5% 1/4W	R591	1-249-427-11	CARBON	6.8K 5% 1/4W
R266	1-249-425-11	CARBON	4.7K 5% 1/4W	R592	1-249-429-11	CARBON	10K 5% 1/4W
R401	1-249-434-11	CARBON	27K 5% 1/4W	R593	1-249-429-11	CARBON	10K 5% 1/4W
R402	1-249-435-11	CARBON	33K 5% 1/4W	R594	1-249-424-11	CARBON	3.9K 5% 1/4W
R410	1-249-413-11	CARBON	470 5% 1/4W	R595	1-249-417-11	CARBON	1K 5% 1/4W
R411	1-249-413-11	CARBON	470 5% 1/4W	R596	1-249-425-11	CARBON	4.7K 5% 1/4W
R412	1-249-413-11	CARBON	470 5% 1/4W	R597	1-249-425-11	CARBON	4.7K 5% 1/4W
R500	1-247-897-11	CARBON	560K 5% 1/4W	R598	1-249-405-11	CARBON	100 5% 1/4W
R501	1-249-413-11	CARBON	470 5% 1/4W	R599	1-249-405-11	CARBON	100 5% 1/4W
R502	1-249-409-11	CARBON	220 5% 1/4W	R602	1-216-465-11	METAL OXIDE	27K 5% 2W F
R503	1-249-410-11	CARBON	270 5% 1/4W	R603	1-216-359-00	METAL OXIDE	6.8 5% 1W F
R504	1-215-427-00	METAL	1.8K 1% 1/6W	R604	1-249-414-11	CARBON	560 5% 1/4W
R505	1-249-431-11	CARBON	15K 5% 1/4W	R605	1-215-469-00	METAL	100K 1% 1/6W
R506	1-249-428-11	CARBON	8.2K 5% 1/4W	R606	1-247-850-11	CARBON	6.2K 5% 1/4W
R507	1-247-891-00	CARBON	330K 5% 1/4W	R607	1-249-434-11	CARBON	27K 5% 1/4W
R509	1-249-424-11	CARBON	3.9K 5% 1/4W	R608	1-216-490-11	METAL OXIDE	39K 5% 3W F
R510	1-249-426-11	CARBON	5.6K 5% 1/4W	R609	1-249-401-11	CARBON	47 5% 1/4W
R511	1-249-429-11	CARBON	10K 5% 1/4W	R610	1-249-385-11	CARBON	2.2 5% 1/4W F
R512	1-247-891-00	CARBON	330K 5% 1/4W	R611	1-249-385-11	CARBON	2.2 5% 1/4W F
R513	1-249-429-11	CARBON	10K 5% 1/4W	R612	1-207-905-00	WIREWOUND	0.27 10% 2W F
R514	1-249-409-11	CARBON	220 5% 1/4W	R613	1-249-401-11	CARBON	47 5% 1/4W
R515	1-249-423-11	CARBON	3.3K 5% 1/4W	R614	1-205-758-11	WIREWOUND	100 10% 10W F
R516	1-249-408-11	CARBON	180 5% 1/4W	R616	1-249-417-11	CARBON	1K 5% 1/4W
R517	1-249-429-11	CARBON	10K 5% 1/4W	R617	1-249-411-11	CARBON	330 5% 1/4W
R518	1-249-437-11	CARBON	47K 5% 1/4W	R618	1-216-431-11	METAL OXIDE	560 5% 1W
R519	1-249-433-11	CARBON	22K 5% 1/4W	R619	1-249-429-11	CARBON	10K 5% 1/4W
R520	1-249-411-11	CARBON	330 5% 1/4W	R620	1-249-433-11	CARBON	22K 5% 1/4W
R521	1-249-405-11	CARBON	100 5% 1/4W	R621	1-249-431-11	CARBON	15K 5% 1/4W
R522	1-215-469-00	METAL	100K 1% 1/6W	R622	1-249-429-11	CARBON	10K 5% 1/4W
R523	1-249-417-11	CARBON	1K 5% 1/4W	R623	1-249-377-11	CARBON	0.47 5% 1/4W F
R524	1-249-421-11	CARBON	2.2K 5% 1/4W	R624	1-249-411-11	CARBON	330 5% 1/4W
R525	1-249-417-11	CARBON	1K 5% 1/4W	R625	1-215-865-11	METAL OXIDE	220 5% 1W
R526	1-249-409-11	CARBON	220 5% 1/4W F	R626	1-249-411-11	CARBON	330 5% 1/4W
R527	1-249-431-11	CARBON	15K 5% 1/4W	R628	1-249-393-11	CARBON	10 5% 1/4W
R528	1-249-408-11	CARBON	180 5% 1/4W	R629	1-249-411-11	CARBON	330 5% 1/4W
R529	1-249-427-11	CARBON	6.8K 5% 1/4W	R630	1-249-437-11	CARBON	47K 5% 1/4W
R530	1-249-448-11	CARBON	1.2 5% 1/4W F	R633	1-249-405-11	CARBON	100 5% 1/4W
R531	1-247-881-00	CARBON	120K 5% 1/4W	R634	1-216-430-11	METAL OXIDE	390 5% 1W
R532	1-249-417-11	CARBON	1K 5% 1/4W	R635	1-249-429-11	CARBON	10K 5% 1/4W
R534	1-247-901-11	CARBON	820K 5% 1/4W	R636	1-249-429-11	CARBON	10K 5% 1/4W
R536	1-249-749-00	CARBON	2.2M 5% 1/4W	R642	1-216-343-00	METAL OXIDE	0.33 5% 1W F
R537	1-249-434-11	CARBON	27K 5% 1/4W	R643	1-217-192-21	WIREWOUND	0.22 10% 2W F
R538	1-247-883-00	CARBON	150K 5% 1/4W	R647	1-216-485-11	METAL OXIDE	5.6K 5% 3W F
R539	1-247-883-00	CARBON	150K 5% 1/4W	R648	1-216-485-11	METAL OXIDE	5.6K 5% 3W F
R540	1-249-399-11	CARBON	33 5% 1/4W	R649	1-249-385-11	CARBON	2.2 5% 1/4W
R541	1-249-438-11	CARBON	56K 5% 1/4W	R650	1-249-417-11	CARBON	1K 5% 1/4W
R542	1-249-425-11	CARBON	4.7K 5% 1/4W	R651	1-249-405-11	CARBON	100 5% 1/4W
R543	1-249-451-11	CARBON	2.2 5% 1/4W	R652	1-247-903-00	CARBON	1M 5% 1/4W
R544	1-247-745-11	CARBON	330 5% 1/2W				

The components identified by shading and mark Δ are critical for safety.
Replace only with part number specified.

KV-C2911D
RM-673

D

V

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
R653	1-205-758-11	WIREWOUND	100 10% 10W F	C01	1-126-101-11	ELECT	100MF 20% 16V
R802	1-249-443-11	CARBON	0.47 5% 1/4W F	C02	1-124-120-11	ELECT	220MF 20% 16V
R805	1-249-448-11	CARBON	1.2 5% 1/4W F	C03	1-124-119-00	ELECT	330MF 20% 16V
R806	1-249-439-11	CARBON	68K 5% 1/4W	C04	1-124-477-11	ELECT	47MF 20% 16V
R807	1-216-869-11	METAL OXIDE	1K 5% 1W	C05	1-126-101-11	ELECT	100MF 20% 16V
R809	1-202-821-11	SOLID	1.8K 10% 1/2W	C06	1-124-120-11	ELECT	220MF 20% 16V
R810	1-202-818-00	SOLID	1K 10% 1/2W	C07	1-124-499-11	ELECT	1MF 20% 50V
R811	1-215-882-00	METAL OXIDE	22 5% 2W F	C08	1-163-097-00	CERAMIC CHIP	15PF 5% 50V
R812	1-249-494-11	CARBON	68K 5% 1/2W	C09	1-163-141-00	CERAMIC CHIP	0.001MF 5% 50V
R815	1-215-884-11	METAL OXIDE	47 5% 2W F	C10	1-163-133-00	CERAMIC CHIP	470PF 5% 50V
R816	1-215-868-00	METAL OXIDE	680 5% 1W	C11	1-163-037-11	CERAMIC CHIP	0.022MF 10% 25V
R817	1-249-417-11	CARBON	1K 5% 1/4W	C12	1-163-127-00	CERAMIC CHIP	270PF 5% 50V
R820	1-249-403-11	CARBON	68 5% 1/4W	C13	1-163-117-00	CERAMIC CHIP	100PF 5% 50V
R821	1-247-725-11	CARBON	10K 5% 1/4W F	C14	1-163-097-00	CERAMIC CHIP	15PF 5% 50V
R822	1-217-778-11	FUSIBLE	1K 5% 1W F	C15	1-163-103-00	CERAMIC CHIP	27PF 5% 50V
R825	1-216-345-11	METAL OXIDE	0.47 5% 1W F	C16	1-163-021-00	CERAMIC CHIP	0.01MF 10% 50V
R826	1-249-441-11	CARBON	100K 5% 1/4W	C17	1-163-809-11	CERAMIC CHIP	0.047MF 10% 25V
R827	1-249-429-11	CARBON	10K 5% 1/4W	C18	1-163-099-00	CERAMIC CHIP	18PF 5% 50V
R828	1-249-423-11	CARBON	3.3K 5% 1/4W	C19	1-163-809-11	CERAMIC CHIP	0.047MF 10% 25V
R829	1-249-413-11	CARBON	470 5% 1/4W	C20	1-163-125-00	CERAMIC CHIP	220PF 5% 50V
R830	1-249-429-11	CARBON	10K 5% 1/4W	C21	1-163-833-00	CERAMIC CHIP	0.068MF 25V
R831	1-249-451-11	CARBON	2.2 5% 1/4W	C24	1-126-101-11	ELECT	100MF 20% 16V
R1001	1-249-421-11	CARBON	2.2K 5% 1/4W	C25	1-124-477-11	ELECT	47MF 20% 16V
R1002	1-249-423-11	CARBON	3.3K 5% 1/4W	C27	1-163-129-00	CERAMIC CHIP	330PF 5% 50V
R1006	1-249-408-11	CARBON	180 5% 1/4W	C28	1-163-137-00	CERAMIC CHIP	680PF 5% 50V
R1007	1-249-408-11	CARBON	180 5% 1/4W	C29	1-124-927-11	ELECT	4.7MF 20% 50V
R1008	1-249-409-11	CARBON	220 5% 1/4W	C51	1-163-038-00	CERAMIC CHIP	0.1MF 25V
R1009	1-249-417-11	CARBON	1K 5% 1/4W	C52	1-163-038-00	CERAMIC CHIP	0.1MF 25V
R1010	1-249-417-11	CARBON	1K 5% 1/4W	C53	1-163-038-00	CERAMIC CHIP	0.1MF 25V
R1011	1-249-413-11	CARBON	470 5% 1/4W	C54	1-163-038-00	CERAMIC CHIP	0.1MF 25V
R1012	1-249-405-11	CARBON	100 5% 1/4W	C55	1-163-038-00	CERAMIC CHIP	0.1MF 25V
R5501	1-249-429-11	CARBON	10K 5% 1/4W	C56	1-163-038-00	CERAMIC CHIP	0.1MF 25V
R5502	1-249-417-11	CARBON	1K 5% 1/4W	C57	1-163-141-00	CERAMIC CHIP	0.001MF 5% 50V
R5503	1-249-389-11	CARBON	4.7 5% 1/4W	C58	1-163-141-00	CERAMIC CHIP	0.001MF 5% 50V
R5504	1-247-903-00	CARBON	1M 5% 1/4W	C59	1-163-141-00	CERAMIC CHIP	0.001MF 5% 50V
R5505	1-249-393-11	CARBON	10 5% 1/4W	<CONNECTOR>			
<VARIABLE RESISTOR>				CNV03	*1-508-784-00	PIN, CONNECTOR (5MM PITCH) 1P	
RV501	1-238-013-11	RES, ADJ, CARBON 2.2K		<TRIMMER>			
RV502	1-238-016-11	RES, ADJ, CARBON 10K		CT01	1-141-392-11	CAP, VAR, TRIMMER (1 GANG)	
RV601	1-238-013-11	RES, ADJ, CARBON 2.2K		<DIODE>			
<SPARK GAP>				D01	8-719-105-91	DIODE RD5.6M-B2	
SG801	1-519-063-99	DISCHARGING GAP		D02	8-719-106-79	DIODE RD13M-B1	
<TRANSFORMER>				D03	8-719-400-18	DIODE MA152WK	
T601	1-448-961-21	S.R.T		D04	8-719-105-52	DIODE RD3.6M-B2	
T602	1-424-011-11	TRANSFORMER, PULSE		D07	8-719-106-17	DIODE RD6.8M-B2	
T801 Δ	1-437-090-21	HDT		D08	8-719-106-17	DIODE RD6.8M-B2	
T802 Δ	1-439-416-11	TRANSFORMER ASSY, FLYBACK (UX-1600)		D09	8-719-400-18	DIODE MA152WK	
*****				D10	8-719-400-18	DIODE MA152WK	
*A-1347-030-A V BOARD, COMPLETE				D11	8-719-914-44	DIODE DAP202K	
*****				D12	8-719-914-44	DIODE DAP202K	
*4-380-698-01 CASE (MAIN), SHIELD, A1				<IC>			
*4-380-699-01 CASE (UPPER LID), SHIELD, A1				IC1	8-759-986-92	IC MAB8461P-W177	
*4-382-701-01 CASE (BOTTOM LID), SHIELD, A2				IC2	8-759-972-96	IC SAA5231-V6	
<CAPACITOR>				IC3	8-759-013-21	IC SDA5241	
				IC4	8-759-230-68	IC TMM2063P-70	

V

H9

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
<COIL>							
L01	1-408-411-00	INDUCTOR 15UH		R28	1-216-013-00	METAL GLAZE 33 5%	1/10W
L02	1-408-407-00	INDUCTOR 6.8UH		R29	1-216-013-00	METAL GLAZE 33 5%	1/10W
L03	1-408-407-00	INDUCTOR 6.8UH		R30	1-218-325-11	METAL GLAZE 120	1/4W
L04	1-408-407-00	INDUCTOR 6.8UH		R31	1-218-325-11	METAL GLAZE 120	1/4W
L05	1-408-407-00	INDUCTOR 6.8UH		R32	1-218-325-11	METAL GLAZE 120	1/4W
L06	1-408-407-00	INDUCTOR 6.8UH		R33	1-216-023-00	METAL GLAZE 82 5%	1/10W
<TRANSISTOR>				R34	1-216-049-00	METAL GLAZE 1K 5%	1/10W
Q01	8-729-920-92	TRANSISTOR 2SD2096-EF		R37	1-216-025-00	METAL GLAZE 100 5%	1/10W
Q02	8-729-807-50	TRANSISTOR 2SD1623R		R38	1-216-047-00	METAL GLAZE 820 5%	1/10W
Q03	8-729-900-53	TRANSISTOR DTC114EK		R40	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
Q04	8-729-271-22	TRANSISTOR 2SC2712G		R41	1-216-041-00	METAL GLAZE 470 5%	1/10W
Q05	8-729-807-50	TRANSISTOR 2SD1623R		R43	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
Q06	8-729-271-22	TRANSISTOR 2SC2712G		R44	1-216-041-00	METAL GLAZE 470 5%	1/10W
Q07	8-729-900-98	TRANSISTOR DTC143TK		R45	1-216-049-00	METAL GLAZE 1K 5%	1/10W
Q09	8-729-807-87	TRANSISTOR 2SB1295-UL6		R46	1-216-311-00	METAL GLAZE 6.8 5%	1/10W
Q10	8-729-807-87	TRANSISTOR 2SB1295-UL6		R51	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
Q11	8-729-807-87	TRANSISTOR 2SB1295-UL6		R52	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
<RESISTOR>				R53	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
JW1	1-216-295-00	METAL GLAZE 0 5%	1/10W	R54	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
JW2	1-216-295-00	METAL GLAZE 0 5%	1/10W	R55	1-216-057-00	METAL GLAZE 2.2K 5%	1/10W
JW3	1-216-295-00	METAL GLAZE 0 5%	1/10W	R56	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
JW4	1-216-295-00	METAL GLAZE 0 5%	1/10W	R57	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
JW5	1-216-295-00	METAL GLAZE 0 5%	1/10W	R58	1-216-049-00	METAL GLAZE 1K 5%	1/10W
JW6	1-216-295-00	METAL GLAZE 0 5%	1/10W	R59	1-216-056-00	METAL GLAZE 2K 5%	1/10W
JW7	1-216-295-00	METAL GLAZE 0 5%	1/10W	R60	1-216-063-00	METAL GLAZE 3.9K 5%	1/10W
JW8	1-216-295-00	METAL GLAZE 0 5%	1/10W	R61	1-216-071-00	METAL GLAZE 8.2K 5%	1/10W
JW9	1-216-295-00	METAL GLAZE 0 5%	1/10W	R62	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
JW10	1-216-295-00	METAL GLAZE 0 5%	1/10W	R63	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
JW11	1-216-295-00	METAL GLAZE 0 5%	1/10W	R64	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
JW12	1-216-295-00	METAL GLAZE 0 5%	1/10W	R65	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
JW13	1-216-295-00	METAL GLAZE 0 5%	1/10W	R66	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
JW14	1-216-295-00	METAL GLAZE 0 5%	1/10W	R67	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
JW15	1-216-295-00	METAL GLAZE 0 5%	1/10W	R68	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
JW16	1-216-295-00	METAL GLAZE 0 5%	1/10W	R69	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
JW17	1-216-295-00	METAL GLAZE 0 5%	1/10W	<VARIABLE RESISTOR>			
JW18	1-216-295-00	METAL GLAZE 0 5%	1/10W	RV01	1-238-009-11	RES, ADJ, CARBON 220	
JW19	1-216-295-00	METAL GLAZE 0 5%	1/10W	<CONNECTOR>			
JW20	1-216-295-00	METAL GLAZE 0 5%	1/10W	V1	*1-560-123-00	PLUG, CONNECTOR (2.5MM) 3P	
JW21	1-216-295-00	METAL GLAZE 0 5%	1/10W	V2	*1-560-125-00	PLUG, CONNECTOR (2.5MM) 5P	
JW22	1-216-295-00	METAL GLAZE 0 5%	1/10W	V3	*1-560-126-00	PLUG, CONNECTOR (2.5MM) 6P	
JW23	1-216-295-00	METAL GLAZE 0 5%	1/10W	V4	*1-560-123-00	PLUG, CONNECTOR (2.5MM PITCH)	
R01	1-218-326-11	METAL GLAZE 470	1/2W	V5	*1-560-290-00	PLUG, CONNECTOR (2.5MM PITCH)	
R02	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W	<CRYSTAL>			
R04	1-218-326-11	METAL GLAZE 470	1/2W	X01	1-567-162-21	OSCILLATOR, CRYSTAL	
R05	1-216-025-00	METAL GLAZE 100 5%	1/10W	X02	1-567-495-21	OSCILLATOR, CRYSTAL	
R06	1-216-049-00	METAL GLAZE 1K 5%	1/10W	X03	1-577-082-11	VIBRATOR, CERAMIC	
R07	1-216-025-00	METAL GLAZE 100 5%	1/10W	*****			
R08	1-216-037-00	METAL GLAZE 330 5%	1/10W	*1-629-745-21	H9 BOARD		
R09	1-216-091-00	METAL GLAZE 56K 5%	1/10W	*****			
R13	1-216-025-00	METAL GLAZE 100 5%	1/10W	*4-374-987-01	GUIDE, LIGHT		
R14	1-216-025-00	METAL GLAZE 100 5%	1/10W	*4-388-955-01	BRACKET (B), LIGHT GUIDE		
R15	1-216-121-00	METAL GLAZE 1M 5%	1/10W	<CONNECTOR>			
R16	1-216-055-00	METAL GLAZE 1.8K 5%	1/10W	CNH901*1-564-884-11	PLUG, CONNECTOR 7P		
R17	1-216-049-00	METAL GLAZE 1K 5%	1/10W				
R18	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W				
R19	1-216-037-00	METAL GLAZE 330 5%	1/10W				
R20	1-216-043-00	METAL GLAZE 560 5%	1/10W				
R27	1-216-013-00	METAL GLAZE 33 5%	1/10W				

H9

Ks

J1

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
<DIODE>				<IC>			
D1401	8-719-311-14	DIODE SEL1222R-CD		<TRANSISTOR>			
	*4-387-801-01	HOLDER, LED; D1401		IC201	8-759-013-17	IC TDA6200	
D1402	8-719-311-14	DIODE SEL1222R-CD		<RESISTOR>			
	*4-387-801-01	HOLDER, LED; D1402		R201	1-249-441-11	CARBON	100K 5% 1/4W
D1403	8-719-311-14	DIODE SEL1222R-CD		R202	1-249-425-11	CARBON	4.7K 5% 1/4W
	*4-387-801-01	HOLDER, LED; D1403		R203	1-249-441-11	CARBON	100K 5% 1/4W
D1404	8-719-948-31	DIODE LD-201VR		R204	1-249-435-11	CARBON	33K 5% 1/4W
	*4-387-825-01	HOLDER, LED; D1404		R205	1-249-435-11	CARBON	33K 5% 1/4W
<IC>				R206	1-249-423-11	CARBON	3.3K 5% 1/4W
IC1401	8-741-138-70	IC BX1387		R207	1-249-423-11	CARBON	3.3K 5% 1/4W
*****				R208	1-249-431-11	CARBON	15K 5% 1/4W
	*1-629-781-21	KS BOARD		R209	1-249-433-11	CARBON	22K 5% 1/4W
		*****		R210	1-249-431-11	CARBON	15K 5% 1/4W
<CAPACITOR>				R211	1-249-441-11	CARBON	100K 5% 1/4W
C202	1-124-902-00	ELECT	0.47MF 20% 50V	R212	1-249-433-11	CARBON	22K 5% 1/4W
C203	1-124-477-11	ELECT	47MF 20% 16V	R213	1-249-431-11	CARBON	15K 5% 1/4W
C204	1-124-902-00	ELECT	0.47MF 20% 50V	R214	1-249-417-11	CARBON	1K 5% 1/4W
C205	1-124-927-11	ELECT	4.7MF 20% 50V	R215	1-249-433-11	CARBON	22K 5% 1/4W
C206	1-124-477-11	ELECT	47MF 20% 16V	R216	1-249-433-11	CARBON	22K 5% 1/4W
C207	1-124-927-11	ELECT	4.7MF 20% 50V	R217	1-249-431-11	CARBON	15K 5% 1/4W
C213	1-126-233-11	ELECT	22MF 20% 50V	R218	1-249-417-11	CARBON	1K 5% 1/4W
C214	1-106-363-00	MYLAR	0.0068MF 10% 400V	R219	1-249-429-11	CARBON	10K 5% 1/4W
C217	1-106-363-00	MYLAR	0.0068MF 10% 400V	R220	1-249-425-11	CARBON	4.7K 5% 1/4W
C218	1-106-375-12	MYLAR	0.022MF 10% 250V	R221	1-249-417-11	CARBON	1K 5% 1/4W
C219	1-106-375-12	MYLAR	0.022MF 10% 250V	R222	1-249-417-11	CARBON	1K 5% 1/4W
C220	1-108-620-11	MYLAR	0.0033MF 10% 100V	R223	1-249-413-11	CARBON	470 5% 1/4W
C221	1-108-620-11	MYLAR	0.0033MF 10% 100V	R224	1-249-413-11	CARBON	470 5% 1/4W
C222	1-106-375-12	MYLAR	0.022MF 10% 250V	R225	1-249-417-11	CARBON	1K 5% 1/4W
C223	1-106-375-12	MYLAR	0.022MF 10% 250V	R226	1-249-417-11	CARBON	1K 5% 1/4W
C224	1-106-367-00	MYLAR	0.01MF 10% 400V	R227	1-249-417-11	CARBON	1K 5% 1/4W
C225	1-136-173-00	FILM	0.47MF 5% 50V	R228	1-249-417-11	CARBON	1K 5% 1/4W
C226	1-136-173-00	FILM	0.47MF 5% 50V	R229	1-249-441-11	CARBON	100K 5% 1/4W
C227	1-106-375-12	MYLAR	0.022MF 10% 250V	R230	1-249-441-11	CARBON	100K 5% 1/4W
C228	1-106-379-12	MYLAR	0.033MF 10% 250V	R231	1-249-437-11	CARBON	47K 5% 1/4W
C229	1-106-371-00	MYLAR	0.015MF 10% 400V	R232	1-249-437-11	CARBON	47K 5% 1/4W
C230	1-106-371-00	MYLAR	0.015MF 10% 400V	*****			
C231	1-124-902-00	ELECT	0.47MF 20% 50V	*A-1388-088-A	J1 BOARD, COMPLETE		
C232	1-123-875-11	ELECT	10MF 20% 50V		*****		
C233	1-102-114-00	CERAMIC	470PF 10% 50V	*1-564-893-11	PLUG, CONNECTOR 4P		
C234	1-102-114-00	CERAMIC	470PF 10% 50V	<CAPACITOR>			
C235	1-102-114-00	CERAMIC	470PF 10% 50V	C1401	1-123-875-11	ELECT	10MF 20% 50V
C236	1-102-114-00	CERAMIC	470PF 10% 50V	C1402	1-126-103-11	ELECT	470MF 20% 16V
C237	1-124-902-00	ELECT	0.47MF 20% 50V	C1403	1-163-129-00	CERAMIC CHIP	330PF 10% 50V
C238	1-102-978-00	CERAMIC	220PF 5% 50V	C1404	1-124-902-00	ELECT	0.47MF 20% 50V
C239	1-126-103-11	ELECT	470MF 20% 16V	C1405	1-136-017-00	CERAMIC CHIP	0.0047MF 50V
<CONNECTOR>				C1406	1-124-902-00	ELECT	0.47MF 20% 50V
CNK21	*1-562-370-21	CONNECTOR, BOARD TO BOARD 18P		C1407	1-124-477-11	ELECT	47MF 20% 16V
CNK25	*1-564-880-31	PLUG, CONNECTOR 3P		C1408	1-126-101-11	ELECT	100MF 20% 16V
<DIODE>				C1409	1-126-233-11	ELECT	22MF 20% 50V
D201	8-719-110-14	DIODE RD9.1ES-B3		C1410	1-123-875-11	ELECT	10MF 20% 50V
D202	8-719-110-14	DIODE RD9.1ES-B3					
D205	8-719-110-04	DIODE RD7.5ES-B3					
D206	8-719-110-04	DIODE RD7.5ES-B3					

J1

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
C1411	1-123-875-11	ELECT 10MF	20% 50V	D1419	8-719-106-23	DIODE RD7.5M-B2	
C1412	1-124-477-11	ELECT 47MF	20% 16V	D1420	8-719-106-23	DIODE RD7.5M-B2	
C1413	1-124-477-11	ELECT 47MF	20% 16V	D1501	8-719-400-18	DIODE MA152WK	
C1414	1-123-875-11	ELECT 10MF	20% 50V	D1502	8-719-400-18	DIODE MA152WK	
C1415	1-124-902-00	ELECT 0.47MF	20% 50V	D1503	8-719-400-18	DIODE MA152WK	
C1416	1-124-902-00	ELECT 0.47MF	20% 50V	D1504	8-719-400-18	DIODE MA152WK	
C1417	1-124-120-11	ELECT 220MF	20% 16V	D1505	8-719-800-76	DIODE 1SS226	
C1418	1-163-129-00	CERAMIC CHIP 330PF	10% 50V	D1506	8-719-118-15	DIODE RD36M-B	
C1419	1-163-129-00	CERAMIC CHIP 330PF	10% 50V	D1507	8-719-400-18	DIODE MA152WK	
C1421	1-124-477-11	ELECT 47MF	20% 16V				
C1423	1-106-375-12	MYLAR 0.022MF	10% 250V				
C1424	1-106-375-12	MYLAR 0.022MF	10% 250V				
C1425	1-124-902-00	ELECT 0.47MF	20% 50V	IC1401	8-752-032-27	IC CXA1114P	
C1426	1-124-902-00	ELECT 0.47MF	20% 50V	IC1402	8-759-946-32	IC TEA2014A	
C1427	1-136-017-00	CERAMIC CHIP 0.0047MF	50V	IC1501	8-759-942-16	IC TEA2031A	
C1428	1-136-017-00	CERAMIC CHIP 0.0047MF	50V				
C1429	1-136-017-00	CERAMIC CHIP 0.0047MF	50V				
C1430	1-163-129-00	CERAMIC CHIP 330PF	10% 50V				
C1431	1-124-902-00	ELECT 0.47MF	20% 50V				
C1432	1-124-902-00	ELECT 0.47MF	20% 50V				
C1433	1-126-101-11	ELECT 100MF	20% 16V				
C1436	1-163-009-11	CERAMIC CHIP 0.001MF	10% 50V				
C1437	1-163-009-11	CERAMIC CHIP 0.001MF	10% 50V				
C1438	1-124-477-11	ELECT 47MF	20% 16V				
C1439	1-124-477-11	ELECT 47MF	20% 16V				
C1501	1-123-875-11	ELECT 10MF	20% 50V				
C1502	1-123-875-11	ELECT 10MF	20% 50V				
C1503	1-108-614-11	MYLAR 0.001MF	10% 100V				
C1504	1-124-910-11	ELECT 47MF	20% 50V				
C1505	1-106-383-00	MYLAR 0.047MF	10% 100V				
C1507	1-108-620-11	MYLAR 0.0033MF	10% 100V				
C1508	1-123-875-11	ELECT 10MF	20% 50V				
C1509	1-124-499-11	ELECT 1MF	20% 50V				
C1511	1-123-875-11	ELECT 10MF	20% 50V				
C1512	1-106-363-00	MYLAR 0.0068MF	10% 400V				
C1513	1-163-105-00	CERAMIC CHIP 33PF	5% 50V				
C1514	1-106-353-00	MYLAR 0.027MF	10% 250V				
C1515	1-102-117-00	CERAMIC 820PF	10% 50V				
<CONNECTOR>							
CN1401	1-536-996-11	TERMINAL BOARD, INPUT/OUTPUT					
CNJ25	*1-564-892-41	PLUG, CONNECTOR 3P					
CNJ43	*1-564-893-11	PLUG, CONNECTOR 4P					
CNJ45	*1-566-641-11	CONNECTOR, HINGE (TAB) 18P					
CNJ51	*1-566-641-11	CONNECTOR, HINGE (TAB) 18P					
CNJ132	*1-564-893-11	PLUG, CONNECTOR 4P					
CNJ140	1-561-534-41	SOCKET 21P					
CNJ140	1-561-534-41	SOCKET 21P					
CNJ145	*1-564-895-11	PLUG, CONNECTOR 6P					
<DIODE>							
D1401	8-719-106-23	DIODE RD7.5M-B2					
D1403	8-719-106-23	DIODE RD7.5M-B2					
D1404	8-719-106-23	DIODE RD7.5M-B2					
D1405	8-719-106-23	DIODE RD7.5M-B2					
D1406	8-719-106-23	DIODE RD7.5M-B2					
D1407	8-719-400-82	DIODE MA3100M					
D1408	8-719-106-44	DIODE RD9.1M-B2					
D1409	8-719-106-44	DIODE RD9.1M-B2					
D1410	8-719-106-44	DIODE RD9.1M-B2					
D1415	8-719-106-23	DIODE RD7.5M-B2					
D1418	8-719-106-23	DIODE RD7.5M-B2					
<IC>							
IC1401	8-752-032-27	IC CXA1114P					
IC1402	8-759-946-32	IC TEA2014A					
IC1501	8-759-942-16	IC TEA2031A					
<COIL>							
L1401	1-412-240-11	INDUCTOR, WIDE BAND					
L1402	1-412-240-11	INDUCTOR, WIDE BAND					
<TRANSISTOR>							
Q1401	8-729-216-22	TRANSISTOR 2SA1162					
Q1402	8-729-216-22	TRANSISTOR 2SA1162					
Q1403	8-729-901-00	TRANSISTOR DTC124EK					
Q1404	8-729-901-00	TRANSISTOR DTC124EK					
<RESISTOR>							
JW1413	1-216-295-00	METAL GLAZE 0	5% 1/10W				
JW1452	1-216-296-00	METAL GLAZE 0	5% 1/8W				
JW1453	1-216-296-00	METAL GLAZE 0	5% 1/8W				
JW1456	1-216-295-00	METAL GLAZE 0	5% 1/10W				
JW1457	1-216-296-00	METAL GLAZE 0	5% 1/8W				
JW1458	1-216-295-00	METAL GLAZE 0	5% 1/10W				
JW1459	1-216-296-00	METAL GLAZE 0	5% 1/8W				
JW1461	1-216-296-00	METAL GLAZE 0	5% 1/8W				
JW1462	1-216-295-00	METAL GLAZE 0	5% 1/10W				
JW1463	1-216-295-00	METAL GLAZE 0	5% 1/10W				
JW1464	1-216-296-00	METAL GLAZE 0	5% 1/8W				
R1401	1-216-023-00	METAL GLAZE 82	5% 1/10W				
R1402	1-216-170-00	METAL GLAZE 68	5% 1/8W				
R1403	1-216-089-00	METAL GLAZE 47K	5% 1/10W				
R1404	1-216-041-00	METAL GLAZE 470	5% 1/10W				
R1405	1-216-222-00	METAL GLAZE 10K	5% 1/8W				
R1407	1-216-113-00	METAL GLAZE 470K	5% 1/10W				
R1408	1-216-083-00	METAL GLAZE 27K	5% 1/10W				
R1409	1-216-041-00	METAL GLAZE 470	5% 1/10W				
R1410	1-216-083-00	METAL GLAZE 27K	5% 1/10W				
R1411	1-216-041-00	METAL GLAZE 470	5% 1/10W				
R1412	1-216-089-00	METAL GLAZE 47K	5% 1/10W				
R1413	1-216-113-00	METAL GLAZE 470K	5% 1/10W				
R1414	1-216-089-00	METAL GLAZE 47K	5% 1/10W				
R1415	1-216-083-00	METAL GLAZE 27K	5% 1/10W				
R1416	1-216-083-00	METAL GLAZE 27K	5% 1/10W				
R1417	1-216-023-00	METAL GLAZE 82	5% 1/10W				
R1418	1-247-738-11	CARBON 82	5% 1/2W				
R1419	1-216-033-00	METAL GLAZE 220	5% 1/10W				
R1420	1-216-033-00	METAL GLAZE 220	5% 1/10W				
R1422	1-216-049-00	METAL GLAZE 1K	5% 1/10W				
R1423	1-216-083-00	METAL GLAZE 27K	5% 1/10W				
R1424	1-216-083-00	METAL GLAZE 27K	5% 1/10W				
R1425	1-216-049-00	METAL GLAZE 1K	5% 1/10W				
R1426	1-216-049-00	METAL GLAZE 1K	5% 1/10W				

J1

J2

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
R1427	1-216-049-00	METAL GLAZE	1K 5% 1/10W		*1-629-783-21	J2 BOARD	
R1428	1-216-113-00	METAL GLAZE	470K 5% 1/10W		*****		
R1429	1-216-113-00	METAL GLAZE	470K 5% 1/10W				
R1430	1-216-172-00	METAL GLAZE	82 5% 1/8W				
R1433	1-216-033-00	METAL GLAZE	220 5% 1/10W		<CAPACITOR>		
R1434	1-249-393-11	CARBON	10 5% 1/4W F	C1401	1-126-105-11	ELECT	1000MF 20% 35V
R1437	1-216-222-00	METAL GLAZE	10K 5% 1/8W	C1402	1-126-105-11	ELECT	1000MF 20% 35V
R1440	1-216-045-00	METAL GLAZE	680 5% 1/10W		<CONNECTOR>		
R1441	1-216-045-00	METAL GLAZE	680 5% 1/10W	CNJ23	*1-564-893-11	PLUG, CONNECTOR	4P
R1442	1-216-089-00	METAL GLAZE	47K 5% 1/10W	CNJ242	*1-564-893-11	PLUG, CONNECTOR	4P
R1443	1-216-089-00	METAL GLAZE	47K 5% 1/10W		<JACK>		
R1444	1-216-033-00	METAL GLAZE	220 5% 1/10W	J1401	1-507-806-00	JACK 1P	
R1445	1-216-095-00	METAL GLAZE	82K 5% 1/10W		<RESISTOR>		
R1447	1-216-033-00	METAL GLAZE	220 5% 1/10W	R1401	1-247-708-11	CARBON	470 5% 1/4W
R1448	1-216-033-00	METAL GLAZE	220 5% 1/10W	R1402	1-247-708-11	CARBON	470 5% 1/4W
R1452	1-216-188-00	METAL GLAZE	390 5% 1/8W	R1403	1-216-431-11	METAL OXIDE	560 5% 1W
R1453	1-216-188-00	METAL GLAZE	390 5% 1/8W	R1404	1-216-431-11	METAL OXIDE	560 5% 1W
R1454	1-216-180-00	METAL GLAZE	180 5% 1/8W		*****		
R1455	1-216-180-00	METAL GLAZE	180 5% 1/8W		MISCELLANEOUS		
R1456	1-216-025-00	METAL GLAZE	100 5% 1/10W		*****		
R1457	1-216-075-00	METAL GLAZE	12K 5% 1/10W		1-236-510-11	NETWORK, DIVIDING	
R1458	1-216-748-11	METAL GLAZE	39K 5% 1/10W	Δ.1-426-398-11	COIL, DEMAGNETIZATION		
R1459	1-216-022-00	METAL GLAZE	75 5% 1/10W	Δ.1-451-313-21	DEFLECTION YOKE (Y29FXA)		
R1501	1-216-230-00	METAL GLAZE	22K 5% 1/8W	1-452-032-00	MAGNET, DISK; 10MM φ		
R1502	1-216-232-00	METAL GLAZE	27K 5% 1/8W	1-452-094-00	MAGNET, ROTATABLE DISK; 15MM φ		
R1503	1-216-262-00	METAL GLAZE	470K 5% 1/8W	Δ.1-452-509-41	NECK ASSY, PICTURE TUBE (NA-308)		
R1504	1-216-234-00	METAL GLAZE	33K 5% 1/8W	1-466-141-11	KEY BOARD, FLAT PANEL		
R1505	1-216-230-00	METAL GLAZE	22K 5% 1/8W	1-544-146-11	SPEAKER		
R1506	1-216-262-00	METAL GLAZE	470K 5% 1/8W	1-544-147-11	SPEAKER		
R1509	1-216-254-00	METAL GLAZE	220K 5% 1/8W	Δ.1-559-346-12	CORD, POWER (WITH CONNECTOR) (AEP ONLY)		
R1510	1-216-216-00	METAL GLAZE	5.6K 5% 1/8W	Δ.1-559-912-12	CORD, POWER (WITH CONNECTOR) (AUS ONLY)		
R1511	1-216-198-00	METAL GLAZE	1K 5% 1/8W	V901 Δ.8-733-821-05	PICTURE TUBE (A68JYK10X) (AEP ONLY)		
R1512	1-216-222-00	METAL GLAZE	10K 5% 1/8W	Δ.8-733-825-05	PICTURE TUBE (A68JYK10X) (AUS ONLY)		
R1513	1-216-240-00	METAL GLAZE	56K 5% 1/8W		*****		
R1514	1-216-198-00	METAL GLAZE	1K 5% 1/8W		ACCESSORIES AND PACKING MATERIALS		
R1515	1-216-266-00	METAL GLAZE	680K 5% 1/8W		*****		
R1516	1-216-228-00	METAL GLAZE	18K 5% 1/8W	PART NO.	DESCRIPTION	REMARK	
R1517	1-216-184-00	METAL GLAZE	270 5% 1/8W	A-1470-844-A	COMMANDER ASSY (RM-673)		
R1518	1-216-222-00	METAL GLAZE	10K 5% 1/8W	3-750-214-11	MANUAL, INSTRUCTION		
R1519	1-216-250-00	METAL GLAZE	150K 5% 1/8W	*4-380-432-01	BAG, PROTECTION		
R1520	1-216-262-00	METAL GLAZE	470K 5% 1/8W	*4-394-318-01	INDIVIDUAL CARTON		
R1521	1-216-214-00	METAL GLAZE	4.7K 5% 1/8W	*4-394-321-01	CUSHION (LOWER)		
R1522	1-216-296-00	METAL GLAZE	0 5% 1/8W	*4-394-322-01	CUSHION (UPPER) (ASSY)		
R1556	1-216-216-00	METAL GLAZE	5.6K 5% 1/8W				
R1558	1-216-296-00	METAL GLAZE	0 5% 1/8W				

